


# SC-3000


USER'S MANUAL  
SC-3000

Before using your SC-3000, be sure to read this manual very carefully.  
When you are not using it, store this manual safely with the warranty certificate.  
Use only SEGA's original cartridges in this computer.


Console Unit

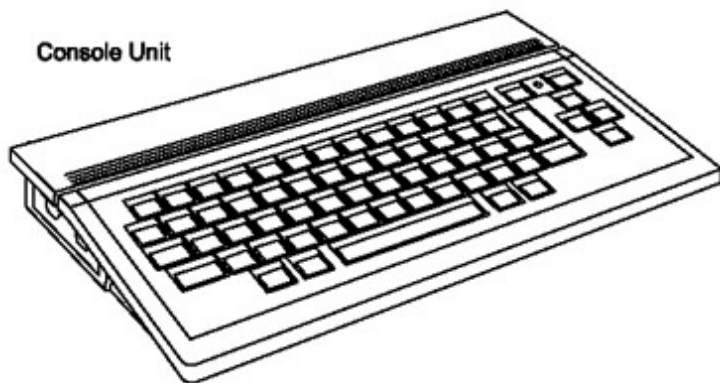


Cable

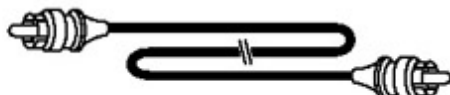


AC adapter

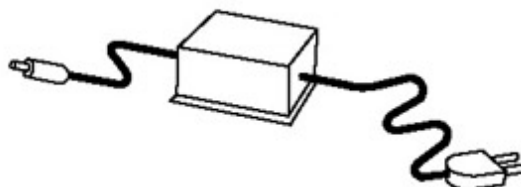

Antenna switch box

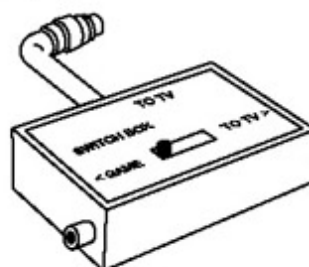



Back view of console unit

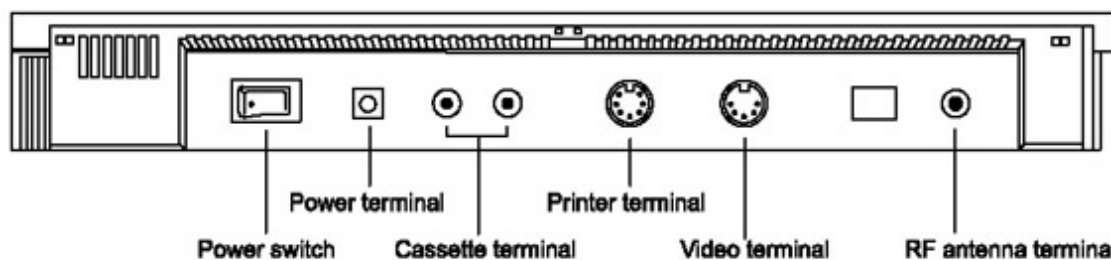


## Precautions

Turn power switch on only after making sure that everything is ready.  
If power SW is turned on before cartridge is inserted, problems may occur.


Side view of console unit

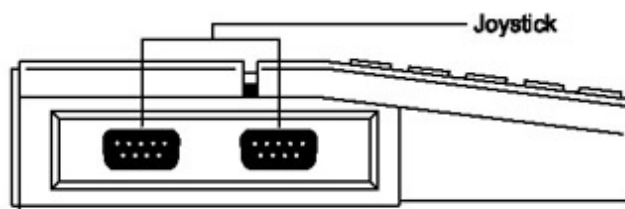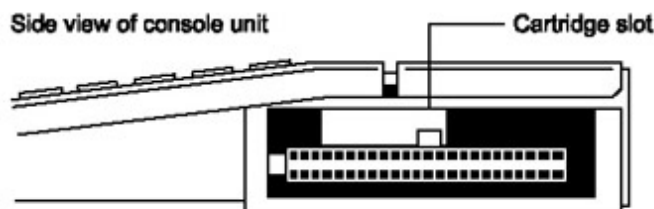


Game cartridge

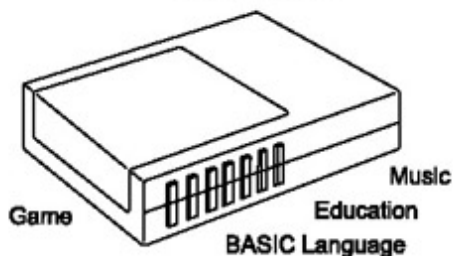

Joystick SJ-200

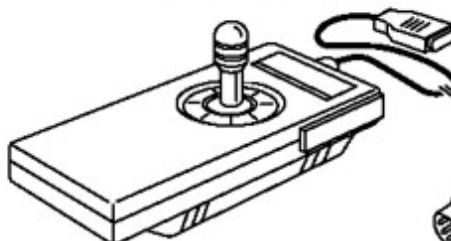


Cable for video input

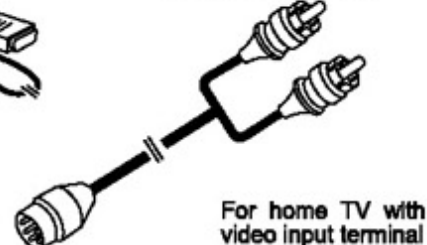


# SC-3000

## CONNECTION TO TV AND ANTENNA

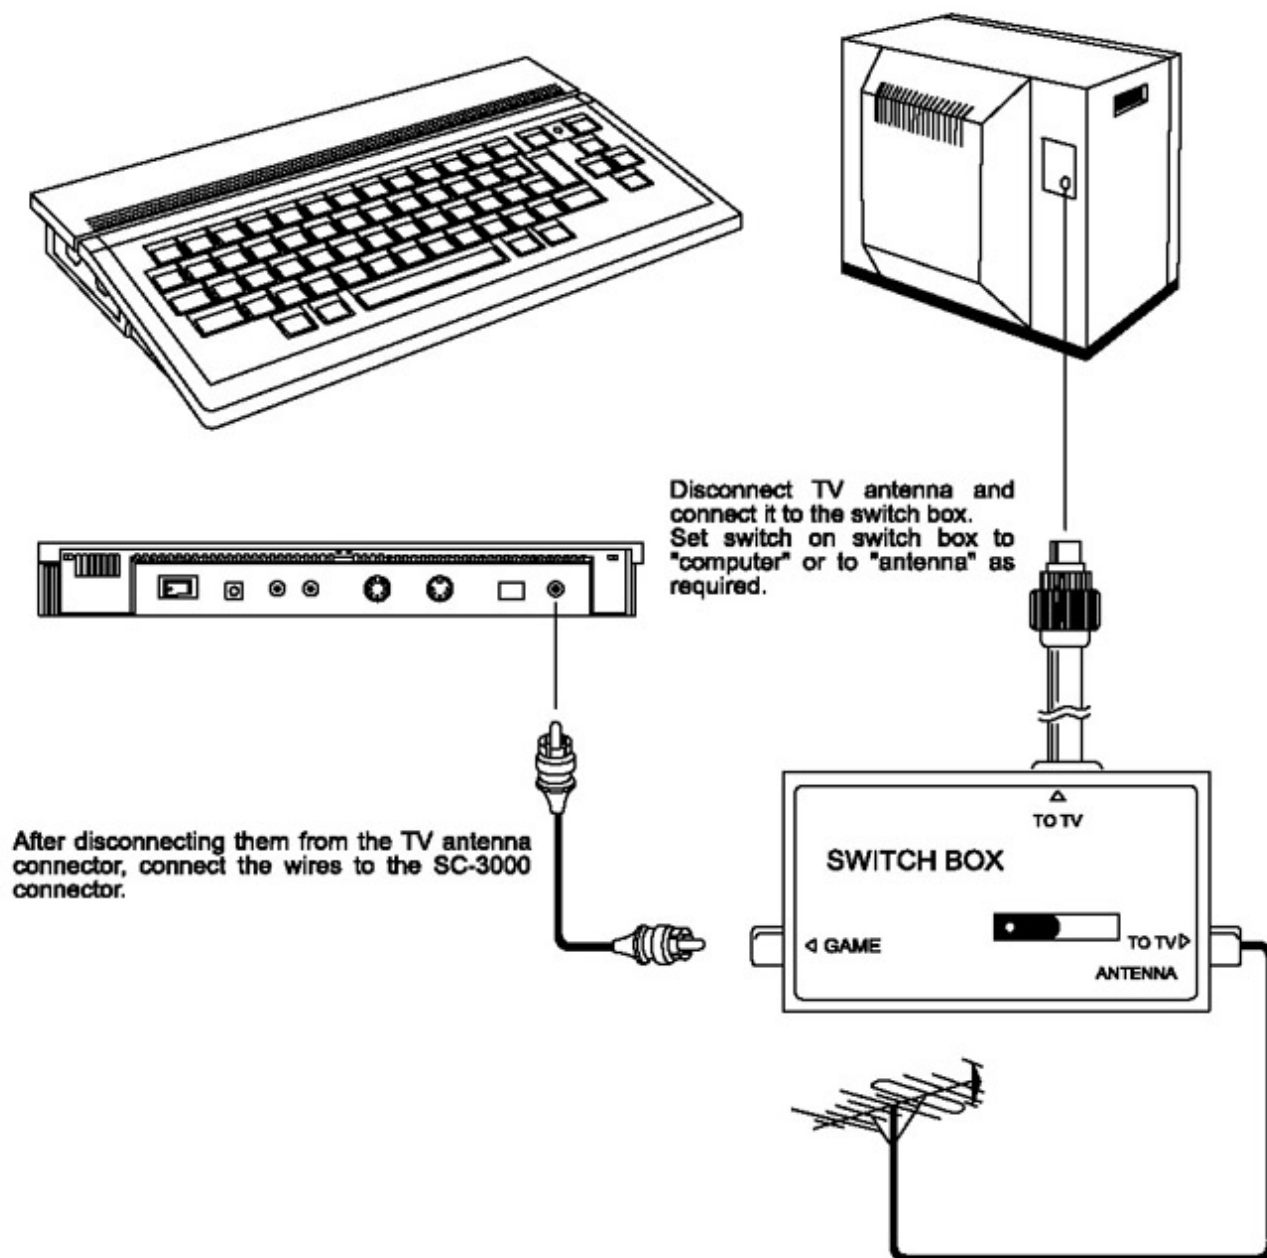


If your home TV has a video inlet, connect SC-3000 to your TV with the specified cable (separate option purchase).

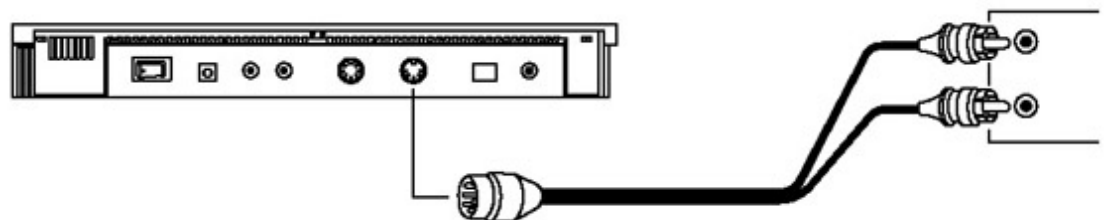


# SC-3000

## HOW TO USE SC-3000


1. Set the switch on the switch box to COMPUTER (To watch TV, set it to TV)

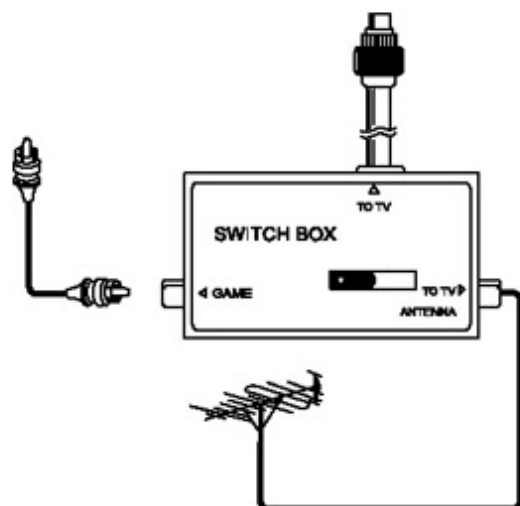


2. Turn TV channel to unoccupied channel.

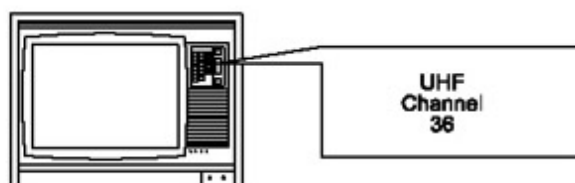


3. Insert a cartridge you want to use.  
Turn power switch on before replacing cartridges.

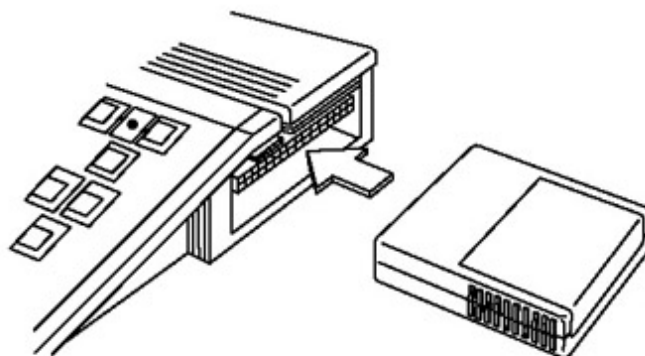

4. After all connections have been made correctly, plug in the AC adaptor, and then turn the main switch of the SC-3000 on.

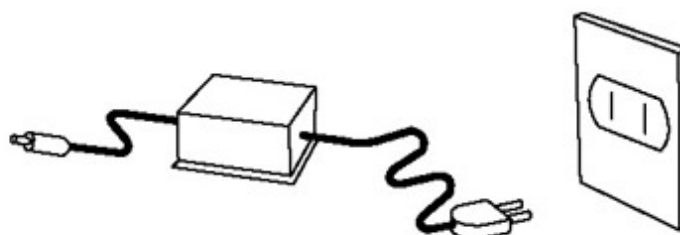


While using the game cartridge, you can not use a tape recorder. Tape recorder should be used only for BASIC or Music cartridges.

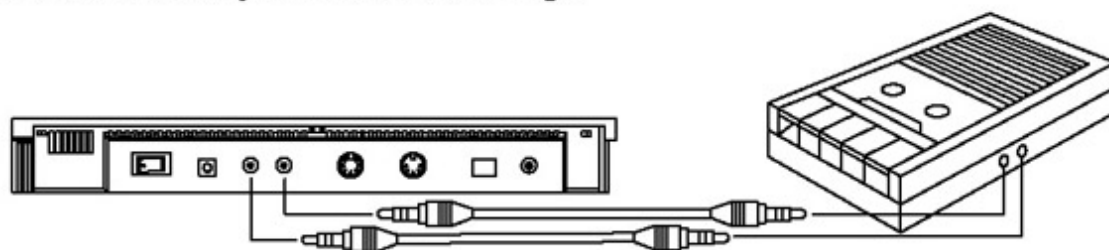

## PRECAUTIONS

The console unit of SC-3000 has a very precise mechanism. Be careful when using or handling it. When it is not in use, disconnect its AC adaptor. If any problem does occur, switch off the computer immediately, and contact the store from which you bought the computer.....

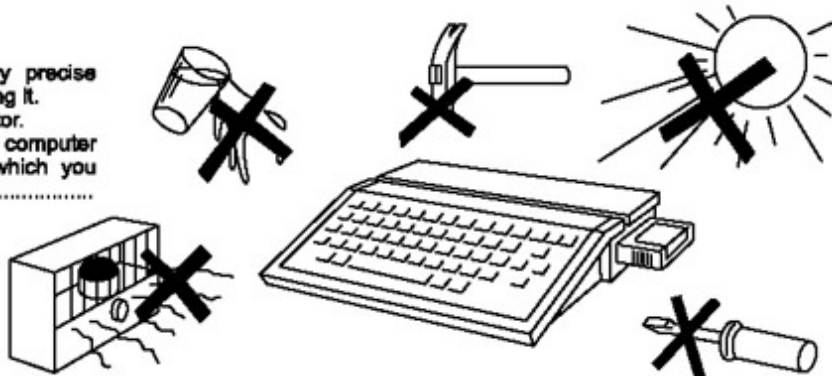

# SC-3000

## THE FOLLOWING ARE PROBLEMS WHICH MAY BE CORRECTED EASILY

Before requesting repair, check the following items.

If after checking, the problem still remains, please contact store from which you bought the computer.

### NO PICTURES ON SCREEN

- Is the power source correctly connected ?
- Is the socket outlet properly plugged in ?
- Is the power switch for the TV turned on ?
- Does the console channel transfer switch agree with the TV channel being used ?
- Make sure that the switch box setting is set to "game".
- Make sure that you have not confused the RF terminal and the video terminal.

### SCREEN FLICKERS OR THERE IS NO SOUND

- Make sure that the antenna wires are properly connected.
- Make sure that the TV channel fine adjustment has not been incorrectly changed.
- Make sure that the TV color adjustment is correctly set.
- Make sure that the game cartridges are properly inserted.

### NO GAME SOUND

- Check to see if the TV volume setting is too low.
- Check to see if the connection cables are loose or have come off.

### PICTURE ON TV SCREEN IS NOT STEADY

- Make sure that the TV synchronization SETTINGS for vertical and horizontal pictures are still correctly set.

### FRINGES APPEAR ON TV SCREEN DURING A GAME

- Turn the manual fine adjustment channel knob and adjust it until the problem disappears.

### FRINGES ON TV SCREEN DURING A PROGRAM

- Make sure that the switch box is set to "TV".
- Make sure that the TV antenna is properly connected.

### SERVICE

- If you have any questions or problems, please contact the store from which you bought the computer.



Sega Enterprises, Ltd.  
2-12, Haneda 1-chome  
Ota-ku, Tokyo 144, Japan  
Tel.: (03) 742-3171  
Tlx: J22357 SEGASTAR  
Fax: (03) 745-3246

Sega Europe, Limited  
15 Old Bond Street  
Mayfair, London W1X3DB, England  
Tel.: 01-409-2053  
Tlx: 25512 SEGAUK G  
Fax: (01) 409-2053