
Sega Master System II

SERVICE MANUAL

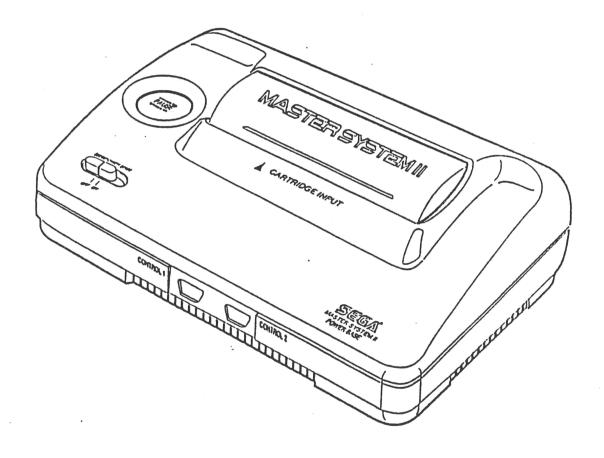

APRIL, 1991 SEGA ENTERPRISES, LTD. OVERSEAS CONSUMER PRODUCTS DIVISION

TABLE OF CONTENTS

<u>Ge</u>	<u>eneral</u>	
	Product Number and Color Specifications AC Adaptor Specifications	p. 1 p. 1
	Product Dimensions and Weight	p. 2
	Electrical Specifications	p. 2
Re	epair Procedures	
	Flowchart for Troubleshooting Fault Locations Main Unit	p. 3
	A. Servicing the main unit	p. 4-5
	B. Possible symptoms for each fault location	p. 6
	C. In the event picture appears alone without sound	p. 7
	D. In the event picture is not present	p. 7
0	E. in the event controls do not respond normally	p. 8
	Software (Card or Cartridge) Malfunctions	p. 9
	Auto Switchboxes Controller Related	p. 10 p. 10
Dia	agrams and Parts Lists	
	hematic Diagram for PAL Version	p. 11-13
	CB Parts Location Diagram for PAL Version	p. 14-18
Pa	irts List for PAL Version	p. 19-21
	hematic Diagram for RGB Version	p. 22-23
	B Parts Location Diagram for RGB Version	p. 24
Pa	rts List for RGB Version	p. 25-26

1. PRODUCT NUMBER AND COLOR SPECIFICATIONS

Territory	Model No.	Color <u>Format</u>	<u>System</u>	RF Modulator	<u>Channel</u>
America	MK-3006	NTSC	M	200-5118-01 or 200-5115	3/4
Canada	MK-3006-22	PAL	B (VV)	200-5194-02	3/4
Australia	MK-3006-03	PAL	B (VE)	200-5198	0/1
N. Zealand	MK-3006	PAL	D	200-5139	2/3
China	MK-3006-15	PAL	G	200-5086-02	3/4
Germany	MK-3006-18	PAL	G	200-5086-02	36
France	MK-3006-09	PAL	RGB	NONE	-

2. AC ADAPTOR SPECIFICATIONS

Territory	Parts <u>Model</u> <u>No.</u>		_	Plug <u>Frequency</u>	<u>Type</u>
America	MK-3006	400-5115	H-0246	AC120V <u>+</u> 10%/ 60Hz	A Type
Canada	MK-3006-22	400-5123	H-0249	AC120V <u>+</u> 10%/ 60Hz	A Type
Australia	MK-3006-03	400-5050	H0133	AC240V <u>+</u> 10%/ 50Hz	S Type
N. Zealand	MK-3006-04	400-5050	H-0133	AC240V <u>+</u> 10%/ 50Hz	S Type
China	MK-3006-15	400-5093-91	H-0158-01	AC220V <u>+</u> 10%/ 50Hz	A Type
Germany	MK-3006-18	400-5126		AC220V <u>+</u> 10%/ 50Hz	C Type

3. PRODUCT DIMENSIONS AND WEIGHT

Main Unit Dimensions

Main Unit Weight

256 (W) x 172 (D) x 81.5 (H) mm

790 g

Packed Dimensions

Packed Weight

360 (W) x 216 (W) x 125 (H) mm

1.7 kg.

Master Carton Dimensions (6 pcs./carton)

Master Carton Weight

 $450 \text{ (W)} \times 400 \text{ (D)} \times (390 \text{ (H)} \text{ mm}$

11.5 kg. $(0.072 \,\mathrm{m}^3)$

4. ELECTRICAL SPECIFICATIONS

Power

AC 220V or 240V, 50Hz

CPU

Z-80A 3.58 MHz

RAM

64 Kbit

V-RAM

128 Kbit

ROM

1Mbit

Scrolling Screen

256 x 192 dot

32 colors displayed from a palette of 64

Sprite Screen

64 sprites of 8 x8 dot or 8 x 16 dot on screen

16 colors displayed from a palette of 64

Character Patterns

Maximum of 448 types

Scrolling Directions


Horizontal, Vertical, Diagonal

Sound

Three types plus noise

REPAIR PROCEDURES

1. FLOWCHART FOR TROUBLESHOOTING FAULT LOCATIONS

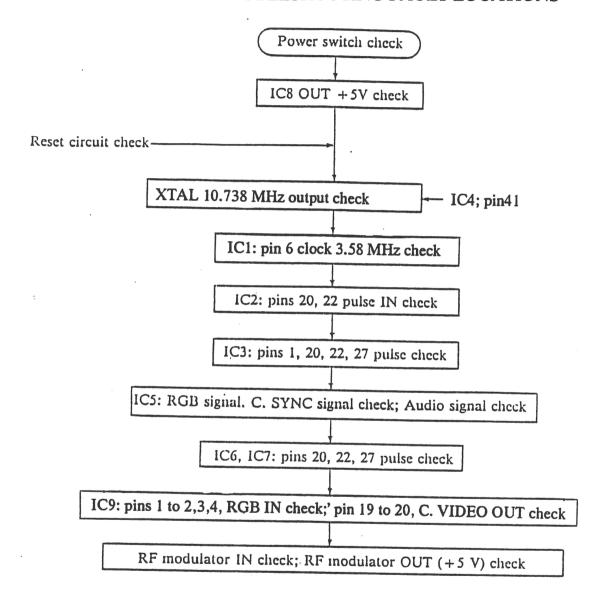

•

2. MAIN UNIT (POWER BASE)

(A). Servicing the Main Unit (Power Base)

NS=10-9s

Parts Test Procedure	Fault Location	Symptoms
1. IC 8 (LM7805) power check. (1) INPUT DC 9V (2) OUTPUT Vcc=DC5V	 IC8 (LM7805) faulty. Soldering Faulty. Short Circuit Printed circuit board (PCB) pattern is cut. POWER switch is faulty. Heat sink attachment faulty. 	LED doesn't light. No picture
2. Power check of ICs (1) Is Vcc 5V power present?	PCB pattern is cut. Soldering is faulty.	No picture. Screen is black.
3. Is reset circuit operating? (1) Use tester to measure voltage of JR. Should be 0-3.6 V (slowly rises).	Capacitor C18 faulty. Soldering faulty. Resistor R4 faulty.	No picture. Screen is black.
4. Is oscillator circuit working? (1) Pin 41 of IC4: AC 6 Vp-p; 10.738635 MHz ± 100Hz	1.OSC (53M) faulty 2. Soldering faulty 3. PCB pattern is cut 4. IC 4 is faulty 5. Frequency exceeds allowable deviation.	No picture Color may be monochromatic
(2) Pin 33 of IC 5 clock 3.579545 MHz ± 30 Hz 5 Vp-p 225.6 Ns.	5	
(3) Pin 42 of IC4 clock:4.43361875 MHz ± 30Hz		

F 01 1	1 4 5 1 6	
5. Check connectors (1) Make visual check of connector pins.	 Broken from excessive weight. Soldering faulty. PCB pattern is cut. 	 No picture Picture is monochromatic. Characters are unnatural. Controls do not respond
(2) Check for faulty soldering connections	4. Terminal plugs are dirty.	properly.
6. Check button switches. (1) Check power button switch.	 Switch is loose. Soldering faulty. PCB pattern is cut. Switch is short-circuited. 	No power voltage present. LED doesn't light. No picture. Reset occurs
(2) Check Pause button switch	 Soldering faulty PCB pattern is cut Blade is not parallel with circuit board. Switch is short-circuited. 	spontaneously. 5. Characters suddenly appear abnormal. 1. Pause doesn't operate properly.
7. Check RF modulator (1) Is OUT +5V present?	 PCB pattern is cut. Soldering is faulty. RF modulator is faulty. IN event IC9 is faulty. RF modulator is faulty. 	 No picture Picture appears dirty. No sound. Much audio noise. 1. CH3 appears, but not CH4.
(2) Check channel selector: Are CH3 and CH4 ok?		2. CH4 appears, but not CH3.

(B) Possible symptoms for each fault location

Fault Location (Contents of malfunction)	Symptom
1. When IC1 (CPU) is faulty.	1. System doesn't operate at all. No picture at all.
2. When IC2 (OS ROM) is faulty.	 Since this is the program which operates the system, no picture will appear. Depending on the case, a mosaic pattern may appear.
3. When IC3 RAM is faulty.	 Since this is the unit that temporarily records data, no picture will appear. Depending on the case, a picture may appear, but it is easily distorted.
4. When IC4 is faulty.	 Since this IC emits several control signals, no picture will appear. Controller may not respond properly. Pause, reset may not respond properly. If no oscillation is present, clock 3.58 MHz is not produced, with result that system does not operate at all; no picture will appear.
5. When IC5 is faulty.	In addition, several control signals are involved; if fault is pre- 1. sent, system will not operate and no picture will appear. 2. Even if a picture appears, characters may be distorted. 3. Colors may be improper. 4. Sound may appear alone without picture. 5. Picture may appear alone without sound.
6. When IC6, IC7 are faulty.	 Since these parts are responsible for temporarily storing color data, picture may not appear. Even if picture appears, colors may be improper. Characters may be distorted. Picture may be move sluggishly or jerkily.
- 7. When IC8 is faulty.	 Since this is +5 V stabilized current, if malfunction is present, uniform +5 V is not present; system will not operate and no picture will appear. LED doesn't light.
8. When IC9 is faulty.	Since this part converts the RGB signal to composite mode, a malfunction will result in no picture. Even if a picture appears, color may be abnormal.

(C). In the event picture appears alone without sound

Service Procedures	Fault Location
1.Is audio signal output from pin 15 of IC5? (1) MAX 300 mVp-p. (2) 20 Hz-20kHz	 Soldering is faulty. PCB pattern is cut. Q48, Q49, R47 are faulty R46 is faulty IC5 is faulty. RF modulator is faulty.

(D) In event picture is not present.

Service Procedures	Fault Location
 Is video signal present at pin 3 of RF modulaor? Is video signal output from pons 19 and 20 of IC9? Is RGB signal present at pins 1,2,3, and 4 of IC9? 	 C38, R29 is absent or faulty. Soldering faulty. PCB pattern is cut. RF modulator is faulty (when picture is present on RF). IC9 is faulty. Peripheral parts around IC9 are faulty.

R - 2.5V G 3 2 V B 4 2 2 E V

(E) In event controls do not respond normally

Symptom(s)	Fault Location(s)
 Game doesn't start. Button may not respond when pressed. Absolutely no response at all. 	 CON2 or CON3 faulty (disconnection) Soldering faulty. PCB pattern is cut. IC is faulty. EMI filter is faulty. Resistor 330 ohm is faulty. Check for continuity between CON2 and CON3 terminals and terminals of IC4.
 4. Demonstration screen doesn't appear. 5. Switch stays depressed in middle of game. 6. Switch remains fixed in one direction. 7. Starts by itself. 	 CON2 or CON3 is faulty (short-circuited) Soldering is short-circuited. PCB pattern is short-circuited. IC4 is faulty.

3. SOFTWARE

Software (Card or Cartridge) Malfunctions

Symptoms	Fault Location	
No picture. Picture remains monochromatic. Picture is mosaic pattern.	 Connector (50 pin) is dirty, disconnected, or other connection fault. Soldering faulty. Short-circult. Capacitor is missing or faulty. IC is damaged from overheating or static electricity. 	
 Characters are disrupted suddenly in middle of game. Reset occurs spontaneously in middle of game. Other abnormal symptoms appear in middle of game. 	 Connection fault at connector (50 pin). Soldering faulty. Capacitor is missing or faulty. IC runaway overheating. In the case of number 4 above, the problem may be rectified by adding a capacitor 100PF—180PF at A13 (address 13). IC is faulty. 	

4. AUTO SWITCHBOXES

Symptoms	Fault Location
1. No picture. Game picture doesn't appear. TY picture doesn't appear.	 Cable is cut or shorted. Plug is faulty. Soldering is faulty on cable connection terminal. PCB pattern is broken or interrupted. Auto-switcher unit is faulty.
2. Sound is bad. Much audio noise.	 Cable is cracked. Soldering faulty. Plug connection is faulty. Auto switcher is faulty (adjustment faulty).

5. CONTROLLER RELATED

Control pads

Symptoms	Fault Location
1. Controller does not operate. Doesn't move as it should. Game doesn't start.	 Cable is cut. Faulty connection at connector. PCB pattern is cut. Conductive rubber is faulty. Soldering faulty.
2. Moves spontaneously by itself. Switch remains depressed in one direction.	 Cable is shorted. Solder is greasy. Conductive rubber is stuck.

Parts List For Master System II PAL Version

LOCATION	PART NUMBER	DESCRIPTION

AC ADAPTOR	400-5130	AC ADAPTOR AC240-/DC 9V 0.5A (Australia)		
AC ADAPTOR	400-5126	AC ADAPTOR AC 220V/DC9V 0.5A (Europe)		
AC ADAPTOR	400-5129	AC 240V/DC9V 0.5A (UK)		
RF. MOD.	200-5091-A	RF MODULATOR UB 3622 (I-PAL)		
RF. MOD.	200-5198	RF MODULATOR VE 3423 (B-PAL VE)		
RF. MOD.	200-5086	RF MODULATOR UE 3622 (G-PAL)		
	610-5127	ASSY CONTROL PAD 3020-03		
	610-5128	ASSY RF SW BOX W/RF CABLE		
	671-1215	SUPPORT BOARD MS2 MULTI		
	601-6681	STYROFOAM MS2 MULTI L/R		
	671-1155	BOXC MS2 BLACK MULTI		
	671-1156	MA CTN MS2 MULTI		
	672-0228	INSTR MANUAL M4 JR. MULTI		
	253-6426-01	BOTTOM CASE M4 JR. BLACK PAL		
	250-5185	TOP SHIELD M4 JR.		
	250-5186	BOTTOM SHIELD M4 JR.		
	253-6425	TOP CASE M4 JR. BLACK		
	253-6352	DOOR M4 JR.		
	253-6427	PAUSE SW MR JR. BLACK		
	253-6428	POWER BUTTON M4 JR. BLACK		
PCB	171-5922A	PC BD M4JR PAL		
HOLDER	250-5187	HOLDER M4JR		
CN1	209-5023	EDGE CONN 50P PSB4D25S-4R1		
CN2	209-5017	D-SUB CONN 9P		
CN3	209-5017	D-SUB CONN 9P		
CN4	212-5004	PIN PLUG FOR DC/NP UC-0056 #1		
POWER SW	509-5240-01	SLIDE SW HSW1699-01-010		
PAUSE SW	509-5207	TACT SW SKEVAA		
PAUSE SW	510-5019	TACTILE PUSH SW SKEVAA		
IC1	315-0041	IC Z80A		
IC2	MPR-12808	IC OS 1M MASK M4 JR		
IC3	315-0298	IC UPD4168C-20		
IC4	315-5237	IC GA UPD65005C-114		
IC5	315-5246	IC CUSTOM CHIP UPD9004G		
IC6, IC7	315-0298-15	IC UPD4168C-15		
IC8	313-0092	IC MA7805UC		
IC9	313-5067	IC CXA1145P		
D1	481-0149-01	DIODE 1S2473		
D2	481-5038-01	DIODE ISR-35-100A		
LI	180-5033	PEAKING COIL 12 UH		
L2, L3	180-5032	PEAKING COIL 100UH		
R1, R2	479-0472	RES 4.7 KOHM 1/6 W		
R9	479-0472	RES 4.7 KOHm 1/6 W		
R11, R22, R24, R25	479-0102	RES 1 KOHM 1/6 W		
R4	479-0104	RES 100 KOHM 1/6 W		
	1			

R5, R6	479-0331	RES	330 OH	M	1/6 W
R7, R8	479-0331	RES	330 OH		1/6 W
R10	479-0332	RES	3.3 KOI		1/6 W
R12, R14, R16, R28	479-0822	RES	8.2 KOI		1/6 W
R13, R15, R17	479-0821	RES	820 OH	M	1/6 W
R18, R20, R29	479-0222	RES	2.2 KOI	I M	1/6 W
R19, R30	479-0152	RES	1.5 KOI	I M	1/6 W
R21	479-0202	RES	2 KOHN	1	1/6 W
R26	479-0273	RES	27 KOH	M	1/6 W
R27	479-0103	RES	10 KOH	M	1/6 W
C1, C2, C3, C4, C5, C6, C9, C10, C11, C12, C13, C25, C53	151-0126	CAP CER	82PF		50V
C7, C8, C19, C23, C45, C46, C47, C48, C49	151-0020	CAP CER			50V
C14, C17	151-0021	CAP CER			50V
C15	151-0002	CAP CER			50V
C16, C21, C22	151-0018	CAP CER		150PF	50V
C18, C32, CE1, CE2, CE3, CE4, CE5, CE6	150-0023	CAPE	10UF		16V
C20, C50	151-0072	CAP CER	51PF	50V	
C24	151-0156	CAP CER	270PF	50V	
C26, 34	151-0011	CAP CER	0.01 UF	50V	
C27, C28, C29, C39, C40, C54	151-0060	CAP CER	0.1 UF	16V	
C30	151-0075	CAP CER		180PF	50V
C31	150-0009	CAPE	1UF	50V	
C33, C35	151-0190	CAP CER	12PF	50V	
C36	151-0159	CAP CER		100PF	50V
C37	151-0172	CAP CER		50V	
C38, C42, C43	150-0047	CAPE	100UF	10V	
C41	150-0059	CAPE	100UF	16V	
C44	150-0062	CAPE	47UF	10V	
C51	151-0287	CAP CER		50V	
C52	151-0079	CAP CER		50V	
CP1, CP2, CP3, CP4, CP5, CP6, CP7, CP8, CP9, CP10, CP11, CP12, CP13	151-0170	CAP CER	AX	0.022UF	16V
FB1, FB2, FB3, FB4, FB5, FB6, FB8, JV, JG	271-0005-1			R FBA04VA	A600VB-00
FB7	270-5027	LINE FILT			
FB9, FB10	270-5035	LINE FILT	FR	FBR07HA	A 121

EM11, EM12,	271-0007	EMI FILTER STX222MB
EM13, EM14,		
EM15, EM16,		
EM18, EM21,		
EM22, EM23,		
EM24, EM25,		
EM26, EM28		
EM17, EM27	271-0006	EMI FILTER STB271KB
OSC	230-5058	OSC 53.203424M 20PPM
RA1	477-0005	RES PACK 8*4.7K (RA8-4728K)
GRS	601-0076	TML JNT CMPD 200G/TUBE (AMICOM)

\$

Parts List For Master System II RGB Version

LOCATION	PART NUMBER	<u>DESCRIPTION</u>		
	610-5127	ASSY CONTROL PAD 3020-03		
	400-5048Y	AC ADAPTOR AC220V/DC9V 1A		
	610-0130	RGB BOX FRANCE		
	671-1215	SUPPORT BOARD MS2 MULTI		
	601-6681	STYROFOAM MS2 MULTI L/R		
	671-1155	BOX MS2 BLACK MULTI		
	671-1156	MA CTN MS2 MULTI		
	672-0228	INSTR MANUAL M4 JR. MULTI		
	253-6426-02	BOTTOM CASE M4 JR. BLACK RGB		
	250-5185	TOP SHIELD M4 JR.		
	250-5186	BOTTOM SHIELD M4 JR.		
	670-0835	SEAL SER. NO. M4 JR. RGB		
	253-6425	TOP CASE M4 JR. BLACK		
	253-6352	DOOR M4 JR.		
	253-6427	PAUSE SW MR JR. BLACK		
	253-6428	POWER BUTTON M4 JR. BLACK		
PCB	171-5926A	PC BD M4JR VA1		
CN1	209-5023	EDGE CONN 50P PSB4D25S-4R1		
CN2, CN3	209-5017-01			
CN4	221-5004	D-SUB 9P ANGLE TYPE UC-0060 #2		
CN5	212-5106	PIN PLUG FOR DC/NP UC-0056#1		
POWER SW	509-5240-01	DIN CONN B-TYPE UC-0059#2		
PAUSE SW	509-5207	SLIDE SW HSW1699-01-010 TACT SW SKEVAA		
PAUSE SW	510-5019			
ICI	315-0041	TACTILE PUSH SW SKEVAA		
IC2	MPR-12808	IC Z80A		
IC3	315-0298	IC OS 1M MASK M4 JR		
IC4		IC UPD4168C-20		
IC5		IC CUSTOM CHIP G/A		
IC6, IC7	315-5246 315-0298-15	IC CUSTOM CHIP UPD9004G		
IC8		IC UPD4168C-15		
DI	313-0092 481-0149-01	IC MA7805UC		
D2		DIODE 1S2473 RADIAL		
R1, R2		DIODE ISR-35-100A RADIAL		
	479-0472	RES 4.7 KOHM 1/6 W		
R3	479-0104	RES 100 KOHM 1/6 W		
R4	479-0472	RES 4.7 KOHM 1/6 W		
R5, R6	479-0331	RES 330 OHM 1/6 W		
R7, R8	479-0331	RES 330 OHM 1/6 W		
R59	479-0152	RES 1.5 KOHM 1/6 W		
R60, R61	479-0222	RES 2.2 KOHM 1/6 W		
C1	150-0062	CAPE 47UF 10V		
C2	150-0023	CAPE 10UF 16V		
C3, C4	151-0279	CAP CER 56PF 50V		
C50	150-0059	CAPE 100UF 16V		
C51, C52	150-0060	CONN 0.22MF 16V		

C53, C54	150-0047	CAPE	100UF	10V
C55	151-0060	CAP CER	0.1UF	16V
C61	151-0075	CAP CER RA	180PF	50V
C72	151-0159	CAP CER RA	100PF	50V
CP1, CP2, CP3, CP4, CP5, CP6, CP7, CP8, CP9,	151-0170	CAP CER AX	0.022UF	16V
CE1, CE2, CE3, CE4, CE5, CE6	150-0023	CAP E	10UF	16V
FB1, FB2, FB51, FB55, FB56, FB67, JV, JG, JPR, JPG, JPB, JPS,	271-0005-1	BEADS INDUCTOR	CFBA04VA600	VB-00
X'TAL	230-0046-1	XTAL 10.738635		
EM11, EM12, EM13, EM14, EM15, EM16, EM18, EM21, EM22, EM23, EM24, EM25, EM26, EM28	271-0007	EMI FILTER	STX222MB	
EM17, EM27	271-0006	EMI FILTER STB27	1KB	
JP1	600-5061	JUMPER WIRE 5MI	M	
HOLDER	250-5187	HOLDER M4JR		
GRS	601-0076	TML JNT CMPD 200	OG/TUBE (AMI	CON)
S-LOCK	090-0012	SCREW LOCK	```	
CN2L, CN2R, CN3L, CN3R	012-0306	TAP SCR PH 3*6		
7805-HOLDER	029-0214	S-TITE SCR PH M3	*8	
CN1L, CN1R	048-0001	EYLET 3.5*7		
DINHOLDER	250-5013	DIN CONN HOLDE	R	