

A vertical rectangular inset image showing a close-up of a microscope's internal components, including lenses and a label that reads "STOFF 2".

# **ACCESS VIRUS C SERIES USER MANUAL OS5**

ENGLISH VERSION





©2002 Access Music GmbH, Germany.

VIRUS is a trademark of Access Music GmbH. All other trademarks contained herein are the property of their respective owners. All features and specifications subject to change without notice.

Written by Christoph Kemper, Uwe G. Hönig, Wiland Samolak and Marc Schlaile.

Translation by Thomas Green and Howard Scarr. Graphic Design and DTP by Babylonwaves Media.

<http://www.access-music.de>  
[info@access-music.de](mailto:info@access-music.de)

# Content

---

## IMPORTANT SAFETY REMARKS

---

## PROLOGUE

---

### INTRODUCTION

The Virus .....	14
The Amplifier Envelope .....	17
The First Filter .....	18
Filter Modulation .....	19
The Saturation Stage .....	21
The Second Filter .....	21
Filter Routing .....	24
The First Oscillator .....	25
The Second Oscillator .....	27
The Third Oscillator .....	29
The Mixer Section .....	29
The LFOs .....	30
The MOD Section .....	33
Soft Knob 1/2 .....	33
Volume and Panorama Position .....	34
Velocity .....	34
Unison Mode .....	35
The Effects .....	36
The Arpeggiator .....	38
SoundDiver Virus .....	38
More to Come .....	39

---

### CONCEPT AND OPERATION

Operating Modes .....	42
Master Clock and Midi-Clock .....	44

Handling .....	44
All about the memory .....	47
The Modulation Matrix and Soft Knobs .....	48
Random Patch Generator .....	50
Categories .....	52
The Effects Section .....	52
Audio Inputs .....	53
Internal Audio Routing .....	54
Additional functions .....	55

---

### SYNTHESIS PARAMETERS

<b>OSCILLATORS</b> .....	<b>58</b>
Oscillator-1/2/3 (Panel) .....	58
Oscillator (Edit-Menu) .....	59
<b>FILTER</b> .....	<b>63</b>
Filters (Panel) .....	63
Filter Envelope .....	64
Filter-Edit-Menu .....	65
<b>ENVELOPES</b> .....	<b>69</b>
<b>MIXER</b> .....	<b>70</b>
<b>LFO AND MODMATRIX</b> .....	<b>71</b>
LFO (Panel) .....	71
LFO (Edit Menu) .....	73
<b>ARPEGGIATOR EDIT</b> .....	<b>80</b>
<b>THE INTERNAL EFFECTS</b> .....	<b>82</b>
Distortion (Panel) .....	82
Chorus (Panel) .....	83
Chorus (Edit Menu) .....	83
Phaser (Panel) .....	84
Phaser (Edit Menu) .....	84
Delay / Reverb .....	85
Delay / Reverb (Panel) .....	86
Delay / Reverb (Menu) .....	87
Vocoder .....	92
Analog Boost .....	92
Equalizer .....	92

---

## MAIN EDIT MENU

Common .....	96
Unison Mode .....	99
Punch Intensity .....	100
Envelope Sustain Time .....	100
Analog Inputs .....	100
Follower (Envelope-Follower) .....	102
Ringmodulator .....	102
Second Output/Surround .....	103
Velocity .....	104
Sound Category .....	106
Soft Knob-1/2 .....	106

---

## MULTI MODE & SYSTEM SETUP

MULTI MODE PARAMETERS .....	110
SYSTEM .....	114
Keyboard .....	114
Input .....	116
MIDI .....	117
System .....	121

---

## THE KEYBOARD VERSIONS OF THE VIRUS

The VIRUS kc and the indigo .....	126
The Keyboard-Modes .....	128

---

## THE VOCODER OF THE VIRUS

Vocoder .....	132
The parameters of the VIRUS Vocoder .....	134
Notes about the vocoder: .....	137

---

## THE VIRUS AND SEQUENCERS

Problems Related to Parameter Control .....	144
Arrangement Dump - The Sound in the Song .....	145

---

## TIPS AND TRICKS

All abouts Inputs .....	148
About the Delay/Reverb .....	149
The Virus as an Effect Device .....	150
Envelope Follower .....	150
Oscillators .....	151
Filters .....	153
Saturation for Added Grit and Dirt .....	153
LFOs .....	154
Volume Control .....	155
Assign and the Soft Knobs .....	156
Arpeggiator .....	156
How to modulate the Vocoder parameters .....	156
MIDI .....	157
How to install Updates .....	158

---

## APPENDIX

System Exclusive Data .....	162
Parameter Descriptions .....	166
Multi Dump Table .....	178
Classes .....	180
Mod Matrix Sources .....	182
Mod Matrix Destinations .....	183
Soft Knob Destinations .....	184
MIDI Implementation Chart .....	185
FCC Information (U.S.A) .....	186
FCC Information (CANADA) .....	187
Other Standards (Rest of World) .....	187
Declaration of Conformity .....	188
Garantie Bestimmung .....	189
Warranty .....	190

---

**INDEX**

INDEX ..... 192





# Important Safety Remarks

Please read all notes carefully before you power the device up. A few fundamental rules on handling electrical devices follow.

## SET-UP

- Operate and store the device in enclosed rooms only.
- Never expose the device to a damp environment.
- Never operate or store the device in extremely dusty or dirty environments.
- Assure that air can circulate freely on all sides of the device, especially when you mount it to a rack.
- Don't set the device in the immediate vicinity of heat sources such as radiators.
- Don't expose the device to direct sunlight.
- Don't expose the device to strong vibrations and mechanical shocks.

## CONNECTIONS

- Be sure to use exclusively the included mains power supply adapter.
- Plug the device only into mains sockets that are properly grounded in compliance with statutory regulations.
- Never modify the included power cord. If its plug does not fit the sockets you have available, take it to a qualified electrician.
- Always pull the power plug out of the mains socket when you won't be using the device for prolonged periods.
- Never touch the mains plug with wet hands.
- Always pull the actual plug, never the cord, when you're unplugging the device.

## OPERATION

- Don't set beverages or any other receptacle containing liquids on the device.
- Make sure the device is placed on a solid base. Set it on a stable tabletop or mount it to a rack.
- Make sure that no foreign objects fall into or somehow end up inside the device's housing. In the event that this should occur, switch the device off and pull the power plug. Then get in touch with an authorized dealer.
- Used on its own and in conjunction with amps, loudspeakers or headphones, this device is able to generate levels that can lead to irreversible hearing damage. For this reason, always operate it at a reasonable volume level.

## MEMORY BATTERY CHANGE

The VIRUS stores its sound programs in a battery-buffered RAM. This battery (general type designation: CR2032) should be replaced every three to four years. The housing has to be opened to change the battery, so take the device to a qualified service technician. Do your part in protecting our environment and take it to a shop that disposes of batteries properly.

Before you have the battery changed, save the entire memory content of the RAM by loading it to a sequencer via "Total Dump". Be advised that RAM content is lost when the battery is swapped (see "Midi Dump TX" on page 117).

## CARE

- Do not open the device, it is not equipped with any user-serviceable parts. Repair and maintenance may only be carried out by qualified specialists.



- Use only a dry, soft cloth or brush to clean the device.
- Do not use alcohol, solvents or similar chemicals. These can damage the surface of the housing.

### **FITNESS FOR PURPOSE**

This device is designed exclusively to generate low-frequency audio signals for sound engineering-related purposes. Any other use is not permitted and automatically invalidates the warranty extended by Access Music Electronics GmbH.







# Prologue

Dear VIRUS Owner,

Congratulations on your choice, the new VIRUS. You have purchased a cutting-edge synthesizer that comes fully loaded with several revolutionary features. Here are just a few of the highlights:

The VIRUS delivers the sound characteristics and tone of traditional analog synthesizers in a previously unparalleled level of quality and handling ease. We're not kidding, the VIRUS actual delivers the authentic response of an analog synth via a digital signal processor chip, although the sound shaping and voicing options out-perform those of its historical predecessors by a considerable margin.

The VIRUS comes with up to 1024 slots for storing SINGLE sounds. These are organized in eight banks. The first two banks (A and B) are located in the RAM, so you can overwrite them with new sounds. The other six banks are "hard-wired", i.e. they're programmed into the FLASH ROM. To make use of the banks E-H you need to install the second1024.mid file first ("The 1024 sounds update" on page 158).

The VIRUS offers a maximum of 32 voices. In Multi Mode, these are allocated dynamically to sixteen simultaneously available sounds.

You have no less than three audio oscillators plus one suboscillator, a noise generator, a ring modulator, two Multi Mode filters, two envelopes, a stereo VCA, three LFOs and a saturation stage (SATURATOR) for cascade filtering, tube and distortion effects.

The VIRUS offers a veritable arsenal of effects. You have seven powerful sound-sculpting functions, including chorus, phaser and distortion, at your disposal, with each effect available separately for every sound. Thus, in 16-way MULTI mode, the VIRUS offers over 98 effects, no less!. Among them you also get a global reverb/

delay unit that lets you create high-quality reverb effects and rhythmic delay taps. Delay time can be synced up to MIDI clock.

With the benefit of two external audio inputs, the VIRUS may also serve as an FX device and signal processor that you can use creatively to come up with all kinds of effects. External signals can be processed with filter, gate and lo-fi effects, routed to the VIRUS effects section and serve as a modulation source for frequency and ring modulation.

Beyond that, you can use internal or external signals as sources for the VIRUS' on-board vocoder serve. The vocoder works with up to 32 filter bands and offers diverse manipulation and modulation options.

The three main oscillators produce 66 wave-shapes, three of which are dynamically mixable so that spectral effects are possible within the confines of a single oscillator. In conventional synthesizers, this type of effect requires several oscillators. Synchronization, frequency modulation and ring modulation between the audio oscillators delivers additional complex spectral effects that you can use for all kinds of sound shaping purposes.

The filters can be switched in series or in parallel within the voices via several options. When you switch the filters in series, the saturation stage is embedded between the filters. Consequently, an overdriven filter resonance can be re-filtered within the same voice! A maximum of six filter poles (36 dB slope!) enables radical tonal manipulations.

The LFOs feature 68 continuous variable wave-shapes each, including a triangle with variable symmetry and infinitely variable aperiodic oscillations for random variation of the controlled parameters. The LFOs are capable of polyphonic as well as monophonic oscillation. In other words, if several voices are active, the

LFOs can run independently or in sync. A number of keyboard trigger options enable you start LFO waveshapes with variable phase lengths at the beginning of a note and/or to cycle once only, like an envelope.

Next to the numerous "hard-wired" or fixed modulation configurations, you can assign three modulation sources to up to nine different modulation destinations via the Modulation Matrix. For your modulation sources, you have LFOs, velocity, the pitch bender, aftertouch, the modulation wheel, numerous MIDI controllers and other sources to choose from. For your modulation destinations, you can select any sound parameter of the VIRUS that is conducive to being remote controlled.

Up to 16 arpeggiators are available in MULTI mode. These give you countless options for creating arpeggios, which can also be synced up to MIDI clock.

Sounds and effects are patched out via six audio outputs which of course can also be used to route three stereo signals out.

In addition to its killer sounds and tone, the VIRUS was designed to deliver ultimate handling and control comfort. It is equipped with dedicated knobs and buttons for the crucial synthesizer functions, further parameters are accessible via data entry procedures. We distinguished between these two levels of expertise to enable you to create complex sounds while keeping the user interface as clear and uncluttered as possible.

In all modesty, we are especially proud of a feature we developed called Adaptive Parameter Smoothing. For the first time in the history of synthesizers equipped with memories, you can manipulate a knob or control feature without an audible step or increment. In other words, the sound does not change abruptly but SEAMLESSLY. No more zipper noises! The VIRUS re-

sponds just as smoothly as analog synthesizers did prior to the introduction of digital sound storage

And users of contemporary software sequencers will appreciate the fact that the VIRUS sends all sound shaping commands immediately in the form of MIDI Controller or Poly Pressure data (and of course accepts all of the corresponding Controller and SysEx messages). This feature lets you dynamically control the VIRUS and all its functions via computer.

Although far from complete, the features listed above give you some indication that you now own an exceptionally versatile, high-quality musical instrument that will give you plenty of joy for years to come. We certainly hope you can fully exploit the enormous potential of this fine instrument.

Have fun and enjoy!  
Your VIRUS Development Team

By the way: a rack mounting kit is optionally available for the Virus C. Feel free to get in touch with your local authorized dealer for more info.

Many thanks to:  
Ben Crosland, Maik Fliege, Thomas Green, Axel Hartmann, Uwe G. Hönig, Jörg Hüttner, Timo Kaluza, Oliver Käser, Andrea Mason, Thorsten Matuschowski, Jörg Meißner, Paul Nagel, Kai Niggemann, Rob Papen, Matt Picone, Wieland Samolak, Daniela Sauerbier, Howard Scarr, Hans-Jörg Scheffler, Shehryar Lasi, Jenny Simon, Matt Skags, Joeri Vankeirsbilck, Jay Vaughan, Jens Wegerhoff and Daniel Wewer.





# Introduction

## ■ THE VIRUS

---

This section provides deliberate, step-by-step guidelines on operating and handling the VIRUS for those of you who are new to the world of synthesizers and MIDI. The following covers basics such as how to connect the VIRUS to an AC power supply, your MIDI system and your audio system. Then we will guide you through a series of experiments designed to demonstrate the different functional groups, their control features and the tasks they execute.

After you have finished reading this section, you will be able to handle virtually all of the sound generating and sound shaping functions of the VIRUS. All of these are described in context, along with their control features. Even the majority of less significant functions, accessible via menus, are discussed here. You will find a detailed, comprehensive description of all functions of your new synthesizer in the section following this introduction.

Please keep in mind that within confines of this introduction, we are unable to impart all of the knowledge and skills in acoustics, sound synthesis and MIDI control you might desire or need to acquire. If you are keen to learn more about these subjects, you should consider becoming a regular reader of one or several of the leading trade publications in your country. Your local musical instruments dealer or more experienced musicians will be able to recommend the best magazines to you. And of course there is a wide range of books available on these subjects.

If you decide to read this section, we recommend you read it in its entirety from the start - rather than begin with a subsection that is of particular interest to you. A fitting metaphor for the basics discussed in this section might be a house where each bit of information in a sub-

section is a brick that builds on a preceding brick and interlocks with those next to it. You want your knowledge base to be a sound structure so you won't run into problems when you find one of the "bricks" is missing.

### CABLE CONNECTIONS

Before you connect the VIRUS to an AC outlet and the rest of your equipment, ensure that all of the devices are switched OFF. If your VIRUS does not have a build-in keyboard, then connect the MIDI OUT of the desired MIDI send device (keyboard, computer, hardware sequencer, etc.) with the MIDI IN of the VIRUS.

Connect the audio outputs of the VIRUS with the signal inputs of your audio system. In order to receive a signal, as a minimum you must connect the output OUT 1 R/MONO. However, we recommend you also connect the output OUT 1 L so you are able to enjoy the stereo sounds of the VIRUS.

Once you have established the desired cable connections, make sure the main volume controls of all the connected devices (VIRUS: MASTER VOLUME, located at the upper left hand of the control panel) are dialed to the lowest possible setting. Switch the devices on in the following sequence: the MIDI send device (computer, master keyboard, etc.) first, then the sound generators (VIRUS and the other signal sources), followed by the mixing console and finally the amplifier.

Now while you are sending notes on MIDI Channel 1 of the VIRUS, turn the master volumes of the connected devices up in the same order that you switched the devices on. Be sure to keep on eye on the signal level indicators of your mixing console.



## MASTER VOLUME

Controls the overall volume of the VIRUS. This control determines the volume of the signal pair piped through Output 1 before it is converted into an analog signal. This means that under normal circumstances, you should turn Master Volume all the way up because you of course want the VIRUS to deliver the most dynamic signal possible.

## LISTENING TO THE FACTORY SOUNDS

The program memory of the VIRUS was loaded with sound programs (SINGLE PROGRAMs) and sound combinations (MULTI PROGRAMs) before it left the factory. To hear the SINGLE PROGRAMs (and gain an initial impression of the possibilities your new instrument has to offer in terms of sounds), first make sure your MIDI source is sending on MIDI Channel 1.


Press the SINGLE button. A number, a letter, number and name appear in the display. These indicate the the MIDI Channel, the current Program Bank (A to D or A to H) as well as the number and name of the current sound program.

■ *Now if you play notes you should be able to hear this sound and a ♯ note (the round dot at the end of the note staff is solid black) should appear in the display every time you press a key and release a key. If you do not hear a sound but you see a half note (blank note head) check to see if you are sending on the wrong MIDI Channel.*

Press the VALUE button to call up the 128 single programs of Bank A in sequence. (The VALUE pot is inactive in this operating mode.) In order to hear the sound programs in banks B, C

and so on, simply use the PARAMETER/BANK buttons to step from one program bank to another.

You'll find that some sound programs are labeled with the abbreviations "INP" or "VOC". These use the external audio input as a signal source for the filter section (INP) or vocoder (VOC). This means that you won't hear anything until you route an audio signal into the external audio inputs.

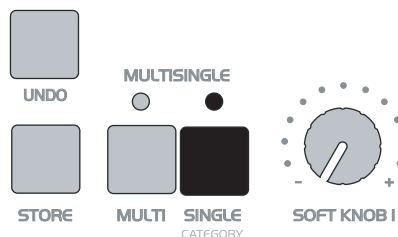

■ *Tip: You can trigger a note on the Virus by pressing both the EDIT and SYNC buttons in the OSCILLATORS section at the same time – this is the AUDITION function, which is especially useful for auditioning sounds when there is no keyboard connected to the Virus.*

Call up each of the 128 programs in Bank A in turn. You can do this either with the VALUE keys (which simply increment/decrement the program number), or by holding down the MULTI key and scrolling through programs with the VALUE knob. To try out all the other sounds in banks B to H, simply switch banks with the PARAMETER/BANK buttons.

## SOUND CATEGORIES

To help you find the type of SINGLE sound you are looking for more quickly, the Virus operating system lets you define so-called „categories“ and save this information together with each of your SINGLE sounds.

Available categories are:

Off, Lead, Bass, Pad, Decay, Pluck, Acid, Classic, Arpeggiator, Effects, Drums, Percussion, Input, Vocoder, Favourite1, Favourite2, Favourite3

Each SINGLE sound can „belong“ to two categories at the same time. Of course the categories of all the presets in Banks C to H are fixed, but for sounds in the RAM Banks (A and B) they can be defined and saved together with the program.

To search for sounds in a specific category (in SINGLE or MULTI-SINGLE mode):

Press and hold the SINGLE button. This causes the currently selected category to appear in the display, and it can be changed by stepping up or down with the Parameter buttons. Having found the category you want, do not release the SINGLE button and scroll through the sounds using the Value buttons. Release the SINGLE button when you have found what you are looking for. SINGLE sounds which do not belong to the currently selected category are simply skipped over.

## LISTENING TO THE MULTI PROGRAMS

The VIRUS not only has the capability of playing SINGLE PROGRAMS, but also combinations consisting of more than one sound simultaneously (MIDI Multi Mode). To call up the MULTI PROGRAMS, press the MULTI button and se-


lect these combination programs via the VALUE button. The VIRUS features “only” 128 MULTI PROGRAMS, so you don’t have to switch back and forth between banks the way you just did while activating single programs.

The majority of available MULTI PROGRAMS contain sound combinations that are controlled via a single MIDI channel. In these MULTI PROGRAMS, the sounds involved are allocated side-by-side (split) or on top of one another (layered) on the keyboard. In other MULTI PROGRAMS, the sounds are divided up over several MIDI channels to make it easier to work with a sequencer. If you activate a MULTI PROGRAM and hear a single sound only, then you can control this MULTI PROGRAM via several channels.

## YOUR FIRST SOUND PROGRAM

If you have never created or changed a sound on a synthesizer, we now have the pleasure of introducing you to this fascinating process.

Select the single program “C127 - START -”. Press any key on the connected keyboard. You should hear a sound that, for lack of better description, is a bit harsh or biting, but above all completely static. It should start immediately after you press a key and sustain indefinitely for as long as you hold the key down. As soon as you release the key, the sound should end abruptly. This sound is not designed to be especially pleasant; it is intended to be as neutral as possible to give you a basis from which you can begin creating or shaping your own sound.

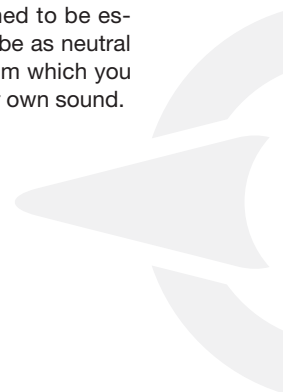


## ■ THE AMPLIFIER ENVELOPE

Long-term exposure to this sound will definitely grate on your nerves, so let's get started with changing it into a signal you might enjoy hearing, beginning with the volume characteristics. Locate the section labeled AMPLIFIER at the bottom right of the control feature panel of the VIRUS. Here you can see four pots labeled ATTACK, DECAY, SUSTAIN and RELEASE, respectively.

These controls will help you to dial in volume characteristics called an amplifier envelope and put an end to the nerve-racking drone that may remind you of one of those cheesy organs that you hear in '60s B-movie sound tracks.

Rotate the ATTACK pot while you repeatedly

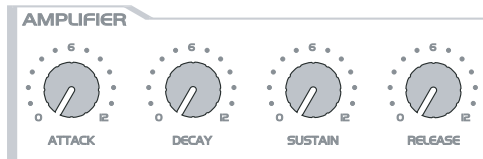

ADVANCED SIMULATED ANALOG SYNTHESIZER

engage a key to hear the note. The further you turn the pot up, the longer it takes for the sound to achieve maximum volume after the start of the note. So you can say ATTACK controls the initial volume swell of the sound.

Presumably the ATTACK pot was set to a random position before you made any adjustments. Nevertheless the volume automatically increased to the maximum level before you started rotating the pot. The reason for this is that an ATTACK value of 0 is saved in the sound program - START - and this value remains valid until you determine a new value by adjusting the position of the pot, even if you turn it ever so slightly.

Take a look at the display of the VIRUS to gain an impression of the difference between these two values. It shows two numeric values when you dial a pot: at the left you can see the value stored in the sound program and at the right, the numeric equivalent to the value determined by the current position of the pot.

■ *Always keep in mind that for a programmable synthesizer the position of the control feature or pot does not necessarily indicate the actual value of the given function. The reason for this is that when you first activate a sound program, it will reflect the programmed value. You have to adjust the control feature before the programmed value is superseded by the value you determine manually.*

Now fiddle with the DECAY pot while you repeatedly press a key to activate a note. Hold the key down for good while. You will notice that the volume, once it reaches maximum level at the end of the ATTACK phase, drops until it reaches a minimum level. The DECAY pot determines the speed, or in synthesizer jargon, the rate at which the volume decreases.

However, the DECAY level does not always drop to the minimum level; you can determine a random value between the maximum and minimum levels at which the volume remains constant. This level in turn is controlled via the SUSTAIN pot.

Whenever the SUSTAIN level is set to maximum, the volume cannot drop during the DECAY phase; in other words, in this situation the DECAY pot is ineffective.

■ *The individual functions of a synthesizer are designed to interact; many functions are dependent on other functions. In a number of cases this means that some functions are subordinate*

to others, i.e. the effectiveness of a control feature is altered, modified or even negated completely by other related functions.


The final pot, RELEASE, determines the speed or rate at which the volume decreases when you release the key: At low values the sound ends relatively abruptly, at high values, the sound fades out more gradually and softly. The length of the RELEASE phase also depends on which level the amplifier curve is at when you release the key: The lower the level, the shorter the RELEASE phase. If you dialed in a brief DECAY or SUSTAIN-TIME phase and it ended while you held the key down then of course there will not be an audible RELEASE phase.

The amplifier envelope can be described as a variable curve which, depending on the type and duration of attack, hold and release data, automatically influences an imaginary volume pot (turns it up or down). At the beginning of the note, ATTACK controls the rise or rate of increase to the maximum level. Once the maximum level is achieved, DECAY determines the fall or rate of decrease to the SUSTAIN value, which is infinitely variable between the minimum and maximum levels. The amplifier envelope may remain at this value until the end of the note, fall towards the minimum level as determined by the variable TIME value, or even rise again towards the maximum level. After the end of the note, RELEASE controls the fall or rate of decrease to the minimum level. Consequently, the control pots labeled ATTACK, DECAY, TIME and RELEASE control a speed or rate, where as SUSTAIN actually controls a level.

## ■ THE FIRST FILTER

Now we will take a look at a component of a synthesizer that is generally regarded as the most important functional unit as it enables drastic sound shaping measures: the filter - or in the case of the VIRUS, the two filters.

But first we will concentrate on just one of the two filters.

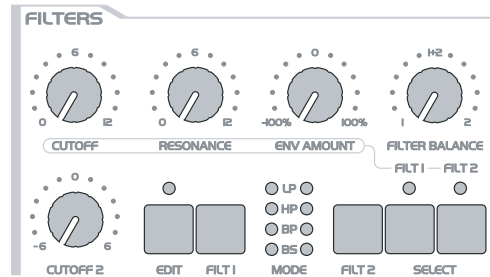


Locate the Cutoff pot (not to be confused with Cutoff 2!) in the section labeled FILTERS, directly above the section labeled AMPLIFIER. Rotate the pot to the left and right and note how the sound becomes muddier and clearer in response to the direction in which you turn the pot. (To ensure this effect and the following aural experiments are most pronounced, adjust the amplifier envelope so that the VIRUS generates a constant level while you hold a key down).

This is how a low pass filter works: it suppresses, or in technical jargon, attenuates the higher frequencies in a signal and allows the lower frequencies through. Think of the Cutoff pot as a bouncer and the VIRUS as your pub. You can tell it which frequencies to let in and which frequencies to keep out. The frequencies above the so-called cutoff or filter frequency are suppressed, those below it remain unaffected.

Now locate the FILT 1 MODE switch, which is also located in the FILTERS section. It enables you to select a filter operating mode from the four available options:

- **LP** the low pass filter we have just discussed.
- **HP** the high pass filter which works in the opposite manner of the low pass filter: It suppresses the lower frequencies in a signal and lets the higher frequencies pass.
- **BP** the band pass filter which suppresses both ends of the tonal spectrum and allows only a narrowly defined bandwidth of the original sound to pass.
- **BS** The band stop filter, band reject filter or notch filter which works in the opposite manner of the bandpass filter. It allows all of the frequencies of a signal except for a narrow frequency band around the cutoff to pass. The term “notch” is fairly descriptive; you might say this filter chops a notch out of the sound spectrum.

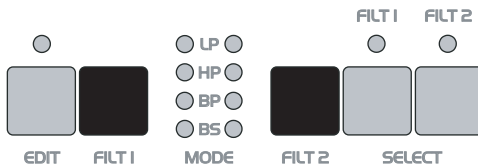

Now activate the different operating modes and rotate the Cutoff pot to get a feel for the way each filtering option works.

Along with the Cutoff pot, the RESONANCE pot is the most important control feature of a filter. The filter resonance increases the volume of the frequencies located near the cutoff frequencies and suppresses the more remote frequencies. This sound shaping feature has a striking effect - especially when used in conjunction with the low pass filter: it produces a nasal or honking type of tone which increases as you turn the

resonance up. Experiment by varying the RESONANCE setting in the different operating modes in conjunction with different Cutoff settings. You will find the effect that the RESONANCE pot achieves is markedly different for the band stop filter in comparison to the effect it has on the other filter types: as the resonance increases, the bandwidth of the notch decreases; in other words more frequencies on both sides of the filter frequency are allowed to pass.

## FILTER MODULATION

Of course we don't want to require you to execute every sound modification manually by twiddling pots. All kinds of sound modifications in the VIRUS can be executed automatically much in the way of your previous experiments with the volume controls: The amplifier envelope can be described as a variable curve which, depending on the type and duration of attack, hold and release data, automatically influences (turns it up or down) an imaginary volume pot.

Similar procedures are applicable to the filter frequencies. The FILTERS section features its own envelope, the structure of which is identical to the amplifier envelope, located directly above the amplifier envelope on the control feature panel. Much like the amplifier envelope, the filter envelope automatically “rotates” the Cutoff pot.

However there is one significant difference between the two envelopes. With the amplifier envelope, you are always dealing with an initial volume level of 0 because of course you want absolute silence prior to the beginning of a note. After the RELEASE phase, it is again

highly desirable that your box is silent. With the filter envelope, the situation is somewhat different: It always starts at the Cutoff value that you determined manually. And it is definitely not always desirable that the filter frequency is brought to the maximum level.



Consequently, you need a tool that limits the effective range of the filter. This is why we equipped the VIRUS with a control labeled ENV AMOUNT (short for Envelope Amount). When the pot is turned counter-clockwise to the far left, the filter has no effect on the cutoff frequency; the further you turn the pot to the right, the greater the effect the filter envelope has on the filter frequency. The maximum level of the envelope may lie outside the audible range when the filter has already been partially opened via the Cutoff pot or was manipulated via other control options. In extreme cases where the filter is already completely open, the filter frequency cannot be increased regardless of how high you set the ENV AMOUNT.

Go ahead and spend some experimenting with different ENV AMOUNT, Cutoff and RESONANCE settings for the diverse filter operating modes. Also try varying the settings for the amplifier envelope. You will find that with just these few parameters you are able to come up with a vast amount of sound settings. If you are among the many musicians who are associative listeners, you might say many of the settings produce sounds reminiscent of stringed-instruments; some sound picked, plucked or snapped, others sound bowed.

For your next experiment set the amplifier envelope so that you hear a constant level when you press and hold a note. Now deactivate the filter envelope by setting the ENV AMOUNT to 0. Set Filter-1/Filter-1 to low pass mode and decrease the filter frequency until you just barely hear a muddy signal when you play notes in the mid-range.

Now play a few higher and lower notes. You will find that the lower notes have a greater overtone content, whereas the higher notes sound muddier and their volume decreases until the notes are completely inaudible. You might already suspect what this is all about: As the notes are transposed ever lower, more portions of the signal fall below the cutoff frequency, whereas with the notes that are transposed ever higher, more portions of the signal rise above the cutoff frequency and subsequently are suppressed until the root note and the last audible portion of the signal is silenced.

To avoid this effect - or if desirable, to amplify it - you have the option of influencing the cutoff frequency via the pitch of the note, i.e. the note number. The degree of influence is determined by the KEY FOLLOW. You find this parameter within the Filter Edit menu.

Please note that KEY FOLLOW is a so-called bipolar parameter: Its control range is not limited to the positive end of the spectrum (0 to a maximum of 127). Bipolar controls effect negative values as well, in this case from the negative maximum of -64 through 0 on to the positive maximum of +63. Consequently, if this pot is set to the center position (12 o'clock or 0) the pitch of the notes corresponding to the keys on your keyboard has no effect on the cutoff frequency. If on the other hand you turn the KEY FOLLOW pot clockwise towards the positive control range, you will find that the filter opens up increasingly as the pitch increases with higher notes. At lower notes, the filter closes down again. If you turn the pot counter-clockwise to-

wards the negative control range, the KEY FOLLOW effect is reversed. With the VIRUS, you will encounter this feature - intensity control via a bipolar parameter - again in conjunction with other modulation sources and targets.

Now experiment as much as you like with different KEY FOLLOW settings and tune the settings via the Cutoff pot. And remember to bring all of the other parameters you have encountered thus far into play.

## ■ THE SATURATION STAGE

In the signal chain of the VIRUS, Filter-1 is followed by a saturation stage. It enables you to add overtones to the filtered signal via distortion. Locate and press the button labeled EDIT in the FILTERS section.

```

1 SATURATION
Curve      Off ◀
  
```

The display will read "SATURATION CURVE OFF", which means exactly what it says. With the VALUE buttons or the VALUE pot, you can now select from a number of saturation/distortion curves. Next to the distortion curves, the SATURATION stage offers further DSP effects such as the shaper, rectifier and filter. These are explained in detail in the section on the SATURATION stage.

At this point we would like to mention the OSC VOL pot in the MIXER section. The portion of the control range from the far left to the center

position (12 o'clock) determines the volume of the filter section's input signal. The portion of the control range located to the right of the center position (12 o'clock) does not achieve any increase in volume; it simply intensifies the degree of saturation or distortion. This effect is only achieved when you have activated a saturation curve. The intensity of the remaining available DSP effects is also controlled via the OSC VOL knob.



Feel free to experiment with the diverse saturation curves and be sure to vary the OSC VOL settings. Note how the different Cutoff and RESONANCE settings influence the saturation curve.


## ■ THE SECOND FILTER

You probably noticed that by adding a bit of saturation to the signal you can come up with a pretty heavy, aggressive sound - especially with a low filter frequency level and high resonance. You're probably thinking these types of sounds could do with some more filtering. We had the same idea, which is one of the reasons why we equipped the VIRUS with another filter per voice.

The technical design of this second filter is identical to the first, so we won't discuss it in as much detail as we did the first filter. However, there are few differences in how you handle the second filter:

- Only two control features of the VIRUS are allocated exclusively to Filter-2: Cutoff-2 and FILT 2 MODE.
- The RESONANCE, ENV AMOUNT and KEY FOLLOW pots can be allocated to either of the two filters or both simultaneously. Use the two SELECT-buttons located at the far right of the FILTERS section to select the desired operating mode. For instance, if you press the FILT 2 SELECT button, then the values you set via the RESONANCE, ENV AMOUNT and KEY FOLLOW pots apply exclusively to Filter-2. The corresponding parameters of Filter-1 remain unaffected. On the other hand, if you press both SELECT buttons at the same time, the values that you dial in apply by the same measure to Filters 1 and 2.

In the sound program we are using for our experiments, the LEDs of both buttons are illuminated, so that all adjustments to the given parameters affect both filters. However, you have yet to actually hear the effect of Filter-2 on the signal because it is mixed out of the audible signal path of the VIRUS.

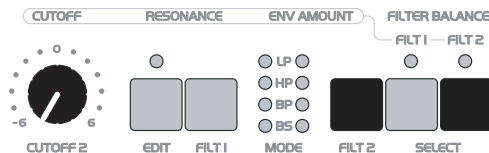

Before we get started with our next experiment, deactivate SATURATION, set the ENV AMOUNT of the filter envelope to zero and set Cutoff 2 to the center position (12 o'clock) so that Filter-2 always has the same cutoff frequency as Filter-

1 (we'll explain Cutoff 2 a bit later). Set Cutoff to a medium or middle value and turn the RESONANCE pot counter-clockwise to the far left to achieve a relatively muddy sound. Now locate the FILTER BALANCE pot at the upper right hand of the control panel and rotate it from the left to the right. You will note the sound becomes muddier as you turn the pot towards the center position (12 o'clock) and that the sound is somewhat brighter at the far right of the control range than at the far left.

The reason for this effect is that when you turn the FILTER BALANCE pot to the far left, only Filter-1 is audible. When you rotate the pot to the right, Filter-2 is blended in so that it follows Filter-1 in the signal chain. When you turn the FILTER BALANCE pot clockwise, Filter-1 is blended out of the signal chain until at the far right position only Filter-2 is active and audible.

Each filter in the VIRUS normally features 2 poles. However in the FILTER ROUTING operating mode SER 6, Filter-1 operates with 4 poles, so the signal patched through Filter-1 (FILTER BALANCE to the far left) is trimmed more drastically than when it is routed through Filter-2 (FILTER BALANCE to the far right). When you set the FILTER BALANCE pot to the center position (12 o'clock) - as we mentioned before - the two filters are routed in series, which means they respond as if they were a single filter with 6 poles and consequently a great deal of slope. This is why the input signal is trimmed substantially when you set the pot to this position.

Experiment with the diverse FILTER BALANCE positions to get a feel for the different degrees of slope. Rotate the Cutoff pot or activate the filter envelope (for both filters!) to hear the filters in action.

The Cutoff 2 pot is a special feature: It controls the cutoff frequency of the second filter, but is subordinate to the Cutoff pot located above it.



In other words, at the center position (12 o'clock) the manually selected frequency of Filter-2 is identical to that of Filter-1. When you rotate the pot to the left the cutoff frequency level of Filter-2 is increased relatively to Filter-1, when you turn to pot to the right the cutoff frequency level is decreased relatively. Now when you adjust the Cutoff pot, you adjust the cutoff frequency of both filters by the same measure! This feature lets you determine a difference in values in the filter frequencies (called an offset) via the Cutoff2 pot which remains constant whenever you adjust the Cutoff pot.

Yet another experiment in which you can come up new filtering characteristics that are typical of the VIRUS:

Set the FILTER BALANCE pot to the center position (12 o'clock) and Cutoff 2 to the maximum level. The FILTER ROUTING operating mode must remain SER 6. Set Cutoff and RESONANCE to a middle value and select a clearly audible SATURATION curve.

Now you can filter this complex signal produced by a combination of the saturation stage and the Filter-1 yet again. Rotate the Cutoff 2 pot slowly towards the center position (12 o'clock). You can hear how Filter-2 gradually modifies the distorted signal. You can set a RESONANCE value for Filter-2 if you press the FILT 2 SELECT button and rotate the RESONANCE pot to the desired position. Set the Cutoff 2 pot to a position to the right of the center position. This configuration can be described as a complex non-linear filter set up where the cutoff frequency is controlled via the Cutoff pot. You can dial in a wide range of sound-shaping option via Cutoff 2. Also try modifying the resonances of both filters as well as the SATURATION curve to come up with different filtering characteristics.

Now experiment with the diverse filter modes and listen closely to the effect of the parameters RESONANCE, ENV AMOUNT and KEY FOLLOW in conjunction with the SELECT button. Please also keep in mind that the chances of choking a sound off are substantially greater when you are using both filters: For instance, if the first filter is used as a low pass with a low cutoff frequency and the second as a high pass with a high cutoff frequency, the VIRUS will not generate an audible signal when you set the FILTER BALANCE pot to the center position (12 o'clock).

## ■ FILTER ROUTING


---

The final parameter we'll discuss for the time being is FILTER ROUTING. This feature offers several filter routing options which allow you to operate the filters in series, i.e. patch one after the other in the signal chain, or in parallel, which means side by side in the signal chain:

- **SER-4** The filters are switched in series; with two poles each (12dB/Okt.), both filters have the same slope for a total of four filter poles (24dB/Okt.).
- **SER-6** The filters are switched in series; Filter-1 has four poles (24dB/Okt.), Filter-2 has two poles (12dB/Okt.) so the overall slope is equivalent to six poles (36dB/Okt.).
- **PAR-4** The filters are switched in parallel and feature two poles each (12dB/Okt.).
- **SPLIT** The filters are switched in parallel and feature two poles each (12dB/Okt.). Additionally, they receive independent input signals (more on this later). Each of the two oscillators routes its signal into one of the two filters whose signals can be spread in the panorama via a parameter called UNISON Pan Spread.

■ *Regardless of which FILTER ROUTING option you chose, the SATURATION stage is always post-Filter-1, i.e. after Filter in the signal chain.*



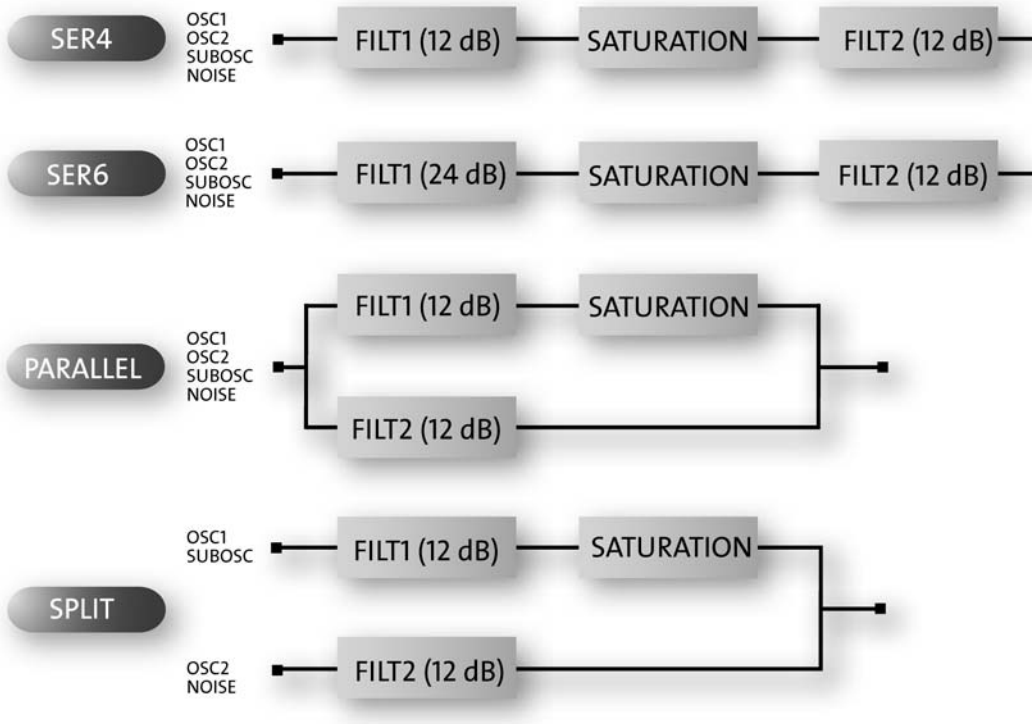

## ■ THE FIRST OSCILLATOR

To this point, we have turned our attention exclusively to sound-shaping functions and have always started with the same basic material: a so-called sawtooth wave. This waveshape is especially well-suited as a neutral starting point as it contains all of the so-called natural scale of overtones, which give the filter plenty of quality material to work with.

The filters, with the exception of a notch filter or band stop (BS), trim the far reaches of the tonal spectrum, so for instance a signal sounds muddier after it has been routed through a low pass filter. You can well imagine that this type of sound modification is substantial but insufficient for shaping more subtle differences in tone. For instance the tone of a trumpet differs significantly from that of a saxophone even though no one would seriously claim that either of the instruments has a muddier tone than the other.

What you need is a sound-shaping option for the portion of a signal that a filter allows to pass. And of course you also need a tool for determining the pitch of a signal. In synthesizers, both of these tasks are executed by oscillators. They oscillate at a variable pitch that can be modulated and they also generate different waveshapes which give the filters a wider variety of material to work with.


The VIRUS is has two main oscillators and a so-called suboscillator. Let's take a look at Oscillator 1, the one you have already heard in action during your experiments so far:

Start with the same basic sound you used at the very beginning. Now modify the amplifier envelope to make the sound less grating, but hold back on any other filter or saturation modifications for the moment so you can hear the pure, unadulterated oscillator.

Oscillator 1, the one you have already heard in action during your experiments so far:

Start with the same basic sound you used at the very beginning. Now modify the amplifier envelope to make the sound less grating, but hold back on any other filter or saturation modifications for the moment so you can hear the pure, unadulterated oscillator.

Press the OSC 1 button in the OSCILLATORS section to enter the edit pages for oscillator 1. Directly above this button are the SHAPE and WAVE SEL/PW controls which determine the waveform and therefore the basic sound of oscillator 1. The SHAPE parameter is currently set to the exact center (value 64), and if you look at the panel directly above the SHAPE control, you will see a symbol representing a sawtooth wave.

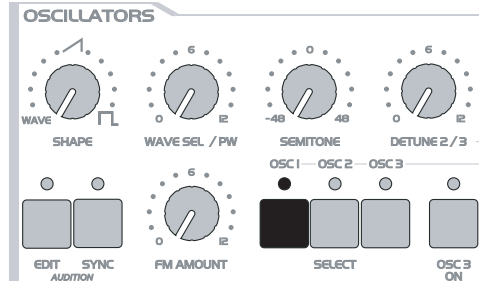

You can definitely see why this waveshape bears the name “sawtooth.” Press and hold a key and slowly turn the pot clockwise. You should be able to hear how the tone becomes increasingly more hollow-sounding. You might say this effect thins the sound out, but in any case, the entire tonal spectrum is affected by an equal measure, which is an audio result filters are unable to achieve.

The waveshape that is audible when you turn the SHAPE pot to the far right is a so-called pulse wave. The graphical representation of this waveshape on the control panel gives you a good idea of its appearance. It is unique because the duration of the negative pulse is equal to the duration of the positive pulse: It has a so-called pulse width of 50%. The tone of a pulse wave is different to that of a sawtooth wave because it does not contain all overtones in the natural overtone scale, only the odd-numbered tones, i.e. the first (the root note that determines the pitch), third, fifth, and so forth. By turning the SHAPE pot from the sawtooth control range towards the pulse control range, you are actually dialing every other overtone out of the mix, which explains why the sound becomes thinner.

You can continue modifying the sound by reducing the symmetrical width of the pulse wave. In the VIRUS, you can execute this sound-shaping measure via the WAVE SEL/PW

(PW = pulse width) pot, PROVIDED THE SHAPE POT IS SET TO A POSITION IN THE RIGHT HALF OF ITS CONTROL RANGE (LATER THAN 12 O'CLOCK). Rotate the WAVE SEL/PW pot slowly from the left to the right and leave the SHAPE pot at the far right position. You can hear how the treble content of the sound increases while the sound becomes ever thinner. At the far right position, the signal is no longer audible because the pulse width is equivalent to 0% and consequently the wave no longer oscillates.

Starting at the center position (12 o'clock) indicated by the sawtooth, turn the SHAPE pot counter-clockwise towards the left. You can hear how the overtones are increasingly mixed out of the signal until you can only hear the root note. This sound is produced by a so-called sine wave, one of 64 other waveshapes that you have at your disposal for sound generation purposes. These waveshapes can also be activated via WAVE SEL/PW (WAVE SEL: Wave Select), PROVIDED THE SHAPE POT IS SET TO A POSITION IN THE LEFT HALF OF ITS CONTROL RANGE (EARLIER THAN 12 O'CLOCK). Regardless of the current SHAPE setting, you can also select a wave in the EDIT menu under OSCILLATOR 1 WAVE.

Go ahead and check out the different waveshapes. The second of the 64 waves is a triangle wave, the remainder of the waveshapes are each a unique tonal blend. After you have familiarized yourself with this raw material, experiment with the parameters of the FILTERS and AMPLIFIER sections you have dealt with thus far (don't forget about SATURATION and the corresponding function of the OSC VOL pot), to get a feel for how the diverse waveshapes respond to filtering, saturation and amplifier modifications.


## ■ THE SECOND OSCILLATOR

---

As already mentioned above, the Virus has a second oscillator (as well as several other basic sound sources which will be described later in this manual). Press the OSC 2 button in the OSCILLATORS section to enter the edit pages for the oscillator 2. The controls in this section now apply to oscillator 2 only – oscillator 1 parameters cannot be changed now (although the oscillator can still be heard).

Dial in the basic sound program that you had at the very beginning; change the amplifier envelope to suit your taste. In the sound program, the OSC BAL (Oscillator Balance) pot in the MIXER section is preset to the far left. In order to hear Oscillator 2 in action, rotate the OSC BAL (Oscillator Balance) pot in the MIXER section to the right. Towards the center position (12 o'clock) you will hear how the tone is modified and as you rotate the pot further to the right, how the intensity of this modification is reduced. This effect is known as the comb filtering effect. It occurs when two signals with the same frequency but different phase lengths are mixed. Press the same key on your keyboard several times with the OSC BAL set to the center position (12 o'clock). You should notice that each note has a slightly different tone. The oscillators are the source of this effect. The oscillators of the VIRUS oscillate freely, consequently every time you play a note, the phase constellation between the two oscillators is different. For now, leave the OSC BAL POT at the center position (12 o'clock).

You are already familiar with Oscillator 1's SHAPE and WAVE SEL/PW pots. These functions are identical for Oscillator 2, so we won't go into detail on them again.

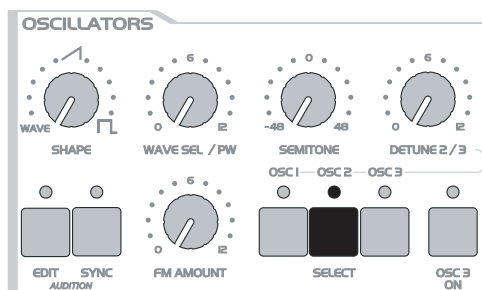

Locate the pot labeled DETUNE and slowly rotate it to the right from the far left position (which is preset in the sound program). You can hear the tone start to waver and as you turn the pot further to the right, how this vibrato effect increases until Oscillator 2 sounds distinctly out of tune with Oscillator 1. This wavering or vibrato-type effect has a popular traditional in synthesizers. It is used to achieve chorus effects, create sounds reminiscent of stringed instruments/ string sections or simply beef up the sound.

The SEMITONE pot enables you to transpose Oscillator 2 by plus/minus four octaves in semitone steps while Oscillator 1 maintains the pitch. This feature is especially interesting when used in conjunction with two other oscillator functions: synchronization and frequency modulation.

Locate and activate the SYNC button in the OSCILLATORS section (the LED must illuminate). The synchronization function forces Oscillator 2 to restart its wave cycle at the same time as Oscillator 1 waveshape starts its cycle. The initial effect of this measure is that the wavering tone that resulted from detuning and mixing the oscillator signals disappears.

The SYNC effect really becomes interesting when you transpose Oscillator 2 upwards in comparison to Oscillator 1 via the SEMITONE

pot. What happens is that the wave cycle of Oscillator 2 is interrupted as soon as Oscillator 1 starts its cycle. The pitch of the second oscillator no longer has the expected effect, instead it generates special tones, in some cases for lack of a better description “screaming” type effects.

The other effect that benefits from manipulating the interval between the oscillators is frequency modulation (FM). It generates new tonal spectra in which the signal of the first oscillator controls the frequency of the second oscillator similar to the manner in which filters can be controlled via envelopes. And here too you have a pot which allows you to control the intensity of: FM AMOUNT. Basically, this effect is similar to a vibrato, although here you’re dealing with an extremely fast vibrato featuring a frequency within the range of human hearing. This signal is not actually audible as a vibrato effect. Instead, you’ll hear a sound modulation, in some cases, a very drastic one at that. Choose the pure sine waveshape for Oscillator 2. In conjunction with the sine wave, the frequency modulation generates very clear, in some cases bell-like, spectra.

In the VIRUS you have the option of combining the two functions called oscillator synchronization (SYNC) and frequency modulation (FM AMOUNT), to generate new harmonic spectra. Switch SYNC on and experiment with the FM AMOUNT. Also try out different SEMITONE settings and the diverse waveshapes of Oscillator. The VIRUS is equipped with a third master oscillator that lets you create further oscillations and spectra. You can access the parameters of this oscillator, which are described in a later chapter, via the OSCILLATOR EDIT menu.

## ■ THE THIRD OSCILLATOR

---

The VIRUS also has a third main oscillator, which can be used to add more movement and body to the sound. Oscillator 3 is activated using the OSC 3 ON key, and its parameters become available after pressing the OSC 3 selection button.

Although the oscillator 3 parameters are no different from oscillators 1 and 2, there is one thing you should keep in mind. Because most sounds only require two oscillators, the third oscillator has been made optional, i.e. it has to be switched on whenever necessary.

Oscillator 3 takes a certain amount of computing power, and the trade-off is a reduction of the maximum polyphony: Playing a note using oscillator 3 uses up about an extra third of a voice from the available polyphony. In other words: Playing a three-voice chord using a sound which includes oscillator 3 would use up four (and not three) of the available voices.

## ■ THE MIXER SECTION

---

You have already come across two parameters of the MIXER section: OSC BAL determines the mix ratio between Oscillators 1 and 2; in the left half of its control range, OSC VOL determines the master volume of the oscillator mix. In the right half of the control range from the center position to the far right, OSC VOL increases the saturation intensity when a SATURATION curve has been activated.

Now we'll take a closer look at the final control element, the SUB OSC pot: It controls the volume of the fourth oscillator, the so-called Sub-Oscillator, which always operates an octave below Oscillator 1.

The SubOscillator is mixed to the Oscillator 1 and 2 master mix signal as determined by the OSC BAL pot. The master volume of the composite mix is controlled by the OSC VOL pot. The only other parameter available for the Sub-Oscillator is accessible via the OSCILLATOR EDIT menu where you have the option of selecting a triangle or pulse waveshape (SUB OSCILLATOR WAVE SQUARE/TRIANGLE).

The NOISE control determines the level of another basic audio source – the noise generator. The other parameter belonging to the noise generator is its color, which can be set in the menu via NOISE Color in the OSCILLATOR-EDIT menu. In the central position (+0), the noise generator produces so-called „white noise“ which includes all frequencies at an equal level. Please note that, unlike the other oscillators, noise level is not affected by OSC VOL – it is even audible when this is turned down to zero.

The fifth control in the mixer section determines the level of the Ring Modulator. This is not considered one of the basic sound source, but is the result of multiplying the output of oscillators 1 and 2. Ring modulation can create interesting enharmonic sounds which are highly dependant upon the frequency ratio between the two oscillators (adjustable via e.g. OSC 2 SEMITONE) as well as the waveforms (e.g. use two sine waves for pure bell-like tones).

To blend in the ring modulator use EDIT: RINGMODULATOR VOLUME (in OSCILLATOR EDIT Menu). If the RINGMODULATOR VOLUME is zero, the ring modulator is switched off. OSC VOL does not affect the ring modulator level (or indeed the noise volume). Therefore the original oscillator signal can be leveled independently of

the ring modulator. Be sure to check out what the ring modulator does when you select a sine wave for Oscillator 1 and 2.

Now we can go on and solve the mysteries of the signal flow as determined by the FILTER ROUTING operating mode SPLIT: Here Oscillator 1 and the SubOscillator are routed to Filter-1, whereas Oscillator 2 and the Noise Generator are routed to Filter-2. Although the sound sources are split into two signal paths, you can still control the volume levels of the different elements as well as OSC VOL in the usual manner.

## ■ THE LFOS

---

When you first started this series of experiments with sounds, we promised that many of the functions the VIRUS can be “programmed” so that they are executed automatically. You have already learned how to control the volume and cutoff frequencies of both filters as well as the pitch and intensity of the frequency modulation of Oscillator 2 via “preprogrammed” envelopes. These options are great, but you have already encountered a number of functions where it would be a helpful if you could also program them to be executed automatically. And of course envelopes are great modulation sources, but you have to play a note every time you want to initiate an envelope. During your experiments you probably came across a function or two you would like to be able to control periodically - independently of notes. Some features that come to mind are traditional techniques such as vibrato (periodic pitch control) and tremolo (periodic volume control). Another option you might like to have at your disposal is random parameter control.

In the VIRUS, both of these tasks are executed by a so-called LFO (low frequency oscillator) that oscillates at frequencies below the audible range. An LFO is similar to the oscillators you have encountered thus far, but it oscillates significantly slower so that its output signal is too low for human hearing. So what good are they if you can't hear them? LFOs are used in much the same manner as envelopes, with the major difference that they are repeated indefinitely.

For our next experiment, you should recall either the basic sound you have always started with so far, or a version you have already edited and saved. Look for the RATE control in the LFOS/MOD section. To the left of this knob is an LED, which should be flashing in time with the LFO 1 (the currently selected LFO - see below). Turn the RATE control and see the speed of the LED changing. The buttons to the right of the RATE knob are used for selecting LFO waveforms.

The controls in the LFOS/MOD section only apply to the currently selected LFO (like in the OSCILLATORS section), and you can switch LFOs using the SELECT button in the top lefthand corner of this section. When LFO 3 is selected, the LED to the right of the RATE control flashes in time with LFO 3, otherwise it shows the rate of LFO 2

### LFO 1

Start with the usual basic sound configuration or choose a modified sound to suit your taste. Locate the RATE pot in the LFO 1 section of the control panel. The RATE pot is equipped with an LED that indicates the speed of the LFO as well as its waveshape. Turn the RATE pot and check out how the flash of the LED indicates the change of pace as you rotate the pot.



■ *Once you have pressed the lower SELECT-button button, you can scroll forwards or backwards through the available modulation destinations with the PARAMETER buttons. When the EDIT key in this section is held down, modulation destinations can be selected by turning the SELECT control.*

Currently you are unable to hear the effect of the LFO as its modulation intensity is set to 0 in the sound program. In order to change this setting, you must access the second SELECT button which works in conjunction with five vertically arrayed LEDs labeled OSC 1, OSC 2, PW 1+2, RESO 1+2, FILTER GAIN and ASSIGN: Press the SELECT button repeatedly and observe how the LEDs flash in succession (the LEDs OSC 1 and OSC 2 flash separately as well as in unison). The corresponding modulation targets appear in the display, along with the modulation intensity values as determined by the VALUE pot and VALUE buttons. (You can also scroll through the modulation targets via the PARAMETER button after you have pressed the SELECT button once.) Once you have dialed in a value other than 0 for a modulation target, the corresponding LED illuminates continually. This feature tells you at a glance that a modulation is underway even when the display indicates some other type of operation.

## HERE ARE THE DEFINITIONS FOR THE MODULATION TARGETS:

- **OSC-1** refers to the frequency of oscillator 1
- **OSC-2** refers to the frequency of oscillator 2
- **PW 1+2** means that the pulse widths of both oscillators are controlled in unison
- **RESO 1+2** refers to the resonances of both filters. Please keep in mind that although each set of these parameters is assigned a common modulation intensity, you can still di-

al in different sound-shaping settings manually. In other words, the audible result of a joint modulation varies according to the values you have determined for the other parameters.

- **FILTER GAIN** This is the level of signal entering the filter section and therefore influences the subsequent saturation stage. Modulating FILT GAIN therefore causes a periodic change in saturation as well as a tremolo i.e. a periodic change in volume. If the saturation stage is not used, you will only hear tremolo. The position within the signal chain (at the input of the filter section) has been deliberately chosen so that both the volume and the amount of distortion can be modulated by the same source, as is often the case in electromagnetic instruments. Also, rapid LFO movements cause sharp impulses (transients) within the oscillator signal, which can be used to excite filter resonance. Filter resonance always dies away freely, as the filter input is affected by modulating FILT GAIN, not its output.
- **ASSIGN** Here you can freely select any modulation destination.

Modulate these five parameters separately and in combinations with different intensities. Try to anticipate the sound you will come up with when you modulate the first oscillator, the second oscillator or both oscillators at once and see if the results match your expectations. If you can fairly reliably predict the outcome of your sound-shaping efforts, you should have a handle on the information discussed thus far and can use your knowledge to create specific sounds you have in mind.

During the course of your experiments, it is entirely possible that you have generated modulations that have no effect whatsoever on the sound, for instance if you modulate the frequency of Oscillator 2 although it is dialed out

of the oscillator mix. When you run into this type of problem, check out the signal routing, if any configurations conflict with each other and memorize the situation, problem and solution. If you make a habit out of this, you won't panic when you run into similar situations; instead you'll keep your cool, analyze the unexpected sound and fix the mix.

You are currently using a triangle as the LFO waveshape. You shouldn't have any problem associating the periodic up and down fluctuation of the target parameter with this waveshape. Now activate the other available waveshapes for LFO 1 and try to picture the respective waveshape and associate it with the results of the modulation.

The third waveshape is a descending sawtooth wave. You can convert it into to an ascending sawtooth by simply dialing in the requisite negative modulation intensities (AMOUNT).

In the WAVE setting, you have access to 64 LFO waveshapes. Select these in the display section using the VALUE buttons:

- **S&H** (Sample and Hold) is a structured random modulation. Here random modulation values are generated. The value is held until the next beat impulse, then it abruptly jumps to a new random value.
- **S&G** (Sample and Glide) is a continual random modulation. Here the random values glide seamlessly into one another, the rate of which is determined by random modulation of the RATE value.

The following 62 waveshapes are identical to the oscillator section's digital waves. These can be used to create interesting rhythmic effects.

Continued your experiments with different LFO waveshapes. Note that after a while you no longer consciously hear minimal modulation intensities - depending on the waveshape and modulation target (e.g. S&G +1 on OSC 1 or 2). However they do pep up the sound of lend it a certain vitality. The key to many great sounds are these types of minimal modulations.

You may have gathered that the LFOs of the VI-RUS are polyphonic:

If several notes are played simultaneously, these are controlled by dedicated LFOs, each with a slightly varied rate. This effect livens up the sound of chords, especially when they are sustained. To enhance this effect, activate the LFO 1 KEY FOLLOW in the LFO-EDIT-Menu.

This function enables you to control the rate of the LFOs via the pitch, or more accurately, via the MIDI note number, so that higher notes generate faster LFO rates. As result, when you press and hold several notes you will hear all kinds of substantially different periodic fluctuations.

Finally, the LFOs can also be used as additional envelopes. The control feature for this effect is the ENV MODE button. When you press this button, two things occur: For one, the LFO no longer initiates its cycles periodically, but only once at and in sync with the start of a note, and for the other, the active range of the LFO is switched from bipolar (in both directions from the zero position) to unipolar (from zero in one direction only). Please note that this applies to the modulation target but not the modulation intensity. Here you can still determine a value in the entire bipolar range.

This effect is especially prominent when used in conjunction with the sawtooth wave, which enables a fade-out type of effect (when you dial in a positive AMOUNT value) or a volume-swell type of effect (negative AMOUNT) for the available modulation targets. Using the LFO Curve

parameter located in the LFO EDIT menu, you can have the "ramp" rise or fall exponentially. If you choose a triangle for your waveshape, the device will generate an ascending phase (attack) and a descending phase (decay). LFO Curve also lets you determine the temporal relationship between attack and decay; in other words, their respective rates.. Dial in the desired speed via the RATE pot.


You can also use S&H and S&G in ENV MODE to come up with some attractive results: S&H generates a single random value at the start of a note (in this case, the RATE pot has no effect); S&G works in the same manner although in this case the RATE value is crucial. It determines the amount of time it takes to glide from the previous to the new random value.

## ■ THE MOD SECTION

You may have noticed that, apart from the three LFOs, an entry called MOD also appears as an option when you press the Select button. This gives you access to the Virus modulation matrix. The six ASSIGN entries (selectable via the SELECT button) represent six freely definable modulation connections. After you have selected one of them, you can set the modulation source, destination and intensity in the menu.

To maintain compatibility with previous Virus models, ASSIGN 2 has two destinations and ASSIGN 3 has three. Each of the other ASSIGNS have only a single modulation destination.

Please note: When MOD is selected instead of an LFO, the RATE knob will always control LFO 1 by default.

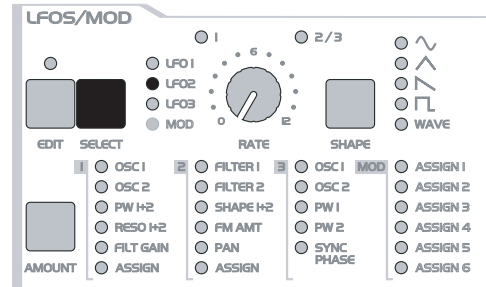

## ■ SOFT KNOB 1/2

These are the two freely assignable controls. The destination of these controls can be defined within the Edit menu (SOFT KNOB 1/2 MODE). There are two parameters, one global and one local i.e. applying only to the current SINGLE program (which will override the global definition if defined). SOFT KNOB 2 doubles as a value control, and therefore only works as a SOFT KNOB when the Virus is in Play mode i.e. no Edit menu is selected. For each SOFT KNOB, you can choose a short description from a list in the menu, and this will be saved as part of the SINGLE program. In Play mode, this will appear in the display – to remind you of what each SOFT KNOB does when you are playing your Virus.

(see “The SOFT Knobs (Controls)” on page 49).

## VOLUME AND PANORAMA POSITION

You probably noticed that the many of the sound shaping options available in the VIRUS occasionally influence the volume level. For instance, an unfiltered sawtooth is naturally louder than a highly filtered sawtooth because whenever you blend a part of the frequency spectrum out of the mix, you are automatically reducing the overall volume of the signal. This is why the VIRUS is equipped with a programmable volume pot for each SINGLE PROGRAM. It enables you to balance out the volume levels of your sound programs.

Locate the parameter PATCH VOLUME in the COMMON section of the EDIT menu.

```
1 COMMON
PatchVolume 100
```

Its value is set to 100 so that you have a reserve or headroom of 27 volume increments when you are dealing with highly filtered sounds.

You have already dealt with the Panorama position as a modulation target of LFO 2. Here you can not only modulate it, but also determine settings manually. For this purpose, use the parameter PANORAMA which is also located in the OUTPUT section of the EDIT menu. Like many other parameters, Panorama is a starting point for modulations. For instance you can modulate the Panorama position via LFO 2 even if you have already set the Panorama to the far left position. In this case of course you will only hear the Panorama position shift to the right.

## VELOCITY

Velocity is one of the preferred modulation sources of keyboard players: A light key attack generates a low velocity value for the given note, a heavy touch generates a high velocity value. In the VIRUS you have ten modulation targets available for Velocity. Locate the VELOCITY section in the EDIT menu.

```
1 VELOCITY
Osc1Shape +0
```

There you will find the modulation intensities for:

OSC 1 SHAPE
OSC 2 SHAPE
PULSE WIDTH
FM AMOUNT
FILT 1 ENV AMT
FILT 2 ENV AMT
RESONANCE 1
RESONANCE 2
VOLUME
PANORAMA

which you can manipulate independently of one another in the familiar bipolar control range.

A light key attack generates a low velocity value for the given note, a heavy touch generates a high velocity value.

## ■ UNISON MODE

---

When we talked about the oscillators, we mentioned that by subtly detuning signals, you can beef up sounds and achieve string-like sounds. The VIRUS is equipped with features that allow you to take this type of tonal manipulation a step further. One of these is the so-called UNISON MODE. It enables you to initiate two or more voices for each note played, which in turn lets you detune many oscillators. UNISON MODE also offers the option of spreading the voices generated by one note in the stereo panorama and shifting the phases of their LFOs so that all types of periodic effects can be used to produce an even more exciting signal.

Locate the parameter group UNISON in the EDIT menu.



UNISON mode determines how many voices the VIRUS will use to render a played note. In a nutshell, it determines how "fat" the sound will be. You can use the UNISON Detune parameter to determine to which extent the active voices are detuned. UNISON PanSpread distributes them uniformly across the stereo panorama, a process by which you can also determine the width of a sound's stereo base. When you activate UNISON mode for a sound, it can still be played polyphonically. However, depending on the number of voices you've dialed in, its polyphony will of course be considerably reduced in UNISON mode. The most efficient and the standard setting is UNISON mode = Twin,

where two voices are played for every note. In the "OFF" position, one voice per note is played.

## THE EFFECTS

At the bottom left of the panel is the effects section, divided into an EFFECTS and a DELAY/REVERB block. This gives you access to Distortion, Phaser and Chorus effects as well as Delay and Reverb.

The TYPE/MIX and INTENSITY knobs in the EFFECTS block are used to control the distortion, phaser and chorus effects. They always apply to one of the three simultaneous effects only, selectable via the Select button. The following parameters can be controlled using these two knobs:

Distortion-Effekt:	
TYPE/MIX	Distortion Curve
INTENSITY	Distortion Intensity
Phaser-Effekt	
TYPE/MIX	Phaser Mix
INTENSITY	Feedback
Chorus-Effekt:	
TYPE/MIX	Chorus Mix
INTENSITY	Depth


All other effects parameters are defined in the menu by pressing the upper EDIT button.

The lower EDIT button in the DELAY/REVERB section lets you switch between the Delay and Reverb effects. The SEND control determines the proportion of the selected effect within the signal; DELAY/REV TIME controls Delay time or

Reverb decay; FEEDBACK/DAMPING determines the degree of feedback in the Delay signal, or high frequency damping for the Reverb.

If Delay or Reverb are synchronized to the clock, DELAY/REV TIME controls the time expressed as a note value (1/16, 1/8, etc.).

In the next section we are going to take a closer look at the Virus effects.

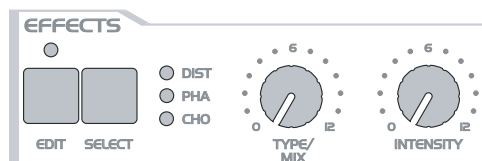

## DISTORTION

The Distortion effect is actually a collection of several different algorithms, which are selectable via the TYPE/MIX control:

- **OFF** No distortion
- **LIGHT, SOFT, MIDDLE, HARD** Four analog distortion curves, with differing characteristics and intensities.
- **DIGITAL** Digital distortion with hard clipping. Shaper. Sine characteristic with multiple wave cycles. Signals sent through the Shaper can be changed quite drastically; the results are often similar to the spectra of linear FM (frequency modulation).
- **RECTIFIER** Variable half-wave rectification; input level does not affect the amount of distortion.
- **BITREDUCER** Variable reduction of the bit depth; generates digital quantization noise.

- **RATEREDUCER** Variable reduction of the sampling rate; generates digital aliasing effects.
- **LOWPASS** 1-pole lowpass filter; gentle reduction of higher frequencies.
- **HIGHPASS** 1-pole highpass filter; gentle reduction of lower frequencies.

The INTENSITY control is used for setting the degree of distortion (in distortion algorithms) or the cutoff frequency (in the two filter algorithms). INTENSITY ranges from very slight to extreme.

## PHASER

The Phaser effect produces resonant (or even cutting) emphasis on certain frequencies within the signal. The frequencies of these resonances are shifted around the frequency spectrum, causing a distinctive movement in the sound. Tastefully applied, this effect is particularly good for pad sounds and for authentic traditional electric piano sounds.

The pure Phaser signal is the result of a frequency-dependent phase shift together with a slight pitch modulation from the phaser's own LFO. Typical phaser sounds only appear when the processed signal is mixed with the dry signal, usually at the same level. The TYPE/MIX control is used to set this balance.

The INTENSITY control changes the level of feedback in the phased signal. Higher feedback levels cause higher resonant peaks in the signal. The FEEDBACK parameter is bipolar, because positive and negative feedback have different characteristics.

More phaser parameters can be found in the EDIT menu: RATE and DEPTH control the speed and intensity of modulation from the

phaser's own LFO. The other three parameters affect the general sound of the phaser: FREQUENCY determines the average frequency of resonant peaks, STAGES is the number of resonant peaks and SPREAD is the distance between resonant peaks within the frequency spectrum.

## CHORUS

Chorus has been a popular effect for a long time, and is often used to make pad sounds (such as synthetic strings) less static. It is actually a pair of short delay lines (usually no longer than 50 ms) with continuously modulated delay time via dedicated LFO. This modulation causes subtle frequency shifts in the processed signal, which results in a more complex phasing between direct and processed signals. Feedback in the delay line accentuates the Chorus effect, and because the left side of the signal is modulated in the opposite direction to the right side, the Chorus effect is capable of creating a stereo signal from a mono input.

When the basic delay is extremely short, this effect is called flanging. The feedback parameter is especially significant here, as higher values can create dramatic resonances and could even be considered an additional signal source. Like in the Phaser, the FEEDBACK parameter is bipolar, because positive and negative feedback have different characteristics. At higher feedback levels (negative or positive) it becomes obvious that the two sides of the signal are being modulated in opposite directions.

The TYPE/MIX control in the EFFECTS section determines the balance between the direct and processed signals. The RATE and SHAPE parameters control the dedicated LFO, and are available in the EDIT menu. Two further parameters in the menu are DELAY and FEEDBACK. These are used to set the delay time and feedback level. The INTENSITY control determines

the DEPTH i.e. modulation intensity of the LFO. Please note that signal paths in the Virus Chorus/Flanger are stereo throughout: The stereo position and any panorama modulation or stereo spread values are preserved in the processed signal.

## DELAY/REVERB

The DELAY/REVERB section is responsible for two different effects. The SEND control determines the relative amount of effect signal:

The DELAY effect delays the input signal, and is usually used for echoes. The nominal delay time set by the DELAY/REV-TIME control can be modulated so that stereo phasing effects can appear. The delay time can be synchronized to the clock so that echoes will be „in time“ and will automatically adjust to any tempo changes. There are also several fixed-pattern delay algorithms, many of which delay the left and right sides differently i.e. using different note values. Interesting rhythmic patterns can be created by increasing feedback level (via the FEEDBACK/DAMPING control).

REVERB simulates the effect of the boundaries in real spaces such as living rooms or cathedrals. There are several parameters here which go beyond pure simulation of real spaces. The predelay parameter normally found in reverb units is handled by the DELAY section described above – DELAY is in front of REVERB in the signal path. REVERB can be synchronized to the clock so you can seamlessly integrate the effect into the rhythmic context of your music. The DELAY/REV TIME control determines the decay time, and FEEDBACK/DAMPING sets the amount of high frequency damping.

### DELAY/REVERB



## THE ARPEGGIATOR

The ARP section located inconspicuously below the main volume control is the Virus arpeggiator. This section only has an ON/OFF button and an EDIT button (which opens the arpeggiator menu).

Arpeggiators break chords into individual notes, which are (usually) played back in succession. However, the Virus arpeggiator offers numerous playback options including rhythmic repetition of the unchanged chord. It is a very intuitive aid for creating original rhythms, melodic sequences, bass lines and much more. Simply switch on the Arpeggiator and try it out! The arpeggiator parameters are explained in the Parameters chapter.

## SOUND DIVER VIRUS

Every Virus which leaves the factory includes a custom version of the software Emagic Sound-Diver. This is a powerful tool for managing sounds and controlling all Virus parameters



from the computer (Mac or PC). Even if you prefer to control your Virus with its own knobs and buttons most of the time, SoundDiver still has quite a few useful functions and features which complement the Virus user interface very well.

Take for instance SoundDiver's Memory Manager. This can display the entire memory contents of the Virus clearly arranged on a single page, and has many comfortable functions to help you manage all your Single and Multi programs. For instance SoundDiver lets you drag and drop sounds from one place to another, or rename them etc. etc. These are the kinds of jobs which are handled much more comfortably on a computer screen than in the (naturally smaller) Virus menus.

SoundDiver's library functions let you build up sound libraries of any size for the Virus, and store these on your computer's hard disk. You can sort some or all the sounds in a library according to several criteria, you can search for sounds, audition them and send several library sounds at the same time to the Virus (via drag and drop) etc. etc. It is even possible to connect several Virii to SoundDiver and feed them with sounds from a single, central library. Selectively swapping sounds between two Virii could hardly be more comfortable.

Double-clicking on a sound in SoundDiver's Memory Manager loads the sound into an editable graphic display of all parameters and values. Although there is nothing in this editor you cannot do on the Virus itself, the attractive on-screen graphics give you an instant and complete overview of all parameters and their values, so this is a practical alternative to the Virus user interface – especially when your unit is not very accessible (e.g. when built into a 19" rack).

SoundDiver communicates via MIDI with the Virus and requires two-way connections i.e. both the MIDI INs and OUTs must be connected between the Virus and the computer running the

software. SoundDiver has an integrated Help system, which includes extensive information about the program itself as well as about the Virus parameters.

For further information about the full version of SoundDiver, as well as any questions you may have about the program, please contact Emagic ([www.emagic.de](http://www.emagic.de)).

## ■ MORE TO COME

---

We have come to the end of these detailed instructions for novices. We hope we were able to help you become a bit more familiar with your new synthesizer and gain some confidence in how to handle it. As we mentioned earlier, this is just an introduction and does not cover all the functions and features of the VIRUS, only the basic components and how they affect the sound of the VIRUS. You should now be able to come to terms with the in-depth look at the VIRUS in the following section.





# Concept and Operation

## ■ OPERATING MODES

---

In the VIRUS you can select from two basic operating modes, SINGLE MODE and MULTI MODE.

In SINGLE MODE, the VIRUS is able to generate a single sound program only. All 32 voices, all effects and most importantly, all control features (with the exception of the MULTI button) function in conjunction with this one sound program. You might say a SINGLE program is a combination of all functions and effects that determine the sound of the VIRUS. In other words: A SINGLE program is a "sound" of the VIRUS, that can be stored and recalled.

The VIRUS provides access to up to 1024 SINGLE sounds. Next to the 256 RAM sounds (Bank A and Bank B), you have six banks available with a total of 768 factory sounds. These banks, C-H, are stored in the FLASH ROM and can not be overwritten via STORE. The upper four Banks E-H are not loaded by the Factory; instead they have to be loaded by the user. By that procedure, the demosong will be overwritten.

The MIDI receive channel in SINGLE MODE is the Global Channel. You can change the Global Channel in the SYSTEM menu.

In MULTI MODE, the VIRUS can combine up to sixteen (SINGLE) sound programs, among which the maximum available number of 32 voices are allocated dynamically. All simultaneously available sounds can be manipulated in real-time; for this purpose the control panel enables you to switch among the sixteen so-called PARTS.

In MULTI MODE, the actual sound parameters are augmented with other functions that deal with how the involved SINGLE programs are

structured or organized. These include the volume levels of the single programs, their MIDI channels, output assignments, etc.

## THE MULTI-SINGLE MODE

Activate MULTI SINGLE mode by pressing the MULTI and SINGLE buttons simultaneously. The name of the selected MULTI program will disappear and instead you'll see the name of the SINGLE program for the selected PART. Now you can page or scroll through the 16 PARTs using the PART buttons and select a SINGLE program for every channel. Now you can process the currently selected PART. You'll always see the number of the selected PART on the upper left in the display. The PART buttons don't actually change sounds, they simply set the user interface of the VIRUS to the desired PART. Irrespective of the given setting, all PARTs can be controlled simultaneously via MIDI. Consequently, MULTI SINGLE mode, which makes handling so much easier, is the ideal choice when you're working with a connected sequencer.


Please bear in mind that MULTI SINGLE mode is really just another view of the normal MULTI mode. MULTI SINGLE mode doesn't offer a unique data type for storing sounds, it always works with the MULTI program currently selected in normal MULTI mode. All of the normal MULTI mode parameters (keyboard zones, etc.) remain intact and in force even though you can't view or vary them in MULTI SINGLE mode. You can set the device to normal MULTI mode at any time by pressing the MULTI button. To return to the MULTI SINGLE mode view, simply press the MULTI and SINGLE buttons simultaneously.

When you're working with a sequencer, start with a MULTI program that features neutral settings for its "administrative" parameters, for example, the MULTI program M0 Sequencer. Here

the PART numbers are identical to the MIDI channels of the PARTs. Now when you work in MULTI SINGLE mode, the VIRUS responds as if it were in SINGLE mode, except that you have 16 sounds available simultaneously on 16 MIDI channels. Use the PART buttons to select these sounds.

You only need to exit MULTI SINGLE mode when you want to store the MULTI program, for example, to save the current global delay/reverb setting. In MULTI mode, these settings are not stored along with SINGLE sounds.

In addition, you can activate another complete MULTI program in MULTI mode only.

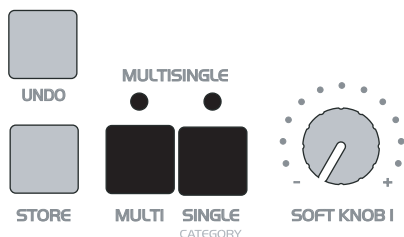

## EDIT BUFFERS

Whenever you play or edit a SINGLE program, its current data is stored in an edit buffer. This is an individual memory slot for SINGLE programs that has nothing to do with the memory slots in the sound banks. When you activate a new SINGLE, its data is copied to the edit buffer. There you can edit it as you see fit while the original remains unchanged in the bank. When you activate STORE (more on this in a bit), the content of the edit buffer is copied back to the original slot in the bank (or, if you so desire, to another memory slot).

In MULTI mode, you have one MULTI edit buffer and 16 SINGLE edit buffers for the PARTs at your disposal. When you activate another a MULTI program, its data is copied from the MULTI bank to the MULTI edit buffer. The MULTI program in turn contains address information for the SINGLES involved, in other words, the bank and program numbers. These addresses are also copied from the SINGLE banks into the 16 SINGLE edit buffers for the PARTs.

When you store a MULTI program, only the addresses of the SINGLE programs' original slots are saved, but not, however, the sound data in the 16 SINGLE edit buffers. These must be stored separately in the SINGLE program banks.

This type of edit buffer is used in most synthesizers; its advantages are many:


- It lets you edit copies of sounds without sacrificing the original sounds.
- Edit buffers can be stored in a sequencer and sent from it to the VIRUS independently of the sounds stored in the device (see "Arrangement Dump - The Sound in the Song" on page 145).
- In MULTI-Mode (or MULTI-SINGLE-Mode) the same SINGLE-program can be recalled and edited on different parts. In this case all involved EDIT-buffers contain variations of the same original sound.

## ■ MASTER CLOCK AND MIDI-CLOCK

---

The VIRUS has a global clock generator which can be used to synchronize the LFOs, the arpeggiators and the delay/reverb effects to a common tempo. The internal clock generator either works at a definable rate or slaves automatically to any MIDI clock signal (e.g. from a sequencer) arriving at the MIDI IN socket. Internal clock speed is controlled by the CLOCK TEMPO parameter, which can be set to any value between 63 und 190 BPM (Beats Per Minute). Beats are displayed by a dedicated LED to the immediate left of the UNDO button.

When the device is synchronized via MIDI clock, the clock generator automatically accepts the speed dictated by the connected sequencer; the internal tempo setting is in this case meaningless and thus disabled. The individual sections of the VIRUS are synced up to the clock generator at rhythmic intervals such as 1/16, 1/4 and so forth. These values may be assigned individually for every section. (ARPEGGIATOR CLOCK, CLOCK LFO 1, CLOCK LFO 2, CLOCK LFO 3, DELAY CLOCK, see the respective sections).

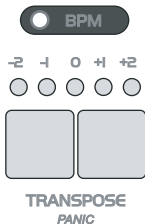

In SINGLE MODE, CLOCK TEMPO pertains to the current SINGLE PROGRAM and is stored along with it. In MULTI MODE, the CLOCK TEMPO settings for the involved SINGLE PRO-

GRAMs are ignored. Instead, all involved SINGLE PROGRAMs are controlled via the same clock generator. Its CLOCK TEMPO is saved in the MULTI PROGRAM (as are the settings for the global delay effect).

This feature lets you control the LFOs and arpeggiators of several MULTI PARTS in a common rhythmic context.

■ *A small “c” will appear in the display when the VIRUS is receiving MIDI Clock data. If you’re sure you do NOT want the device to be synchronized automatically to MIDI clock, set MIDI CLOCK RX to Off (in the SYSTEM menu.) To avoid confusion, please keep in mind that MIDI Clock is not the same thing as MIDI Time Code. The latter doesn’t deal with tempo at all but with time-related information structured in hours, minutes, seconds, etc. which is of no benefit to you in this context.*


## ■ HANDLING

---

### PARAMETER SELECTION AND DATA ENTRY

In the VIRUS, we distinguished between two types of parameters. On the one hand, it features parameters that are essential in generating or synthesizing sounds, on the other hand it has sound parameters and organizational parameters that are more of a peripheral nature. This distinction is apparent in handling and operation of the VIRUS: All essential sound parameters feature a dedicated knob or button so

that you can access these directly - especially while you are playing!. In just a few cases the control features have dual functions.

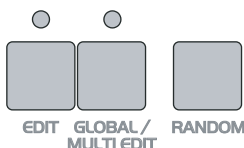

Peripheral parameters, on the other hand, are compiled in menus. Among these menus are above all the EDIT main menu in the display section as well as the six local EDIT-menus in the individual function blocks. The EDIT menus contain parameters that you will require less frequently, but some of these are nonetheless indispensable for programming sounds. The local EDIT menus are there for a purpose – to help you distinguish clearly between the various parameters. Here you'll find parameters that affect directly the given functional section, but are not equipped with dedicated control features.

In the SYSTEM menu, you'll find – irrespective of the given operating mode – a number of global parameters. These are called MIDI, SYSTEM and so forth and are not stored with a SINGLE or a MULTI program.

Located next to some of these parameters, you'll see the abbreviations "ENA" and "DIS". The option ENA means enable and DIS means disable.

Call up a menu by simply pressing the corresponding button. Once you have opened the menu and it appears in the display, you can scroll through its parameters one after another using the PARAMETER buttons and edit them using the VALUE buttons and knobs.

If you press the PARAMETER buttons briefly, you can scroll through the parameters contained in any given menu step by step in the desired direction. If you press and hold one of the parameter buttons for a bit longer, the display will automatically scroll through the list of parameters in the given menu. When you press and hold one PARAMETER button and then press the other PARAMETER button, the display will scroll through the menu in parameter groups in the direction of the button that you are holding down. This handy feature lets you swiftly go from one parameter type to another, for instance, from all chorus-related to all delay-related parameters. If you also hold the second parameter button down, the menus will automatically scroll in the selected direction. Once you've scrolled to the desired parameter group, simply select the desired parameter by pressing the button briefly. You can also step through the parameters by repeatedly pressing the same menu button.

The menus, particularly the EFFECTS menu, contain parameter groups that are related by virtue of their function, for instance, all parameters that are used to control the phaser. When you switch the phaser off (PHASER Dry/Eff = OFF), all Phaser parameters are of course irrelevant and will no longer appear in the menu. In other words, when the phaser is disabled, you can't view its parameters. The reason for this is to make menus clearer and less cluttered.

The VALUE +/- buttons let you change the value of a parameter in steps. When you hold one of these buttons down, the value changes automatically and the longer you hold the button, the faster the pace of the value change. You can increase this pace even further by pressing and holding one VALUE button and simultaneously pressing the other VALUE button. If you press and release both VALUE buttons simultaneously, the parameter is set to its default value

(mostly zero). This pertains to unipolar parameters (value range of 0 to 127) as well as bipolar parameters (value range of -64 to +63).

You can also use the VALUE knob to change the value of the selected parameter. The VALUE knob responds to the KNOB MODE settings as described in the paragraph below.

The triangular icon located next to the parameter value indicates in which direction you have to change a value if you would like to reset the parameter to the value that has been stored to date. The previously stored parameter value as well as the current value are displayed for parameters that feature a dedicated knob.

## KNOB MODES

For all knobs with the exception of MASTER VOLUME, you can select from four operating modes in the SYSTEM menu. These are located under the menu item KNOB MODE:

- **OFF** The knobs are inactive.
- **JUMP** In Jump Mode, the parameter jumps directly and absolutely to the value determined by the current position of the knob.
- **SNAP** When you adjust a knob In Snap Mode, the original setting determines the value until the point where the movement of the knob passes beyond this position. In other words, the parameter does not jump to the value as in JUMP Mode. However, keep in mind that your adjustments have no effect on the parameter until the knob “snaps” on at the position equivalent to the original value. In SNAP mode, an  $\leftarrow$ -symbol appears to the right of the number. It indicates in which direction the VALUE knob must be turned to exceed the current parameter value.

- **ISNAP** The modal controls (for instance those whose functions apply to one oscillator or LFO at a time) will be in SNAP mode, whereas all the others will be in JUMP mode. The iSNAP mode is there to prevent sudden changes in value after switching over to a different oscillator or LFO etc.
- **RELATIVE** When you adjust a knob in RELATIVE Mode, the parameter is affected immediately but not absolutely. In other words, the value change from the original value to the value reflects precisely the amount you adjusted via a given control. Generally this operating mode allows you to adjust a parameter immediately, without radical jumps. However, the down side is that in an unfavorable configuration - the worst-case scenario being a maximum parameter value and a knob position at the minimum value - you do not have the full control range of the knob at your disposal. To counteract this situation, you have to turn the knob in the opposite direction to adjust the physical knob position so that it is equivalent to the actual parameter value. In RELATIVE Mode, the triangle to the right of the number indicates if the VALUE knob coincides with the parameter value ( $\blacktriangleleft$ ) or not ( $\blacktriangle$ ).
- **IRELATVIE** The modal controls (for instance those whose functions apply to one oscillator or LFO at a time) will be in RELATIVE mode, whereas all the others will be in JUMP mode.



## DISPLAY OF VALUES

When a menu is active, different display options are available for parameters with a dedicated knob. These can be selected under the menu item KNOB DISPLAY in the SYSTEM menu:



- **OFF** Knob movements are not displayed; the current contents of the display remain intact when you turn a knob.
- **ON** The lower row of the display is being overwritten by the parameter's value.
- **SHORT** When you turn a knob, the current contents of the lower display line are briefly overwritten by data representing the change in parameter value; once the action is completed, the original contents reappear in the lower display line.
- **LONG** Same as SHORT, except that - you guessed it - the display shows the knob data for a longer period of time.
- **ON** The contents of the display are overwritten when you turn a knob; the original menu does not reappear in the display.

```

1 SYSTEM
KnobDispl Short

```

## ■ ALL ABOUT THE MEMORY

### STORE

The mode structure of SINGLE, MULTI and MULTI SINGLE MODE is mirrored in the STORE functions: In SINGLE MODE, STORE saves the current SINGLE PROGRAM; in MULTI MODE, STORE saves the current MULTI PROGRAM; and in MULTI SINGLE MODE, the SINGLE PROGRAM of the current PART is stored.

The STORE process is always the same regardless of the operating mode: Press STORE. You then gain access to the STORE menu. There you can use the PARAMETER buttons to move among the individual letters in the lower name entry line and the number of the destined memory location as well as the bank number in the upper line. Use the VALUE button to make entries. The term in the upper display line indicates the name of the memory location which you will overwrite when you store the program.

Once all of the entries correspond to the data you have in mind, press STORE again to conclude the process and return to the previously active operating mode of the VIRUS. If for whatever reason you change your mind and want to cancel the operation, simply press SINGLE or MULTI to return to the previous operating mode without storing the program.

■ *To belabor the point, when you store a MULTI program, only the content of the MULTI edit buffer is saved, not however the sound programs in the PARTs. These must be stored individually in MULTI SINGLE mode.*

If you want to store the SINGLE programs in the PARTs to their original slots in the SINGLE banks all at the same time, simply press STORE and 1 C126 - Init

```


1 C126 - Init
[STORE] TO...

```

### COMPARE

When you press STORE and then EDIT or UNDO, you will activate Compare mode. After you have programmed or edited a SINGLE sound,

Compare mode lets you hear the unedited sound that was originally stored in this memory slot. Press EDIT or UNDO repeatedly to switch back and forth between the Compare sound and the edited sound so that you can - surprise, surprise - compare the two sounds. Use the PARAMETER/BANK buttons and the VALUE buttons to step through the bank and program numbers of the Compare sound. This lets you search for a new memory slot for the edited sound and, at the same time, hear the sound that you will overwrite. The edited sound is not modified or overwritten during this process. Press STORE to do just that to the edited sound - store it. Press MULTI or SINGLE to quit the STORE process and/or exit Compare mode.



## UNDO

Pressing the Undo button cancels the last parameter change you have made to the current SINGLE program - it returns to the previous state. As the following example shows, the UNDO algorithm has a degree of intelligent: If for instance the Cutoff control is turned up continuously from 0 to 127, pressing the Undo button will take it right back to 0 (and not 126, although the last change was actually from 126 to 127).


Pressing the UNDO button again performs a REDO, i.e. it cancels the UNDO (in the above example Cutoff would revert to 127). Repeatedly pressing the UNDO button alternates between the two states.

The UNDO function can also be called up after the Virus has received a program change message - whether via MIDI or on the Virus itself. In Single mode, the last edited sound is restored -

so it is not lost even after several program change messages (as long as none of the other programs are edited in any way). In Multi Single mode, all edited sounds can be restored even after changing to another Multi program.

In Multi-Single-Mode the last edited patch of the current part is being restored. Even after a Multi-Program-Change all 16 edit buffers can be recalled.

## THE MODULATION MATRIX AND SOFT KNOBS

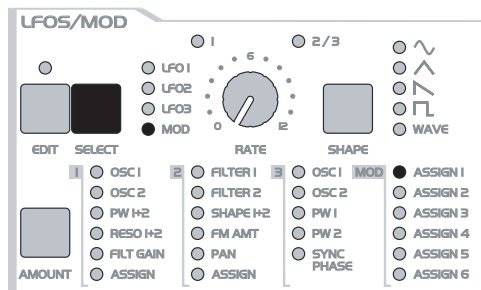

## CREATING MODULATION CONFIGURATIONS VIA ASSIGN

It is generally a good idea for a synthesizer to allow users to define modulation paths themselves i.e. to be able to connect any modulation source with any destination. Sometimes you might have a wild idea which would not be possible using the more directly available "hard-wired" paths - so a flexible modulation matrix is a real bonus for creative users. The Virus modulation matrix can be programmed using the

so-called ASSIGN units, which are accessed from within the LFOS/MOD section by pressing the SELECT button and then the entry “MOD”.

Each of the the six ASSIGN units can be used to route a modulation source to one or more modulation destinations. Select one of the available modulation sources (under SOURCE) and one or several of the available destinations (DESTINATION). Each destinations has an modulation intensity parameter (AMOUNT). To maintain compatibility with earlier Virus models, ASSIGN 2 has two destinations and ASSIGN 3 has three (each with independent AMOUNTs). ASSIGNS 4 to 6 have only a single modulation destination each.

These ASSIGN options serve several purposes: for one, they let you assign an external MIDI controller, for example, the keyboard’s modulation wheel, to the desired parameter. You can also chose to use the sound generator’s internal modulators, such as LFOs and envelopes, as modulation sources. The control range of the source may be limited via the AMOUNT values or inverted so that the modulation occurs strictly within the desired value range for the target parameter. For your target parameters, you can chose from among virtually all sound parameters that feature an infinitely variable control range – ergo, you have more than 100 modulation destinations at your disposal! Since the sources and destinations may be selected independently, you may even modulate a single parameter by using up to six modulation sources simultaneously. For this purpose, the control signals of the modulation sources are added up or overlapped. Conversely, you can also modulate up to nine parameters with just one controller, which gives you all kinds of sophisticated sound morphing options. For this purpose, select the same source for all six ASSIGN options so that it modulates all nine possible destinations. This lets you radically reshape sounds and even transform or morph them into entirely different sounds.

In addition to the six ASSIGN options, the user interface features – as discussed earlier – a modulation destination for LFO 1 and 2 called ASSIGN. Here the same principle applies: you can select a modulation destination and vary modulation intensity as you see fit. The only difference here is that the modulation source, i.e. the respective LFO, is a fixed default that you can’t change.



■ You’ll find a list of available sources and DESTINATIONS in the appendix. (see “Appendix” on page 161).

## THE SOFT KNOBS (CONTROLS)

The VIRUS has two freely assignable potentiometers which are particularly useful for giving direct access to parameters which are otherwise only available from within the menus. The destination parameters are defined in the Edit menu (SOFT KNOB 1/2 MODE). There are two parameters for each knob, one global and one local i.e. applying only to the current SINGLE program (which will override the global definition if defined). SOFT KNOBs always work in JUMP mode. SOFT KNOB 2 doubles as a value control, and therefore only works as a SOFT KNOB when the Virus is in Play mode i.e. no Edit menu is selected.



These SOFT KNOBS operate in three different modes:

- **GLOBAL** The knob controls the parameter that you have set to Global in the SOFT KNOBS menu regardless of what the other settings and the selected SINGLE program may be.
- **SINGLE** The knob controls the parameter that you have set to Single in the SOFT KNOBS menu. The setting for this parameter is stored in the SINGLE program and called up whenever you select this program. If, however, you have not selected a parameter for this program (SOFT KNOB Single = OFF), the setting for SOFT KNOB Global is automatically enabled.
- **MIDICONTROL** Here the controller number entered in the SOFT KNOBS MIDI menu is sent regardless of what the other settings and the selected SINGLE program may be. Comparable to a small MIDI fader box, this mode is used to control connected MIDI devices. Note that this information is not processed internally in the VIRUS.

The setting for the actual SOFT KNOB mode is global. Under normal circumstances, you should set SOFT KNOB mode to "Single" because this is the most versatile mode. When you select a SINGLE sound whose SOFT KNOB mode is set to "Single", this setting is of course enabled. If not, Global SOFT KNOB mode is enabled.

For each SOFT KNOB, you can choose a short description from a list in the menu, and this will be saved as part of the SINGLE program. In Play mode, this will appear in the display – simply to remind you of what each SOFT KNOB does while you are playing your Virus.

You can choose one of the following descriptions for each SOFT KNOB:

ATTACK, SUSTAIN, DECAY, RELEASE, FILTER, CUTOFF1, CUTOFF2, CUTOFF, RESO, BALANCE, FX AMT, DLY AMT, CHO AMT, PHA AMT, DIS AMT, DETUNE, SHAPE, OSC VOL, OSC BAL, NOISE, RINGMOD, SUBOSC, FM, TONE, TEMPO, SPEED, SCREAM, DEPTH, FEAR, FLOW, FAST, SLOW, MORPH, RATE

Please note that these are only for descriptive purposes – you are not changing the function of the SOFT KNOB here!




## ■ RANDOM PATCH GENERATOR

The RANDOM PATCH GENERATOR can be used to generate a new sound automatically or to modify an existing sound at random. The PAR DEPTH and AMOUNT parameters let you determine how radically the sound is changed. Depending on the values that you set here, the RANDOM PATCH GENERATOR will do anything from modifying sound parameters subtly to morphing one sound into an entirely different sound.

The RANDOM PATCH GENERATOR is accessed by pressing the RANDOM button. The results of randomization are sent directly to the edit buffer so they can be listened to immediately. RANDOM can be used repeatedly to cause even more random changes to the sound. If you are happy with the results, you should store the sound in one of the SINGLE programs (Banks A or B).

If you want to start from the original sound again, you should go back into Play mode and select the sound again (e.g. by changing to another sound then back again).

UNDO can be very useful here, as it cancels the effect of the last randomization. REDO also works here (press the Undo button again) – it restores the sound to the last randomized version i.e. the sound is returned to how it was immediately before using the Undo function.

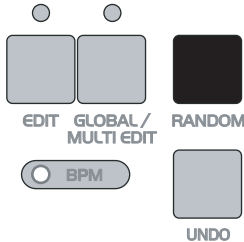

## PAR DEPTH

This parameter determines the number of sound parameters that are influenced by the RANDOM PATCH GENERATOR. If you enter a low value for PAR DEPTH, just a few parameters will be modified. Beyond that, the manner in which the few parameters are edited assures that the sound is manipulated “organically”.

This simply means that it isn’t bent radically so that, for example, the given sound can still be played “tonally”.

As you increase the values for PAR DEPTH, other parameters that have a greater impact on the timbre of the sound are changed. At higher values, the RANDOM PATCH GENERATOR tends to generate noise-like sounds or special effects.



## AMOUNT

This parameter determines the intensity of the RANDOM PATCH GENERATOR’s effect on the sound parameters. At lower values, sound changes are fairly subtle, but you can intensify the effect by repeatedly pressing the STORE button. Higher values introduce fundamental changes to the sound.




■ *Be aware that RANDOM PAR DEPTH and RANDOM AMOUNT are not actual sound parameters. They merely set the parameters for the RANDOM PATCH GENERATOR and only take effect when the RANDOM PATCH GENERATOR is activated. Not until then will the sound be changed.*

## CATEGORIES

The VIRUS gives you the option of classing the stored SINGLE sounds in categories. With the benefit of these categories, you'll be able to find a desired sound much faster.

You have the following categories at your disposal:

■ *Off, Lead, Bass, Pad, Decay, Pluck, Acid, Classic, Arpeggiator, Effects, Drums, Percussion, Input, Vocoder, Favourite 1, Favourite 2, Favourite 3*

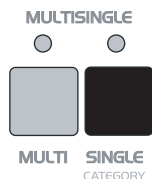

Every SINGLE sound can be assigned to up to two categories by means of the parameters CATEGORY 1 and CATEGORY 2. For example, you could assign the attributes "Bass" and "Acid" or "Lead" and "Favorite 1" to a given sound. These categories may be changed at any time and can be stored along with the sound. The factory sounds are assigned default categories.

Once you've assigned categories, you can search for the sounds within a specific category in SINGLE mode and MULTI-SINGLE mode:

Press and hold the SINGLE button, then use the PARAMETER buttons to select the category in which you want to search for sounds. Hold the SINGLE button down and use the VALUE buttons to select sounds that are assigned to the

currently selected category. It doesn't matter if this sound has been assigned to the category via CATEGORY 1 or CATEGORY 2; in either case, it will show up in the list. While you're selecting sounds, SINGLES that don't belong to the currently selected category are simply skipped over when you hold the SINGLE button down.

## THE EFFECTS SECTION

For every SINGLE program and every PART, you can access up to six different stereo effects individually. You'll find these effects – RING-MODULATOR, DISTORTION, ANALOG BOOST, EQUALIZER, PHASER and CHORUS – in the EFFECTS menu. In MULTI mode, you thus have a total of 98 simultaneously available effects.

The the Delay/Reverb section is available just once, but you can address it individually via the PARTs' Effect Send parameter. In the signal path, all effects are connected in series in accordance with their sequence in the Effects menu.

Each SINGLE program contains its own settings for the Delay/Reverb section. In MULTI mode, the sound programs involved share the same delay/reverb section. For this reason, the parameter values are determined by the settings of the currently active MULTI program.

"The internal Effects" on page 82

## AUDIO INPUTS

You can also opt to use external audio signals in place of the on-board oscillators for the sound programs or MULTI PARTs. The VIRUS is equipped with two inputs for external signals. You can route these to its sound generating components (the filters, the saturation stage as well as the volume and panorama stage) or patch them directly to the effects section of the VIRUS. External audio signals may also be used as carrier or modulator signals for the vocoder. Any PART that you use to process an external audio signal in MULTI mode can, like every other PART, be routed freely to one or two of the six audio outputs.

As a rule, when you're processing external audio signals, you need to distinguish between the following two operating modes:

- **DYNAMIC** To make external signals audible in this operating mode, the volume envelope must be triggered via a note. This option, for example, lets you create typical gater effects. INPUT Dynamic mode is also polyphonic. If you set the KEYFOLLOW value for the filters to 100%, the resonant frequencies of the filters and oscillators can be played in a tempered manner via the INPUT signal. This lets you play entire chords as well as arpeggiator lines using the filters. The noise generator is also active in INPUT mode.
- **STATIC** In Input Static mode, the external audio signals are audible via the output without having to trigger a note. Bear in mind that the oscillators as well as all functions that have to do with trigger and pitch are disabled (envelopes, LFO Env mode, keyfollow...) In INPUT Static mode. When you set the device to this mode, one voice of the VIRUS is activated automatically. If you select a stereo source (L+R) for INPUT Select, two voices are activated much like in UNISON mode: Twin.

In this case, you can also use the UNISON Pan Spread parameter to determine the basic width of the panorama and UNISON LFO Phase to shift the LFO phase position between the voices.

- **TO EFFECTS** An alternative to INPUT Static mode, here the audio signal is routed directly to the effects section of the SINGLE program or PART. This mode doesn't use the voices of the VIRUS, which means that its polyphonic performance remains fully intact and available. The filter section is unavailable in this mode.

```
1 INPUT
Mode Dynamic
```

## OSC VOLUME / INPUT

When one of the two INPUT modes is activated, the OSC VOL knob rather than the oscillators controls the level of the INPUT signal in front of the Filter section and of course also the gain of the SATURATION stage. In INPUT Dynamic mode, the level increases quite rapidly when you play several voices polyphonically. The reason for this is that – in contrast to when you're dealing with several oscillator signals – the voices are correlated because they are receiving an identical input signal. In the event that the VIRUS generates distortion when you're dealing with this type of signal routing set-up, be sure to back off the input level a tad via the OSC VOL knob.

## INPUT LEVEL INDICATOR

Alternatively, the RATE LEDs of LFO 1 and 2/3 can also serve as level indicators for the left and right external audio inputs. The VIRUS automat-

ically switches to this level indicator mode when the selected SINGLE program accesses the external audio inputs. The LEDs will flash rapidly to indicate that the inputs are being overloaded. You should dial in the proper level on the device that is sending the analog signals. The reason for that you want to feed the highest possible clean signal level to the analog-to-digital converters of the VIRUS so that they will deliver the best possible performance.

## ■ INTERNAL AUDIO ROUTING

---

### AUX BUSES

The VIRUS is equipped with several analog outputs and inputs. We figured that you might want to connect an input with an output via a patch cord so that you can process a part routed to this output via another part that is addressed by this input, for example, to have on part filter the other part.

You can do this if you like, but the good news is that you don't have to mess with patch cords because the VIRUS gives you internal signal routing options in the form of stereo aux buses (bus is another term for circuit) that let you configure this type of set-up for two or several of these PARTs. The two aux buses appear as virtual outputs in the OUTPUT Select menu and as virtual inputs in the INPUT Select menu. In MULTI mode, the output signal of a PART (or several PARTs) may be routed via OUTPUT Select to one of the two aux buses. In order to make this signal audible, you must select the same aux bus for another PART (or several PARTs) via INPUT Select and set the given SINGLE program to Input mode (Static or Dynam-

ic). You can then process the signal patched in to this PART via the aux bus exactly the same way you would process conventional analog signals routed in via the external input.

There is, however, a simpler option than this relatively involved processed of connecting PARTs directly to one another: You can also use one of the aux buses as a "second output" for the PART. We'll look at this function a little later in the section "SECOND OUTPUT".

### THE AUDIO OUTPUTS

In MULTI mode, you can choose a mono or stereo audio output in the OUTPUT Select menu independently for every PART. The signal can also be routed to the aux buses that were discussed earlier.

In addition, you may also define a second mono or stereo output in the SECOND OUTPUT menu (under the MAIN EDIT menu). This second output is global, in other words, it applies to all PARTs. Using the SECOND OUTPUT Balance parameter, you can set the levels at which the output signals of the PARTs are routed to this second output individually.

In conjunction with the conventional output of the given sound, you end up with a quadrasonic signal that is suitable for Surround applications. Using Panorama (left, right) and the SECOND OUTPUT Balance (front, back), you can create a genuine quadrasonic mix in the VIRUS and automate it via a sequencer.

When you opt to use one of the aux buses as a second output, the aux bus can also serve as an FX loop. You can route the aux signal to a PART and have the PART process this signal (via filters, effects etc.) further.



In contrast to the majority of other effects, the delay/reverb section is not available individually for each PART. Instead, it processes the signals of the PARTs collectively. You can, however, control the intensity of the effect individually for each PART using the respective Effect Send parameter. Consequently, the delay/reverb section has just one signal output, which cannot be distributed to the outputs of the individual PARTs.

This is why, for example, the delay effect of a PART that is routed to the pair of outputs labeled OUT 2 will still be audible on OUT 1. This can be desirable yet may also lead to confusion. To encourage the former and prevent the latter, set the Effect Send parameter of the PART to zero when you're using individual outputs.

In MULTI mode, the delay/reverb section features its own OUTPUT Select that is independent of the PARTs.


## ■ ADDITIONAL FUNCTIONS

### PANIC FUNCTION

The VIRUS features a Panic function to remedy stuck notes caused by MIDI transmission parity errors and the like. When you press the two TRANSPOSE buttons simultaneously, then all voices of the VIRUS that are still sounding will be released.


A double-click on both buttons initiates a controller reset. The various voices that are still sounding will be cut off instantly and controllers

such as the modulation wheel, channel volume and pitch bender are reset to the default settings.

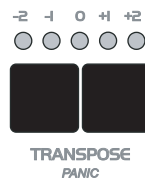

### AUDITION FUNCTION

On the VIRUS panel, you can trigger notes without using a keyboard. When you press the OSCILLATOR EDIT and SYNC buttons simultaneously, the VIRUS will play the note C3. If you hold the buttons down for longer than a second, the note will continue to sound after you release the buttons.

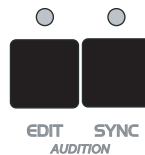

### RESET FUNCTION

If you get the impression that the VIRUS is behaving unstable or indeed strange, we suggest you perform a system reset. Holding the keys LFO 1 SHAPE while switching the VIRUS on, performs a system reset. No data will be lost during this procedure, although some global system settings as "Global Channel" will be reset.





# Synthesis Parameters

# Oscillators

■ *The following section lists all parameters in the VIRUS, each with a brief definition or explanation. For the purpose of clarity, we ordered the parameters with a dedicated control element according to the module you will find it in.*

## ■ OSCILLATOR-1/2/3 (PANEL)

---

### SHAPE

This control feature lets you determine the waveshape for the WAVE section (one of 64 variable spectral waveshapes). The waveshape is infinitely variable from sawtooth through to pulse waves. Wave or pulse width selection is executed via the SHAPE and WAVE SEL/PW control features (see appropriate section): If SHAPE has a value less than the value of the center position, then WAVE SEL/PW determines the waveshape; if the SHAPE value is higher than that of the center position, then WAVE SEL/PW determines the pulse width.

### WAVE SEL/PW

has two functions, depending on the SHAPE (see appropriate section) value:

- When SHAPE has a value lower than that of the center position, then WAVE SEL/PW lets you select from the 64 spectral waveshapes available in the ROM of the VIRUS. Waveshape

1 is a sine wave; No. 2 a triangle, the remainder of the waves feature different combinations of frequencies.

- When the SHAPE value is higher than that of the center position, then WAVE SEL/PW determines the pulse width: At the far left position the pulse width is 50%, at the far right it is 0%, which means the wave no longer oscillates.

### SEMITONE

Determines the interval between the second respectively third oscillator and the first oscillator: Control range +/-48 semitones, assigned in semitone steps.

### DETUNE

Detunes the second respectively third oscillator relatively to the first. With this parameter, you can dial in everything from slight deviations in pitch to major fluctuations between the two oscillators.

### SYNC

Synchronizes the second oscillator with the first: The SYNC function forces Oscillator 2 to interrupt its wave cycle and restart it at the same time as Oscillator 1 starts its cycle. The effect of this measure is that pitch deviations and intervals are no longer audible as such; what you hear are tonal modifications: Repeated interruption of the Oscillator 2 wave cycle generates new tonal spectra with a great deal of overtone content. The tone of a given spectrum can be influenced via the SEMITONE knob, among other control features.

## FM AMOUNT

Controls the frequency modulation intensity of the second oscillator by the first. Depending on the selected FM AMOUNT and the interval between the oscillators, the frequency modulation generates everything from slightly to radically enriched spectra. In the VIRUS you have the option of combining the two functions called oscillator synchronization (SYNC) and frequency modulation (FM AMOUNT) to generate new harmonic spectra. The characteristics of the frequency modulation can be modified with the FM Mode parameter (in the *OSCILLATOR EDIT* menu). You may also select an external audio signal and have Oscillator 2 modulate its frequency.

## OSCILLATOR 3 ON BUTTON

Activates the third oscillator. Because most sounds only require two oscillators, the third oscillator has been made optional, i.e. it has to be switched on whenever necessary.

Oscillator 3 takes a certain amount of computing power, and the trade-off is a reduction of the maximum polyphony: Playing a note using oscillator 3 uses up about an extra third of a voice from the available polyphony. In other words: Playing a three-voice chord using a sound which includes oscillator 3 would use up four (and not three) of the available voices.

## ■ OSCILLATOR (EDIT-MENU)

### OSCILLATOR-1 WAVE

Selects among of 64 spectral waveshapes. This parameter is identical to WAVE SEL/PW (see appropriate section) when SHAPE (see appropriate section) is set to the left half of its control range. However, in contrast to WAVE SEL/PW, WAVE is always available regardless of the current SHAPE setting.

```

1 OSCILLATOR 1
Wave          Sin4

```

### OSCILLATOR-1 KEY FOLLOW

Determines the intensity of the pitch control via the keyboard: At the value +32 (standard setting) the oscillator is controlled normally, i.e. the octave you are playing is identical to the oscillator octave; at +63 every ascending octave you play transposes the oscillator upwards by two octaves (whole note scale); +15 transposes the oscillator upwards by one octave for every two ascending octaves you play (quarter note scale); at 0 the keyboard control option is off. Negative values generate opposite control intensities.

```

1 OSCILLATOR 1
Keyfollow    +324

```

## OSCILLATOR-2 WAVE

Selects among of 64 spectral waveshapes. This parameter is identical to WAVE SEL/PW (see appropriate section) when SHAPE (see appropriate section) is set to the left half of its control range. However, in contrast to WAVE SEL/PW, WAVE is always available regardless of the current SHAPE setting.

```
1 OSCILLATOR 2
Wave          Sin
```

## FM MODE

Oscillator 2's frequency modulation can be executed in a variety of ways using a different signal or modulation sources. You can also select an external audio signal for frequency modulation. Set the intensity of the modulation via the FM AMOUNT knob. Choose the sine wave for Oscillator 2 in order to achieve the most transparent form of frequency modulation. Here's a look at the FM sources that you have at your disposal:

```
1 OSCILLATOR 2
FmMode       PosTri
```

- **POSTRI** One-way FM with a positive triangle generated by Osc1.
- **TRI** Linear FM with a bipolar triangle generated by Osc1.
- **WAVE** The selected Osc1 wave is the FM source. This lets you in some cases create typical DX7-FM sounds (here *OSCILLATOR 1* SHAPE should be set to WAVE).

- **NOISE** The noise generator is the FM source (see also NOISE Color). Excellent for drum sounds.
- **INPUT** Here the mono or stereo signal from external analog inputs or from an internal aux bus may be routed to the frequency modulation. The input FM is in real stereo, even in connection with UNISON mode.

## OSCILLATOR-2 KEY FOLLOW

Determines the intensity of the pitch control via the keyboard: At the value +32 (standard setting) the oscillator is controlled normally, i.e. the octave you are playing is identical to the oscillator octave; at +63 every ascending octave you play transposes the oscillator upwards by two octaves (whole note scale); +15 transposes the oscillator upwards by one octave for every two ascending octaves you play (quarter note scale); at 0 the keyboard control option is off. Negative values generate opposite control intensities.

```
1 OSCILLATOR 2
Keyfollow    +32
```

## FILT ENV -> PITCH

This parameter determines the intensity at which the filter envelope controls the pitch of the second oscillator (PITCH OSC 2).

```
1 OSCILLATOR 2
FltEnv Ptch  +0
```

## FILT ENV -> FM

It determines the intensity at which the filter envelope controls the frequency modulation (FM AMOUNT). This as well as the previous parameter are "relics" from the predecessor model of the VIRUS. Modulations such as these may also be implemented via the Modulation Matrix (see the section "ASSIGN" below).

```

1 OSCILLATOR 2
FltEnv Fm    +04
  
```

## OSCILLATOR-3 MODE

The VIRUS offers a third master oscillator per voice that you can activate whenever you need it. It lets you come up with even more complex sounds by adding more oscillations and spectra to the signal. When Oscillator 3 is switched on, (i.e. OSCILLATOR 3 mode is not set to the OFF position), the polyphony of the VIRUS decreases by up to six voices, depending on how many voices use the third oscillator in MULTI mode.

```

1 OSCILLATOR 3
Mode          Off4
  
```

The second position of OSCILLATOR 3 mode is called SLAVE. Here Oscillator 3 is active, but – just like when it is set to the OFF position – no further parameters are available and visible. In this operating mode, Oscillator 3 is the "twin" of Oscillator 2. It adds further oscillations, thus making the sound fatter and more animated. Oscillator 2 and 3 are handled collectively using Oscillator 2's control features just as if the two were a single oscillator. All settings that you dial

in for Oscillator 2 apply to Oscillator 3, with one exception – DETUNE. This parameter runs counter to that of Oscillator 2.

You can select the waveshapes individually for Oscillator 3 via the following OSCILLATOR 3 mode options: sawtooth, square (pulse width modulation), sine, triangle and all further spectral waveshapes. You have three further parameters available once you set Oscillator 3 to an individual waveshape. These are explained further below. All other parameters as well as the settings for the oscillator modulations (LFO pulse width modulation and so forth) are dictated by Oscillator 2. This doesn't limit the functionality of the third oscillator by much (if at all), but it certainly facilitates intuitive handling. The FM, Sync and Ring Modulator functions are not available for the third oscillator.

Like all other oscillators, the level of Oscillator 3 is controlled via OSCVOL.

## OSZILLATOR-3 VOLUME

The individual volume level of oscillator 3. Additionally the level is controlled by OSC VOL. (Not available if OSCILLATOR 3 MODE = "OFF" or "SLAVE".)

```

1 OSCILLATOR 3
Volume       644
  
```

### OSCILLATOR-3 SEMITONE

Transposes Oscillator 3 in semitone steps. Control range: +/-4 octaves. (Not available if OSCILLATOR 3 MODE = "OFF" or "SLAVE".)

```
1 OSCILLATOR 3  
Semitones +04
```

### OSCILLATOR-3 DETUNE

Detunes the third oscillator relatively to the first. With this parameter, you can dial in everything from slight deviations in pitch to major fluctuations relatively to the other oscillators.

```
1 OSCILLATOR 3  
Detune +04
```

### OSCILLATOR-3 PHASE INIT

This feature lets you select the oscillator phase position at the start of a note. At a value of 0, all oscillators oscillate freely much like in a traditional analog synthesizer. At values of 1 and higher, Oscillator 1 starts the note with a phase angle of 0, whereas the phase position of the second oscillator is shifted increasingly at ascending values. The Phase position of oscillator 3 is shifted to the opposite direction. With this parameter, the attack phase of every note is identical, which is a handy feature for programming drums and percussive sounds. In con-

junction with Oscillator 3 and PHASE INIT, you can create prominent overtones that are initiated at the beginning of a note.

```
1 OSCILLATOR 3  
PhaseInit Off4
```

### SUB OSCILLATOR WAVE

Switches the waveshape of the SubOscillator between SQUARE and TRIANGLE.

```
1 SUB OSCILLATOR  
Shape Square4
```

### NOISE COLOR

- **MIDDLE** Neutral (White noise, all the frequencies are evenly distributed.)
- **NEGATIVE** Lowpass (Pink noise, dull and more bass)
- **POSITIVE** Hipass (Bright and thin noise)

When the noise generator is used by Oscillator 2 for frequency modulation (see FM mode), the NOISE COLOR setting also influences the sound of the frequency modulation.



# Filter

## ■ FILTERS (PANEL)

---

### CUTOFF

Determines the cutoff frequency of Filter-1 and 2 (with exceptions; see CUTOFF 2).

### RESONANCE

Controls the resonance (also called filter feedback or Q factor). Depending on the FILT SELECT setting, RESONANCE affects the first filter, the second filter or both filters.

### ENV AMOUNT

Determines the modulation intensity of the cutoff frequency filter envelope. Depending on the FILT SELECT setting, ENV AMOUNT affects the first filter, the second filter or both filters. In contrast to virtually all other modulation intensity parameters in the VIRUS, ENV AMOUNT is a unipolar parameter. The polarity of the modulation can be changed individually for each filter via the ENV POLARITY function in the FILTER EDIT menu.

### FILTER BALANCE

Has different functions depending on the FILTER ROUTING setting (see appropriate section as well): In the parallel FILTER ROUTING operating modes PAR 4 and SPLIT, it controls the balance of volume levels between the two filters - or in actuality SATURATION and Filter-2.

Technically, in the serial FILTER ROUTING operating modes SER 4 and SER 6, the left half and the right half of the control range address different parameters: When the knob is set to the far left position, you will hear Filter-1/Saturation exclusively, whereas Filter-2 is blended into the mix as you rotate the knob towards the center position. When the knob is set to the far right position, you will hear Filter-2 exclusively, whereas Filter-1/Saturation is blended into the mix as you rotate the knob towards the center position.

Consequently, you must set FILTER BALANCE to the center position if you want both filters in series (in equal amounts) in the signal path.

### CUTOFF 2 (OFFSET)

Controls the cutoff frequency of Filter-2. Normally, CUTOFF 2 does not operate absolutely, but relatively to CUTOFF: The cutoff frequency of the second filter is subordinate to the CUTOFF value you determined for the first filter. However you can use the CUTOFF 2 knob to dial in a relative +/- deviation in frequencies, i.e. a higher or lower frequency (OFFSET). When you set CUTOFF 2 to the center position, both filters have the same CUTOFF frequency. In FILTER EDIT Menu, you can access CUTOFF LINK ON/OFF to sever the link between CUTOFF and CUTOFF 2. In this case the two knobs CUTOFF and CUTOFF 2 are independent cutoff controls for Filters 1 and 2, respectively.

## FILT 1 MODE & FILT 2 MODE

Selects the operating mode of the indicated filter:

- **LP** The low pass filter suppresses frequencies higher than the *CUTOFF* frequency (see appropriate section) and allows the lower frequencies through.
- **HP** The high pass filter works in the opposite manner of the low pass filter: It suppresses the lower frequencies in a signal and lets the higher frequencies pass.
- **BP** The band pass filter suppresses both ends of the tonal spectrum and allows only a narrowly defined bandwidth of the original sound to pass.
- **BS** The band stop filter, band reject filter or notch filter works in the opposite manner of the bandpass filter. It allows all of the frequencies of a signal except for a narrow frequency band around the cutoff to pass. The term “notch” is fairly descriptive; you might say this filter chops a notch out of the sound spectrum.

## FILT 1 SELECT & FILT 2 SELECT

This control feature is used to allocate the three knobs *RESONANCE*, *ENV AMOUNT* and *KEY FOLLOW* to the first filter, second filter or both filters. The currently active assignments are indicated by the integrated LEDs. To control both filters simultaneously via the knobs, you must first press both buttons simultaneously. *SELECT* pertains to the corresponding knob located on the *VIRUS* only, but not to the sound parameters it controls. These parameters exist separately in both filters regardless of the *SELECT* setting. This is why for instance you should control the resonances of the respective filters via different MIDI Controllers. In actuality

*SELECT* only determines if the knob in question sends its value to the first filter, second filter or both filters.

## FILTER ENVELOPE

---

### ATTACK

Determines the amount of time it takes for the filter envelope to rise to its maximum level. The higher the *ATTACK* value, the longer it takes for the envelope to rise to maximum volume after the start of a note.

### DECAY

Determines the amount of time it takes for the filter envelope to fade out. The higher the *DECAY* value, the longer it takes for the envelope to fall from its peak level to the *SUSTAIN* value.

### SUSTAIN

Determines a variable level for the filter envelope at which it remains after the end of the *DECAY* phase (see appropriate section). The duration of the *SUSTAIN* phase depends on the *TIME* value (see appropriate section).

### RELEASE

Determines the speed or rate at which the volume of the filter envelope decreases after the end of a note. The higher the *DECAY* value, the

longer it takes for the envelope to fall from its current level to the minimum level, when the key is released.

## TIME

Sets the bipolar time parameter for the filter envelope. It determines the envelope's response once it reaches the SUSTAIN phase (see appropriate section): If the knob is set to the center position (12 o'clock) indicated by the mathematical infinity symbol, then the SUSTAIN level remains constant through to the end of the note; if you turn it counter-clockwise to the left (towards FALL), then the level drops off at an increasing rate towards the minimum level; If you turn the knob clockwise to the right (towards RISE), the level rises at an increasing rate to maximum.

■ *The parameter Sustain Time is located in the main edit menu*

## ■ FILTER-EDIT-MENU

### SATURATION CURVE

The SATURATION stage in the filter section offers a selection of different saturation or distortion characteristics. You can use these to add overtones to a sound. Beyond that, you are free to radically bend sounds using further DSP effects. The intensity of the distortion or DSP effects can be varied considerably via the second half of the OSC VOL control range. For the distortion curves, this intensity range is equivalent to a gain boost of 12 decibels, in the case of the

"Digital" curve as much as 24 decibels. A special feature of the VIRUS' SATURATION stage is that, despite the fact that its gain is boosted, the signal level is kept constant via OSC VOL so that only the tonal color or timbre of the sound is varied.

The SATURATION stage is always downstream of (post) Filter-1 irrespective of the given filter routing. Consequently, in serial filter modes, the SATURATION stage is always located between the two filters. You can thus filter the oscillator signal conventionally with the first filter, distort the signal, and process the distorted signal via the second filter as you see fit.

The Effects section of the VIRUS features a further distortion module called DISTORTION. Its design is largely identical to that of the SATURATION, except for one major difference: whereas SATURATION affects each voice separately, DISTORTION processes all voices collectively in the effects section. This makes a huge difference in tone.

Let's take look at the SATURATION modes:

- **OFF** The signal is not processed.
- **LIGHT, SOFT, MIDDLE, HARD** Different analog distortion curves with different characteristics and intensities.
- **DIGITAL** Digital distortion with hard clipping.
- **SHAPER** Sine characteristic curve with several wave cycles. With the Shaper, you can drastically warp signals. In some cases, the results are similar to the spectra of linear frequency modulations.
- **RECTIFIER** Continuous rectification of the signal; this type of distortion is independent of the given level.
- **BITREDUCER** Continuous reduction of the digital signal's bit depth; generates digital quantization noise.

- **RATEREDUCER** Continuous reduction of the digital sampling rate; generates digital aliasing.
- **RATE+FLW** The RateReducer with keyfollow; the sampling rate follows the played pitch.
- **LOWPASS** 1-pole low-pass filter for moderate processing of high frequencies.
- **LOW+FLW** The low-pass filter with keyfollow; the cutoff frequency follows the played pitch.
- **HIGHPASS** 1-pole high-pass filter for moderate processing of low frequencies.
- **HIGH+FLW** The high-pass filter with keyfollow; the cutoff frequency follows the played pitch.

To reiterate the point, the amount of distortion, intensity of the DSP effects, and the cutoff frequencies of the 1-pole filter are controlled via the OSC VOL knob.



## FILTER ROUTING

This feature offers four filter routing options which allow you to operate the filters in series or in parallel:

- **SER-4** The filters are switched in series; with two poles each (12dB), both filters have the same slope for a total of four filter poles (24dB).
- **SER-6** The filters are switched in series; Filter-1 has four poles (24dB), Filter-2 has two poles (12dB) so the overall slope is equivalent to six poles (36dB).
- **PAR-4** The filters are switched in parallel and feature two poles each (12dB).
- **SPLIT** The filters are switched in parallel and feature two poles each (12dB). Additionally, they receive independent input signals (more on this later). The stereo position of the signals can also be manipulated via the parameter TWIN MODE PAN SPREAD (see appropriate section) in the EDIT menu.



Regardless of which FILTER ROUTING option you chose, the SATURATION stage is always post-Filter-1.

## KEY FOLLOW FILTER 1/2

Determines the extent to which the filter frequency follows the pitch (Note Number) and the Pitch Bend. Depending on the FILTER SELECT setting, KEY FOLLOW affects the first filter, the second filter or both filters. The function uses C 1 (MIDI Note Number 36) as a neutral starting point or base note: Regardless of the KEY FOLLOW value, the filter frequency is not influenced

at this pitch. In the FILTER EDIT menu you have the option of freely defining the base note under KEYTRACK BASE.

```

1 FILTER 1
Keyfollow 304

```

### KEYFOLLOW BASE

This feature determines the base note for the filter KEYFOLLOW: When you press the key selected here, the filter frequency you determined manually has priority - i.e. it is not influenced in any manner - regardless of the KEY FOLLOW setting (see appropriate section) for the filters. As the interval between the KEYFOLLOW BASE value and the keys increases as you move up towards the higher end of the keyboard, the influence of KEY FOLLOW increases accordingly. KEYFOLLOW BASE affects both filters simultaneously.

```

1 FILTERS
KeyflwBase C14

```

### FILTER-1/2 ENV POLARITY

Switches back and forth between positive (POS) and negative (NEG) ENV AMOUNTs for Filter-1 (see appropriate section).

```

1 Filter-1
EnvPolarity Pos4

```

### FILTER-2 CUTOFF LINK

Switches the knob and the parameter CUTOFF 2 (see appropriate section) back and forth between two operating modes:

- **ON** In this mode, CUTOFF 2 operates relatively to the CUTOFF knob value rather than absolutely (OFFSET): The cutoff frequency of the second filter is - like the first filter - determined by the CUTOFF value. However you can dial in an offset (relative ascending or descending deviation) of the frequency via the CUTOFF 2 knob. At the center position (12 o'clock) of CUTOFF 2, the frequencies of the two filters are identical.
- **OFF** Now, the CUTOFF and CUTOFF 2 knobs are no longer linked and CUTOFF 2 operates absolutely in a control range of 0 to 127. In this case the CUTOFF and CUTOFF 2 knobs are two independent control features that determine the respective cutoff frequencies for Filter-1 and 2.

CUTOFF LINK pertains exclusively to the CUTOFF 2 knob and the corresponding parameter. CUTOFF 2 has no influence on the other parameters of the second filter.

```

1 FILTER-2
CutoffLink On4

```

### FILTER ENVELOPE SUSTAIN TIME

Sets the bipolar time parameter for the filter envelope. It determines the envelope's response once it reaches the SUSTAIN phase (see appropriate section): If the knob is set to the center position (12 o'clock) indicated by the mathematical infinity symbol, then the SUSTAIN level remains constant through to the end of the

note; if you turn it counter-clockwise to the left (towards FALL), then the level drops off at an increasing rate towards the minimum level; If you turn the knob clockwise to the right (towards RISE), the level rises at an increasing rate to maximum.

```
1 FILT ENV
SusTime      304
```

### AMPLIFIER ENVELOPE SUSTAIN TIME

See above.

```
1 AMP ENV
SusTime      1274
```



# Envelopes

## ATTACK

Determines the amount of time it takes for the amplifier envelope to rise to its maximum level. The higher the ATTACK value, the longer it takes for the envelope to rise to maximum volume after the start of a note.

## DECAY

Determines the amount of time it takes for the amplifier envelope to fade out. The higher the DECAY value, the longer it takes for the envelope to fall from its peak level to the SUSTAIN value.

## SUSTAIN

Sets a variable level value for the amplifier envelope at which it remains after the end of the DECAY phase (see appropriate section). The duration of the SUSTAIN phase depends on the TIME value (see appropriate section).

## RELEASE

Determines the speed or rate at which the volume of the amplifier envelope decreases after the end of a note. The higher the RELEASE value, the longer it takes for the envelope to fall from its current level to the minimum level, when the key is released.

## TIME

Sets the bipolar time parameter for the amplifier envelope. It determines the envelope's response once it reaches the SUSTAIN level (see

appropriate section): If the knob is set to the center position (12 o'clock) indicated by the mathematical infinity symbol, then the SUSTAIN level remains constant through to the end of the note; if you turn it counter-clockwise to the left (towards FALL), then the level drops off at an increasing rate towards the minimum level; if you turn the knob clockwise to the right (towards RISE), the level rises at an increasing rate to maximum.

■ *The Sustain Time parameter can be accessed from the main Edit menu as well as from the filter EDIT menu..*

# Mixer

## OSC BALANCE

Determines the balance between the Oscillators 1 and 2 volume level.

## SUB OSC

Determines the volume level of the SubOscillator.

## OSC VOLUME

This knob has two functions:

- In the left half of its control range up to the center position (MIDI value 64), OSC VOL determines the master volume of the three oscillators prior to the filter section input. The Noise Generator and the Ringmodulator are not affected by the master volume knob OSC VOL. Their level is controlled separately in the OSCILLATOR EDIT menu (see appropriate section).
- In the right half of the control range from the center position to the far right, OSC VOL increases the saturation intensity (Gain) for the input of the SATURATION stage (see appropriate section); however this adjustment is compensated post-SATURATION stage so that when you adjust the gain you are not actually increasing the volume, only manipulating the tonal spectrum in terms of saturation. The intensity of the remaining DSP effects available in the SATURATION Stage is controlled via the OSC VOL knob.

## NOISE VOLUME

The volume of the noise generator. As with the ring modulator, the volume is independent off the OSC VOL parameter.

## RINGMODULATOR VOLUME

The ring modulator multiplies the output of both oscillator 1 and 2 to create interesting sounds with rich enharmonic overtones. These overtones are highly dependent on the frequency coherence of both oscillators and it's waveforms. The frequency coherence can be changed, for instance use the OSC2 SEMI-TONE parameter. If the RINGMODULATOR VOLUME is zero, the ring modulator is switched off. OSC VOL does NOT affect the ring modulator level. Therefore the original oscillator signal can be levelled independently of the ring modulator.

You'll find another ring modulator in the effects section of the VIRUS. It, however, processes entirely different input signals.





# LFO and ModMatrix

## ■ LFO (PANEL)

---

### LFO SELECT

The SELECT button is used for selecting one of the three LFOs or the modulation matrix. The controls in the LFOs/MOD section only apply to the current selection (one of the LFOs or MOD).

### RATE

Determines the speed or rate of the LFO. In polyphonic sounds, the manually selected RATE value deviates slightly from voice to voice to liven up the sound of the LFOs, which also oscillate polyphonically. When the LFO is synced up to the master clock, the desired note value is selected via the RATE knob.

### SHAPE

Determines the waveshape of the LFO. You can select from a sine, triangle, sawtooth or pulse wave. WAVE opens a local menu. Here you can select 64 further LFO waveshapes in the display using the VALUE knob or the VALUE buttons. You can choose from a stepped random modulation (S&H; short for Sample & Hold), a smooth random modulation (S&G; short for Sample & Glide) and 62 cyclic modulations that are based on the oscillator modes. The latter allow you to create interesting rhythmic LFO modulations.

### AMOUNT (LFO-1)

After selecting LFO 1 (via the SELECT button) you can use the lower SELECT button to scroll down through the modulation destinations for LFO 1. If you press and hold the EDIT button at the same time, you can scroll in the other direction. The following destinations are available:

- **OSC 1** Pitch of Oscillator 1
- **OSC 2** Pitch of Oscillator 2
- **PW 1+2** Both pulse widths jointly
- **RESO 1+2** Both filter resonances
- **FILTER GAIN** An additional modulation destination of LFO 1. Here the input level of the filter section is modulated (and thus the subsequent saturation level). The effect of a FILTER GAIN modulation is a periodic change in the saturation level which is linked to a corresponding tremolo (periodic change in volume). If the signal is not saturated in any manner, then the only audible result is a tremolo effect. We purposely placed the modulation point in front of the filter section in the signal chain. This means that the distortion amount – i.e. the intensity of the effect – is also modulated when you activate SATURATION. Furthermore, you can use fast LFO oscillations to generate brief impulses (transients) in the oscillator signal that excite the resonant frequencies of the filters. The filters will fade out freely since their output signal is not affected by the FILTER GAIN volume modulation.
- **ASSIGN** A freely selectable sound parameter for LFO modulation. The destination can be controlled on the previous menu page.

If the modulation intensity for the selected destination is not „0“, its LED stays lit after you quit the menu.

```
1 LFO 1
Amount          124
```

### AMOUNT (LFO-2)

After selecting LFO 2 (via the SELECT button) you can use the lower SELECT button to scroll down through the modulation destinations for LFO 2. If you press and hold the EDIT button at the same time, you can scroll in the other direction. The following destinations are available:

- **FILTER -1** The frequency of the first filter
- **FILTER -2** The frequency of the second filter
- **SHAPE 1+2** The SHAPE parameters of both oscillators jointly
- **FM AMOUNT** An additional modulation destination of LFO-2. The intensity of the frequency modulation of Oscillator 2 is modulated.
- **PAN** Panorama position
- **ASSIGN** A freely selectable sound parameter for LFO modulation. The destination can be controlled on the previous menu page.

If the modulation intensity for the selected destination is not „0“, its LED stays lit.

```
1 LFO 2
Amount          124
```

### AMOUNT (LFO-3)

After selecting LFO 3 (via the SELECT button) you can use the lower SELECT button to scroll down through the modulation destinations for LFO 3. If you press and hold the EDIT button at the same time, you can scroll in the other direction. The following destinations are available:

- **OSC 1** The pitch of Oscillator 1
- **OSC 2** The pitch of Oscillator 2
- **PW 1** The pulse width of Oscillator1
- **PW 2** The pulse width of Oscillator2
- **SYNCPHASE** Determines the phase position of Oscillator 2 when it is synced up to Oscillator 1 via the SYNC function.

While you are editing any one of these parameters, its LED will blink. If the parameter has a value other than „0“, the LED will remain lit after you quit the menu. Between PW 1 and PW 2 is another one for PW 1+2, which lets you set the modulation intensity for both filters at the same time. In this position, both the PW 1 and the PW 2 LEDs blink together. Similarly, the modulation intensity for OSC 1 and OSC 2 can be set at the same time, and the LEDs react accordingly.

```
1 LFO3
Dest          OSC-24
```

While you are dealing with one of the parameters discussed here, the corresponding LED will flash. If this parameter is assigned a value other than 0, the LED will illuminate continuously when you exit the menu.

Between the two positions Filter-1 and FILTER-2 you will find the position Filter-1+2, which lets you jointly control the modulation intensities of both oscillators. In this position, the Filter-1 and Filter-2 LEDs flash.

## ■ LFO (EDIT MENU)

### LFO-1 ENV MODE

Activates an operating mode in which the LFO oscillates like an envelope: The LFO cycles once only following the start of the note; the response of the LFO shifts from bipolar to unipolar. If the LFO waveshape S&H (Sample & Hold) is active, then the LFO is assigned a new random value with each new note. This new value is valid for the entire duration of the note.

### LFO-1 MODE

- **POLY** In polyphonic mode, each of the voices involved is assigned a dedicated LFO. The LFOs oscillate in different phase positions for each voice. This livens up the LFO modulation.
- **MONO** In polyphonic mode, all voices are assigned the same LFO. This accentuates the LFO modulation, making it more pronounced.

```

1 LFO1
Clock Poly
  
```

### LFO-1CLOCK

When you set it to OFF, the LFO oscillates in the normal manner, independently of the global Master Clock (CLOCK TEMPO). When you enter a note value here, the LFO rate is synced up to the global master clock. The length of the waveshape's cycle will then correspond to the note value that you have entered. You can also set the rate via CLOCK TEMPO (refer to the appropriate section) or synchronize it to external MIDI clock. When the LFO is synced up to the master clock, you can also select the desired note value via the LFO RATE knob.

```

1 LFO1
Clock 1/24
  
```

### LFO-1 CONTOUR

By LFO Contour you can now bend or "morph" (almost) all the LFO waveforms. A brief survey of the LFO Contour options for the different LFO modes follows:

```

1 LFO 1
Contour +0
  
```

- **SINE** Contour morphs from sine to a triangle wave (Contour to the left) or to a square wave (Contour to the right).
- **TRIANGLE** Contour morphs from a triangle to a declining (Contour to the left) or ascending sawtooth (Contour to the right).
- **SAWTOOTH** Contour morphs from a linear declining sawtooth or decay to any exponentially declining decay (Contour to the left) or to a square (Contour to the right).

- **SQUARE** Contour modulates the pulse width of the square wave.
- **WAVES** Contour "zooms" into the wave, thereby shortening the wave's loop length (Contour to the right).

### LFO-1 TRIGGER PHASE

Selects the position in the wave cycle - i.e. the phase position - at which the LFO starts oscillating in response to the start of a note. The control range of 1 to 127 is equivalent to phase positions of 0 to 360 degrees; the value 0 switches the KEY TRIGGER function completely off so that the LFO oscillates freely and appears on random phase positions at the start of a note.

```
1 LFO1  
TrigPhase Off
```

### LFO-1 KEY FOLLOW

Controls the intensity of the KEY FOLLOW function - i.e. the rate at which the LFO follows the pitch of a played note. At a value of 0, KEY FOLLOW is deactivated. At a value of 127, the rate doubles with each octave.

```
1 LFO1  
Keyfollow Off
```

### LFO-2 ENV MODE

Activates an operating mode in which the LFO oscillates like an envelope: The LFO cycles once only following the start of the note; the response of the LFO shifts from bipolar to unipolar. If the LFO waveshape S&H (Sample & Hold) is active, then the LFO is assigned a new random value with each new note. This new value is valid for the entire duration of the note.

### LFO-2 MODE

- **POLY** In polyphonic mode, each of the voices involved is assigned a dedicated LFO. The LFOs oscillate in different phase positions for each voice. This livens up the LFO modulation.
- **MONO** In polyphonic mode, all voices are assigned the same LFO. This accentuates the LFO modulation, making it more pronounced.

```
1 LFO2  
Clock Poly
```

### LFO-2 CLOCK

When you set it to OFF, the LFO oscillates in the normal manner, independently of the global Master Clock (CLOCK TEMPO). When you enter a note value here, the LFO rate is synced up to the global master clock. The length of the waveshape's cycle will then correspond to the note value that you have entered. You can also set the rate via CLOCK TEMPO (refer to the appropriate section) or synchronize it to external

MIDI clock. When the LFO is synced up to the master clock, you can also select the desired note value via the LFO RATE knob.

```

1 LFO2
Clock      1/24
  
```

## LFO-2 CONTOUR

By LFO Contour you can now bend or "morph" (almost) all the LFO waveforms. A brief survey of the LFO Contour options for the different LFO modes follows:

```

1 LFO 2
Contour    +0
  
```

- **SINE** Contour morphs from sine to a triangle wave (Contour to the left) or to a square wave (Contour to the right).
- **TRIANGLE** Contour morphs from a triangle to a declining (Contour to the left) or ascending sawtooth (Contour to the right).
- **SAWTOOTH** Contour morphs from a linear declining sawtooth or decay to any exponentially declining decay(Contour to the left) or to a square (Contour to the right).
- **SQUARE** Contour modulates the pulse width of the square wave.
- **WAVES** Contour "zooms" into the wave, thereby shortening the wave's loop length (Contour to the right).

## LFO-2TRIGGER PHASE

Selects the position in the wave cycle - i.e. the phase position - at which the LFO starts oscillating in response to the start of a note. The control range of 1 to 127 is equivalent to phase positions of 0 to 360 degrees; the value 0 switches the KEY TRIGGER function completely off so that the LFO oscillates freely and appears on random phase positions at the start of a note.

```

1 LFO2
TrigPhase  Off
  
```

## LFO-2 KEY FOLLOW


Controls the intensity of the KEY FOLLOW function - i.e. the rate at which the LFO follows the pitch of a played note. At a value of 0, KEY FOLLOW is deactivated. At a value of 127, the rate doubles with each octave.

```

1 LFO2
Keyfollow  Off
  
```


### LFO-3 FADE IN

This parameter lets you automatically initiate a delayed fade-in the LFO3 modulation that you set up via OSC AMOUNT (see the section above). FADE IN controls the overall delay and fade-in time.



### LFO-3 CLOCK

When you set it to OFF, the LFO oscillates in the normal manner, independently of the global Master Clock (CLOCK TEMPO). When you enter a note value here, the LFO rate is synced up to the global master clock. The length of the waveshape's cycle will then correspond to the note value that you have entered. You can also set the rate via CLOCK TEMPO (refer to the appropriate section) or synchronize it to external MIDI clock. When the LFO is synced up to the master clock, you can also select the desired note value via the LFO RATE knob.



### LFO-3 MODE

Switches back and forth between two LFO operating modes:

- **POLY** In polyphonic mode, each of the voices involved is assigned a dedicated LFO.

- **SINGLE** In polyphonic mode, all voices are assigned the same LFO.

### LFO-3 KEY FOLLOW

Controls the intensity of the KEY FOLLOW function - i.e. the rate at which the LFO follows the pitch of a played note. At a value of 0, KEY FOLLOW is deactivated. At a value of 127, the rate doubles with each octave.



Selecting „MOD“ in the LFOs/MOD section (using the SELECT button) gives you access to the Virus modulation matrix. This consists of six so-called ASSIGNS, represented by the row of LEDs at the bottom right of this section. You can then use the AMOUNT button to scroll down through the ASSIGNS. If you hold down the EDIT button at the same time, the destinations are scrolled in the opposite direction.

The six ASSIGN options let you control up to nine modulation destinations via up to six modulation sources. Simply go to ASSIGN, select one of the modulation sources (SOURCE) and one or several modulation destinations (DESTINATION). Each of these configurations features a parameter that determines modulation intensity (AMOUNT). ASSIGN 1 can control one modulation destination, ASSIGN 2 can control two and ASSIGN 3 can control three modulation destinations, each with independent AMOUNTs. The ASSIGN 4-6 control one destination at the time.

If the modulation intensity for the selected destination is not „0“, its LED stays lit after you quit the menu.

For your **SOURCEs**, you have two different types of modulation sources to choose from. The first type comprises external MIDI controllers such as the modulation wheel or breath controller. We call these "performance controllers" to distinguish them from sound parameters such as **CUTOFF** and **REVERB** that may also be accessed directly via MIDI controllers. (Although strictly speaking, they're on-board devices, the modulation wheels of the **VIRUS kc** and **VIRUS indigo** are also considered to be external MIDI controllers since they are not actually component parts of the sound generation system).

The second type comprises the sound generation system's internal modulators, for example, **LFOs** and **envelopes**. These also have fixed modulation assignments (**LFO AMOUNT**, **ENV AMOUNT**), but are freely available along with the **Modulation Matrix**.

Let's take a look at the internal modulation sources:

- **AMPENV & FILTENV** The corresponding envelope is the modulation source.
- **LFO1, LFO2, LFO3** The corresponding LFO is the modulation source.
- **VELOON** The note on velocity is the modulation source.
- **VELOOFF** The note off velocity is the modulation source. According to the fact, that the note off velocity is only known when the key is released again, here, the **VIRUS** uses the note on velocity, when the key is held. Therefore both, note on- and off velocities, are active here.
- **KEYFLW** The note number respectively the pitch is used as the modulation source (Key-follow)
- **RANDOM** A random number which remains for the whole duration of the note on, is used as the modulation source here.

The control range of the source may be limited via the **AMOUNT** values or inverted so that the modulation occurs strictly within the desired value range for the target parameter. For your target parameters, you can choose from among virtually all sound parameters that feature an infinitely variable control range – ergo, you have more than 100 modulation destinations at your disposal.

If you haven't selected a source for one of the **ASSIGN** options (**SOURCE = OFF**), the subordinate parameters will not be displayed.

In addition to the three **ASSIGN** options, the user interface features – as discussed earlier – a freely definable modulation destination for **LFO 1** and **2** called **ASSIGN**.

■ You'll find a list of available **SOURCEs** and **DESTINATIONs** in "Appendix" on page 161.

**ASSIGN 1 SOURCE** Selects the modulation source for the first modulation assignment.

```

1 ASSIGN 1
Source ChanPres

```

**ASSIGN 1 DESTINATION** Selects the modulation destination for the first modulation assignment.

```

1 ASSIGN 1
Dest Panorama

```

**ASSIGN 1 AMOUNT** Controls the intensity of the first modulation allocation.

```
1 ASSIGN 1
Amount      +104
```

**ASSIGN 2 SOURCE** Selects the modulation source for the second modulation assignment.

**ASSIGN 2 DESTINATION 1** Selects the first modulation destination for the second modulation assignment.

**ASSIGN 2 AMOUNT 1** Controls the intensity of the second modulation assignment for the first modulation destination.

**ASSIGN 2 DESTINATION 2** Selects the second modulation destination for the second modulation assignment.

**ASSIGN 2 AMOUNT 2** Controls the intensity of the second modulation assignment for the second modulation destination.

**ASSIGN 3 SOURCE** Selects the modulation source for the third modulation assignment.

**ASSIGN 3 DESTINATION 1** Selects the first modulation destination for the third modulation assignment.

**ASSIGN 3 AMOUNT 1** Controls the intensity of the third modulation assignment for the first modulation destination.

**ASSIGN 3 DESTINATION 2** Selects the second modulation destination for the third modulation assignment.

**ASSIGN 3 AMOUNT 2** Controls the intensity of the third modulation assignment for the second modulation destination.

**ASSIGN 3 DESTINATION 3** Selects the third modulation destination for the third modulation assignment.

**ASSIGN 3 AMOUNT 3** Controls the intensity of the third modulation assignment for the third modulation destination.

**ASSIGN 4 SOURCE** Selects the modulation source for the first modulation assignment.

**ASSIGN 4 DESTINATION** Selects the modulation destination for the first modulation assignment.

**ASSIGN 4 AMOUNT** Controls the intensity of the first modulation allocation.

**ASSIGN 5 SOURCE** Selects the modulation source for the first modulation assignment.

**ASSIGN 5 DESTINATION** Selects the modulation destination for the first modulation assignment.

**ASSIGN 5 AMOUNT** Controls the intensity of the first modulation allocation.



**ASSIGN 6 SOURCE** Selects the modulation source for the first modulation assignment.

**ASSIGN 6 DESTINATION** Selects the modulation destination for the first modulation assignment.

**ASSIGN 6 AMOUNT** Controls the intensity of the first modulation allocation.



# Arpeggiator Edit

The controls in the Arpeggiator section only consists of two buttons: ARP ON switches it on or off, and EDIT opens up the arpeggiator menu:

## ARPEGGIATOR MODE

Arpeggiator mode is the first parameter in the menu. You can choose between:

- **OFF** Self-explanatory. The Arpeggiator is inactive.
- **UP** Sustained notes are arpeggiated in an ascending manner.
- **DOWN** Sustained notes are arpeggiated in descending manner.
- **UP & DOWN** Sustained notes are arpeggiated alternately in an ascending and descending manner.
- **AS PLAYED** Sustained notes are arpeggiated in the sequence that they are played. It is possible to latch the Arpeggiator with the sustain pedal.
- **RANDOM** Arpeggiates notes in random sequence.
- **CHORD PLAYS** notes as chords rather than arpeggios.

```
1 ARPEGGIATOR
Mode AsPlayed
```

## ARPEGGIATOR OCTAVES

Controls the ascending transposition of arpeggios by octaves. Control range: 1 to 4 octaves.

```
1 ARPEGGIATOR
Octaves 2
```

## ARPEGGIATOR PATTERN

This parameter selects one of the rhythmic patterns for the Arpeggiator.

```
1 ARPEGGIATOR
Pattern 2
```

## ARPEGGIATOR NOTE LENGTH

This parameter changes the lengths of the rhythm patterns' notes. The center position leaves the notes at their original length. Positive values lengthen the notes; negative values shorten them relatively to their original lengths.

```
1 ARPEGGIATOR
NoteLength +10
```

## ARPEGGIATOR SWING

This parameter controls the "swing factor" of the rhythm patterns. Higher SWING values delay the even-meter or straight sixteenths; that is, every second sixteenth note. This lends the rhythm a swing feel.

When SWING is set to the lowest value (50%), the interval between the individual sixteenth beats is identical and the length of an eighth note is divided into two identical beats; in other words, the rhythm is "binary".

At 66%, the rhythm is "ternary", the length of a eighth note is divided by a factor of 2:1.

At the highest value, 75%, the eighth note is divided by a factor of 3:1. The odd sixteenth notes are lengthened to a dotted sixteenth note, the even sixteenth notes are shortened to the length of a 32nd note.

```

1 ARPEGGIATOR
Swing 50.0%

```

■ *within the list, you'll find landmarks, such as 16A-16F, known from Emagic's Logic Audio series.*

■ *Every arpeggiator pattern contains note velocity information which enhance the rhythmical meaning of the pattern. The arpeggiator velocity completely substitutes the note velocity. In case, you are in need to assign the velocity to a certain parameter, simply use the Modulation Matrix.*

## ARPEGGIATOR CLOCK

This parameter determines the basic tempo of the Arpeggiator in reference to the clock generator. The standard setting is 1/8 and normally doesn't need to be changed. The actual tempo is determined by the global clock generator, the speed of which may be varied via CLOCK TEM-

PO (see the section on CLOCK TEMPO). Moreover, the clock generator can be synced up to the external MIDI Clock.

A value of 1/4 halves the speed of the Arpeggiator; 1/16 doubles it. The other CLOCK positions yield fairly exotic time signatures in reference to the clock generator's tempo.

```

1 Arpeggiator
Clock 1/16

```

## ARPEGGIATOR HOLD

When this parameter is activate, the arpeggiator continues to play after you release the keys. Not until you release all keys and press a new key are the notes that were held up to this point released.

```

1 ARPEGGIATOR
Hold Off

```

# The internal Effects

The Effects menu contains the parameters of the effects section and audio inputs (INPUT). The following effects are available individually per PART – i.e. you have 16 versions available, all in stereo:

RINGMODULATOR  
DISTORTION  
ANALOG BOOST  
PHASER  
CHORUS  
EQUALIZER

The vocoder and the delay/reverb section are each available just once, but they can be addressed individually by the PARTs. In the signal path, all effects are connected in series in accordance with sequence in the Effects menu.

## DISTORTION (PANEL)

### TYPE

Here's a rundown on the various DISTORTION modes:

- **OFF** The signal is not processed.

- **LIGHT, SOFT, MIDDLE, HARD** Different analog distortion curves with different characteristics and intensities.
- **DIGITAL** Digital distortion with hard clipping.
- **SHAPER** Sine characteristic curve with several wave cycles. With the Shaper, you can drastically warp signals. In some cases, the results are similar to the spectra of linear frequency modulations.
- **RECTIFIER** Continuous rectification of the signal; this type of distortion is independent of the given level.
- **BITREDUCER** Continuous reduction of the digital signal's bit depth; generates digital quantization noise.
- **RATEREDUCER** Continuous reduction of the digital sampling rate; generates digital aliasing.
- **LOWPASS** 1-pole low-pass filter for moderate processing of high frequencies.
- **HIGHPASS** 1-pole high-pass filter for moderate processing of low frequencies.



### INTENSITY

For the distortion curves, this intensity range is equivalent to a gain boost of 12 decibels, in the case of the "Digital" curve as much as 24 decibels. A special feature of the VIRUS' SATURATION stage is that, despite the fact that its gain is boosted, the signal level is kept constant so that only the tonal color or timbre of the sound is varied.

The Effects section of the VIRUS features a further distortion module called SATURATION. Its design is identical to that of the DISTORTION module discussed here, except for one major difference: whereas SATURATION affects each voice separately, DISTORTION processes all voices collectively in the effects section. This makes a huge difference in tone.

## ■ CHORUS (PANEL)

---

### DIR/EFF

Controls the balance of volume levels between the direct signal and the Chorus signal: At a value of 0, only the direct signal is audible, at a value of 127, only the Chorus output signal is audible. The values between these two extremes determine the mix of the two signals.

The pure chorus signal is created by a delay (CHORUS delay) and a pitch modulation of the chorus' on-board LFOs (CHORUS Rate and Depth). Not until the direct or dry signal (CHORUS Dir/Eff) is mixed to the wet signal is the typical chorus effect generated.

### DEPTH

Controls the intensity of the delay modulation by the LFO.

The LFO modulates the left and right sides of the Chorus signal antiphase, which generates a true stereo effect.



## ■ CHORUS (EDIT MENU)

---

### RATE

Determines the speed of the Chorus LFO.



### DELAY

Controls the delay time of the Chorus.



## FEEDBACK

Controls the amount of feedback in the Chorus. On the chorus, FEEDBACK lets you boost specific frequencies in the delayed signal to create a flanger effect. The FEEDBACK parameter is bipolar; positive or negative feedback values let you dial in different flanger characteristics.

```
1 CHORUS
Feedback +04
```

## SHAPE

Determines the waveshape of the chorus LFO. You can select from among 68 waveshapes (just like for the main LFOs).

```
1 CHORUS
Shape Triangle
```

## ■ PHASER (PANEL)

---

### DIR/EFF

Controls the balance of volume levels between the direct signal and the Phaser signal: At a value of 0, only the direct signal is audible, at a value of 127, only the Phaser output signal is audible. The values between these two extremes determine the mix of the two signals.

The pure phaser signal is generated by frequency-dependent phase shifting (PHASER Frequency) and pitch modulation of the phaser's own LFOs (PHASER Rate and Depth). Not until the direct or dry signal (PHASER Dir/Eff) is mixed to the wet effects signal is the typical phaser effect generated.

## FEEDBACK

Controls the amount of feedback in the Phaser. On the phaser, FEEDBACK lets you boost specific frequencies in the phase-shifted signal. The FEEDBACK parameter is bipolar; positive or negative feedback values let you dial in different phaser characteristics.

## ■ PHASER (EDIT MENU)

---

### RATE

Determines the speed of the Phaser LFO.

```
1 PHASER
Rate 364
```

## DEPTH

Controls the intensity of the Phaser frequency modulation by the LFO.

```
1 PHASER
Depth      112◀
```

## FREQUENCY

The characteristic corner frequency of the phaser's all-pass filter. The frequencies of the left and right sides are shifted every so slightly to create a real stereo effect.

```
1 PHASER
Frequency  48◀
```

```
1 PHASER
Feedback   +0◀
```

## STAGES

Use STAGES (1-6) to select the number of phaser stages or filter poles. This determines directly the number of filter notches and peaks in the phaser signal.

```
1 PHASER
Stages     4◀
```

## SPREAD

Use SPREAD to increase or decrease the distance between the notches and peaks in the frequency spectrum. In other words, here you can adjust bandwidth of the phaser effect.

```
1 PHASER
Spread     127◀
```

## ■ DELAY / REVERB

As its name would indicate, the DELAY/REVERB section generates two different effects:

The DELAY effect does just that to the input signal – delay it to create echoes. Much like a chorus, you can modulate the delay time to create oscillations and phase shifting in the stereo panorama. Delay time can also be locked into sync with the global clock generator. As a result, the rhythm of the repetitions can be matched up to the given song tempo. Beyond that, the device offers diverse delay pattern algorithms where the left and right signals are delayed so that echoes are repeated in different beats. By varying FEEDBACK values, you can come up with interesting rhythmic patterns.

The REVERB effect, on the other hand, simulates the reflections that occur in “natural” rooms. This particular effect features several parameters that let you come up with effects that go beyond simple room simulation. For example, you can use the DELAY unit described above to dial in the desired pre-delay for room simulations. The DELAY effect is located prior

to the room simulation in the signal path. Delay time and feedback are infinitely variable and may be synced up to the global clock generator. This means that you can create REVERB effects that are a perfect match for the rhythmic context.

In PARAMETER mode, you can select various DELAY and REVERB algorithms. Some of the REVERB algorithms work with parameters that the DELAY algorithms do not use and vice versa, so we'll look at these special parameters in a separate section.

In SINGLE MODE, all Delay or Reverb settings apply to the SINGLE PROGRAM in the conventional manner and are stored along with the program.

However in MULTI MODE, all 16 PARTs access the same Delay or Reverb effect. In this case, the only dedicated parameter you have available for each part is EFFECT SEND; all other parameters apply to the same Delay/Reverb unit and affect all PARTs.

Consequently, if you set the VIRUS to MULTI MODE or MULTI SINGLE MODE, all settings you dial in for the Delay or Reverb (including EFFECT SEND) affect the MULTI PROGRAM and are stored along with it. If the VIRUS is in MULTI MODE or MULTI SINGLE MODE and you activate a new SINGLE, the Delay/Reverb parameters of the SINGLE are ignored and the Delay/Reverb parameters of the current MULTI PROGRAM are activate.

As a rule, in MULTI MODE all SINGLE settings pertaining to the Delay/Reverb are ignored, with the exception of EFFECT SEND.

## ■ DELAY / REVERB (PANEL)

---

### EFFECT SEND

The level at which the given sound is patched to the DELAY or REVERB effect is adjusted here.

EFFECT SEND is identical to a post-fader effect bus on a mixing console. When you move the control toward the end of its control range, the dry signal is faded out and only the wet DELAY/REVERB signal is audible.

### DELAY TIME (DELAY) MODE

This is the absolute delay time of the delay effect in milliseconds (ms). Use it to determine the interval between each repetition up to a maximum delay time of 693 ms. Delay time is infinitely variable. Changing the delay time bends the pitch of the delay signal. The DELAY TIME parameter will not appear in the display when delay time is determined by the DELAY CLOCK (see below). If the PATTERN delay is activated, neither the DELAY TIME nor the DELAY CLOCK parameters are visible; in this case, the delay times are always synced up to the global clock generator.

```
1 DELAY
Time (ms) 349.54
```



## DELAY FEEDBACK (DELAY MODE)

Controls the amount of feedback of the Delay.

```
1 DELAY
Feedback 22
```

## REVERB DECAY TIME (REVERB MODE)

This parameter determines the decay time for the given room.

In a real room, the sound bounces off several walls and covers a considerable distance before it reaches your ear. The longer the sound travels and the more often it is reflected, the softer it will become. You could say that this effect is comparable to a pool or billiards ball that travels a greater distance, bouncing off several cushioned edges along the way. This friction depletes energy and causes the pool ball to slow down. The sound's loss of energy is controlled via DECAY TIME. When you dial in the minimum value, the decay time is extremely short so you'll hear just the early reflections. At the peak value, no energy is lost so the decay time is infinite, which is of course physically impossible in the real world.

```
1 REVERB
DecayTime 16
```

## REVERB DAMPING (REVERB MODE)

This parameter controls high-frequency attenuation of the room's fading reflections.

In a real room, walls don't reflect high frequencies as well as they do lower frequencies, an effect that can be likened to natural low-pass filtering of the sound. The longer the sound travels, the more often it bounces off walls and the more intense this filtering effect. For this reason, the amount of high-end damping depends on the amount of time that the signal carries - the signal thrown back by the room becomes muddier as time goes by. This effect is stronger with walls that have soft surfaces (wood, wallpaper) than it is with walls that have hard surfaces (glass, tiles). Consequently, high-end damping has a significant influence the vibe and warmth of the room sound.

```
1 REVERB
Damping 12
```

## ■ DELAY / REVERB (MENU)

### MODE

Here's where you select the algorithm for the DELAY/REVERB section.

Let's take a tour of the different algorithms:

- **OFF** Not surprisingly, this setting deactivates the DELAY/REVERB section.
- **DELAY** Mono echo. Same delay time on the left and right sides.
- **REVERB** Room simulation.

- **REV+FEEDB1** This the VIRUS' trademark room simulation. Here you can use the FEEDBACK control to generate pre-delay feedback. The feedback effect generates rhythmic repetitions of the REVERB signal, which are repeated at the intervals determined by the assigned pre-delay time.
- **REV+FEEDB2** Room simulation with feedback and REV+FEEDB1. Here the REVERB signal is audible immediately after you hear the dry signal rather than after a defined amount of pre-delay time has elapsed. The rhythmic repetitions are independently variable depending on the pre-delay time and feedback intensity (FEEDBACK).
- **DELAY X:Y** Ping-pong delay. Although the delay times on the left and right sides are different, they have a fixed relationship to one another. For example, 2:1 means that the delay time of the left side of the delay signal is twice as long as that of the right side. The absolute delay time refers to the longer delay time of the two sides. It is determined via DELAY TIME or DELAY CLOCK. Feedback is also generated using the signal with the longer delay time of the two.
- **PATTERN X+Y** The PATTERN delay algorithms are also ping-pong delays, but here the delay times are locked into sync with the master clock. For this reason, you won't find DELAY Time or DELAY Clock parameters here. Consequently, the absolute delay times are determined by the tempo of the global clock generator (CLOCK SPEED) or by the song tempo dictated by a connected sequencer that is sending a clock signal. The two numbers represent sixteenth note increments and indicate the delay for the left and right side on the basis of sixteenth notes. Used in conjunction with the FEEDBACK parameter, these "groove" algorithms create interesting rhythmic patterns and accents when you patch in appropriately rhythmic signals, for example arpeggios.

The unique sonic character of the PATTERN delay algorithms is due to - among other things - odd time signatures (based on sixteenth-note values). Each delay algorithm puts at least one of these options at your disposal. Feedback is always generated via the left delay tap.



■ *The following parameters will only appear in the display when you're working with DELAY algorithms.*

### DELAY CLOCK

When you set it to OFF, the absolute delay time is determined in milliseconds. If you select a note value, then the delay time is set to the value of this note. The absolute length of this note value depends on the value entered to CLOCK TEMPO in the global clock generator (refer to this section). In this case, the absolute delay time in milliseconds is ignored.



If the delay time determined by the clock generator exceeds the maximum value of 693 ms, then the delay time is automatically set to a value equivalent to half of the entered value.

## DELAY COLOR

A filter is placed in the delay effect's output, that also effects the feedback path. It can be faded between a Lowpass (negative range) and a Hipass (positive range). The filter causes the delay repeats to become duller and duller, just like on a tape echo, or for a nice unnatural effect, to become thinner with increased harmonics (Hipass).



## DELAY RATE

Determines the speed of the Delay LFO.



## DELAY DEPTH

Controls the intensity of the delay modulation by the LFO.

Like the Chorus LFO, the Delay LFO modulates the left and right sides of the signal antiphase, which generates a true stereo effect. Wenn das Delay für rhythmische Effekte verwendet wird, dann sollte die Modulationstiefe möglichst ger-

ing eingestellt werden oder auf Null gestellt werden, da die LFO-Modulation das Timing des Delays beeinflusst




## DELAY SHAPE

Determines the waveshape of the Delay LFO. You can select from among 68 waveshapes (just like for the main LFOs).



## DELAY OUTPUT SELECT

Here you can select the external or internal Delay output. The same destinations are available as for the PART signals. This feature lets you route the Delay signal to the internal aux paths for further processing.



■ The following parameters will only appear in the display when you're working with DELAY algorithms.

## REVERB TYPE

This parameter lets you select from among four different room sizes to create the type of simulation that you want. Room size is decisive because it determines the density of room reflections, which in turn influences the character of the room simulation. In bigger rooms, sound travels across greater distances than in a small room, which means that the intervals between the reflections bouncing off the virtual walls are also greater. Simulating bigger rooms requires more delay memory, which leaves you with less memory available for pre-delay effects (PREDELAY, see below).

On the other hand, you can determine the decay time of the room simulation independently for the room size of your choice. You can select from among:

Reverb Type	Pre-delay
Ambience	with up to 500 ms
SmallRoom	with up to 400 ms
LargeRoom	with up to 300 ms
Resonance	with up to 150 ms

```

1 REVERB
Type  Ambience
    
```

## REVERB COLOR

This parameters influences the room’s static frequency response.

Natural reverb will always have some high-frequency attenuation since the sound bounces off at least one wall. REVERB COLOR is identical to DELAY COLOR; here you’re dealing with

a variable filter that can act as a low-pass filter (negative control range) as well as a high-pass filter (positive control range). For a natural-sounding room simulation, you should always set REVERB COLOR to a slightly negative value to dampen the higher frequencies of the room signal. This will make the effect sound more authentic and the room sound warmer. You can, however, opt to create interesting artificial-sounding effects by cutting the lower frequencies radically. To this end, experiment by varying the high-pass filter within REVERB COLOR’s positive control range.

REVERB COLOR is a static filter, which means it generates a different effect than that of REVERB DAMPING, where the amount of high-end damping is a factor of time.

In the signal path, the filter is located at the output of the pre-delay. This means that the filter also influences pre-delay feedback (REVERB FEEDBACK, see below) when you use this parameter.

```

1 REVERB
Color  -10
    
```

## REVERB PREDELAY

This parameter controls the pre-delay time of the given room simulation.

In a real room, sound travels quite a distance and is reflected at least once before it reaches your ear. This means that a certain amount of time elapses before you hear the earliest reflections of the room signal. The bigger the room, the longer it takes for the reflected signal to reach your ear. This effect is emulated in a room simulation be means of a parameter called pre-delay. Irrespective of the values set for the other

REVERB parameters, the amount of pre-delay has a decisive impact on our perception of the size of a room.

When you set a high pre-delay value - say some hundred milliseconds - you're actually creating an "unnaturally" large room. The room simulation will sound washed out or much like a diffuse echo. Pre-delay has a formative effect on room simulation, particularly since - like with the pure DELAY algorithms - you can use it to match the reverb effect to the rhythmic context. And like the DELAY parameters, pre-delay is infinitely variable, it is suitable for generating feedback, and it can be synced up to the global clock generator.

REVERB PREDELAY controls the absolute pre-delay time in milliseconds (ms). The peak value depends on the room size (REVERB TYPE, see above) that you have selected because the room simulation and pre-delay share the same memory. Pre-delay time is infinitely variable. Changing the delay time bends the pitch of the reverb signal. REVERB PREDELAY will not appear in the display when the pre-delay amount is determined via REVERB CLOCK (see below).

```
1 REVERB
PreDelay 500.0
```

## REVERB CLOCK

When you set it to OFF, the absolute predelay time is determined in milliseconds. If you select a note value, then the predelay time is set to the value of this note. The absolute length of this note value depends on the value entered to

CLOCK TEMPO in the global clock generator (refer to this section). In this case, the absolute predelay time in milliseconds is ignored.

```
1 REVERB
Clock Off
```

## REVERB FEEDBACK

Available exclusively for the Rev+Feedb1 and Rev+Feedb2 algorithms, this parameter controls the amount of pre-delay feedback. Here the room signal is repeated at intervals that are determined by the pre-delay time. Note that the signal level fades gradually. REVERB COLOR also has an influence on feedback. The intensity of the filtering effect generated by the low-pass or high-pass filter increases with every repetition. Feedback is subtle when the decay time of the room (REVERB DECAY TIME) is long. The effect will become more prominent when you set a short decay time and a long pre-delay time.

```
1 REVERB
Feedback 50
```

## REVERB OUTPUT SELECT

Here you can select the external or internal output for the REVERB section.

```
1 REVERB
OutSel Out1+2
```

## ■ VOCODER

---

For more information on the Vocoder see “The Vocoder of the VIRUS” on page 131

## ■ ANALOG BOOST

---

This effect produces the typical bass response of analog synthesizers. By changing the value of the TUNE parameter, you can boost the middle range or even reduce high frequencies. Applied sparingly, ANALOG BOOST is suitable for almost any type of sound, works well together with the DISTORTION section and can be set to extreme levels if required. Analog Boost is available for each of the 16 possible sounds in Multi mode.

### INTENSITY

Controls the amount of ANALOG BOOST.

```
1 ANALOG BOOST
Intensity 174
```

### TUNE

Controls the frequency range of ANALOG BOOST.

```
1 ANALOG BOOST
Tune 324
```

## ■ EQUALIZER

---

The equalizer is used for boosting or cutting bass and/or treble in the signal, as well as for fine adjustment of a definable frequency range (“Mid”). The low and high controls are realized as single pole shelf filters, whereas the “mid-range” is handled by a two-pole parametric bandpass filter. The equalizer is available separately for each of the 16 sounds in Multi mode.

### LOW-EQ GAIN

Low shelf cut or boost.

### LOW-EQ FREQUENCY

Low shelf cutoff frequency.

### MID-EQ GAIN

Midrange cut or boost.

## MID-EQ FREQUENCY

Center frequency of the midrange bandpass filter. Please note that this can actually be set anywhere between 20 Hz and 24 kHz, i.e. it is not necessarily restricted to what is usually considered “midrange”.

## MID-EQ Q-FACTOR

Midrange bandwidth around the center frequency. Lowering the Q-factor increases bandwidth, so cut or boost will apply to a wider range of frequencies. Increasing the Q-factor narrows the bandwidth i.e. cut or boost is applied to a narrower range of frequencies. Setting a very high Q-factor (e.g.15) makes this bandwidth very narrow, allowing for highly selective and precise equalization.

## HIGH-EQ GAIN

High shelf cut or boost

## HIGH-EQ FREQUENCY

High shelf cutoff frequency.









**Main Edit Menu**

## COMMON

### CLOCK TEMPO

The VIRUS has a global clock generator which can be used to synchronize the LFOs, the arpeggiators and the delay/reverb effects to a common tempo. The internal clock generator either works at a definable rate or slaves automatically to any MIDI clock signal (e.g. from a sequencer) arriving at the MIDI IN socket. Internal clock speed is controlled by the CLOCK TEMPO parameter, which can be set to any value between 63 und 190 BPM (Beats Per Minute). Beats are displayed by a dedicated LED above the TRANSPOSE buttons.

When the device is synchronized via MIDI clock, the clock generator automatically accepts the speed dictated by the connected sequencer; the internal tempo is invalid. The individual sections of the VIRUS are synced up to the clock generator at rhythmic intervals such as 1/16, 1/4 and so forth. These values may be assigned individually for every section. (ARPEGGIATOR CLOCK, CLOCK LFO 1, CLOCK LFO 2, CLOCK LFO 3, DELAY CLOCK, see the respective sections).

```

1  CLOCK
Tempo (bpm) 120

```

In SINGLE MODE, CLOCK TEMPO pertains to the current SINGLE PROGRAM and is stored along with it. In MULTI MODE, the CLOCK TEMPO settings for the involved SINGLE PROGRAMS are ignored. Instead, all involved SINGLE PROGRAMS are controlled via the same clock generator. Its CLOCK TEMPO is saved in the MULTI PROGRAM (as are the settings of the

global delay effect). This feature lets you control the LFOs and arpeggiators of several MULTI PARTS in a common rhythmic context.

A small “c” will appear in the display when the VIRUS is receiving MIDI Clock data.

If you’re sure you do NOT want the device to be synchronized automatically to MIDI clock, set MIDI CLOCK RX to Off (in the SYSTEM menu).

■ *To avoid confusion, please keep in mind that MIDI Clock is not the same thing as MIDI Time Code. The latter doesn’t deal with tempo at all but with time-related information structured in hours, minutes, seconds, etc. which is of no benefit to you in this context.*

### PATCH VOLUME

Storable master volume for the SINGLE program. Its nominal value is set to 100 so that you have a reserve of 27 volume increments when you are dealing with exceptionally low-level sound settings. In addition to using PATCH VOLUME, you can also control the level via MIDI using the controllers #7 (Channel Volume) and #11 (Expression). However, these are not stored with the SINGLE program.. In MULTI MODE, you can also access PART VOLUME (see appropriate section), which provides further volume reserves (headroom).

```

1  COMMON
PatchVolume 100

```

## PANORAMA

Determines the Panorama position of the SINGLE program. Dieser Parameter kann auch über Midi mit dem Controller #10 (Panorama) gesteuert werden.

```

1 COMMON
Panorama +04

```

## KEY MODE

Determines how a sound responds to the notes being played. You can chose from:

- **POLY** The sound is played polyphonically.
- **MONO 1** (Multi-Trigger): The sound is played monophonically. When you play in a smooth, even style (legato) the envelopes are restarted every time you play a note (Multi Trigger mode); Portamento is always active.
- **MONO 2** (Multi-Trigger; Legato-Glide): The sound is played monophonically; when you play in a smooth, even style (legato) the envelopes are restarted every time you play a note (Multi Trigger mode); Portamento is only active when you play legato.
- **MONO 3** (Single-Trigger): The sound is played monophonically; when you play in a smooth, even style (legato) the envelopes are restarted at the first note only and continue to run through their phases when you play other notes (Single Trigger mode); Portamento is always active.
- **MONO 4** (Single-Trigger; Legato-Glide): The sound is played monophonically; when you play in a smooth, even style (legato) the envelopes are restarted at the first note only and

continue to run through their phases when you play other notes (Single Trigger mode); Portamento is only active when you play legato.

- **HOLD** The sound can be played polyphonically. However, the played notes are held by a virtual hold pedal even after you release the keys. Not until you release all keys and press a new key are the notes that were held up to this point released.

```

1 COMMON
KeyMode Poly4

```

## PORTAMENTO

Determines the amount of time it takes for the pitch to glide from the current note to the next note played. PORTAMENTO is a significant feature of KEY MODE (see paragraph above); the two are closely related.

```

1 COMMON
Portamento 04

```

## TRANPOSE

Transposes the entire SINGLE program by octaves. If your VIRUS is equipped with a built-in keyboard, the selected SINGLE program is not transposed. Instead, the keyboard is transposed globally.

(see “The VIRUS kc and the indigo” on page 126).

```
1 COMMON  
Transpose +124
```

## BEND UP

Determines the interval of the bend when the Pitch Bender is moved upwards to the full extent of its range. Control range: -64 semitones to +63 semitones.

```
1 COMMON  
BendUp +24
```

## BEND DOWN

Determines the interval of the bend when the Pitch Bender is moved downwards to the full extent of its range. Control range: -64 semitones to +63 semitones.

```
1 COMMON  
BendDown -24
```

## BEND SCALE

Determines the shape of the curve which in turn determines the effect of the Pitch Bend data. You can chose from:

- **LIN** Starting from the 0 value, (center position) the pitch bend is linear. In other words, when you bend the pitch up to exactly half the distance of the pitch bend's full range, the interval you hear is equivalent to exactly half of the value you set for BEND UP (see paragraph above).
- **EXP** Starting from the 0 value (center position) the pitch bend is exponential - at first the bend is gradual and as you move further away from the center position, the pitch is bent ever more radically. In this mode you can achieve slight fluctuations in pitch, for instance a manual vibrato, provided you can maintain a soft touch, yet still have the option of generating greater intervals because of the exponential increase in range.

```
1 COMMON  
BendScale EXP4
```

## SMOOTH MODE

This is an adaptive parameter smoothing mode (Adaptive Control Smoothing). You'll find a detailed explanation of this parameter in “The VIRUS and Sequencers” on page 139.

You have the following options to chose from:

- **OFF** Adaptive Control Smoothing is disabled and parameter changes are carried out incrementally without smoothing.
- **ON** Adaptive Control Smoothing is enabled and parameter changes are smooth.
- **AUTO** Adaptive Control Smoothing analyzes the characteristics of the incoming in parameter changes and carries out these out either continuously (smoothed) or incrementally.

- **NOTE** Adaptive Control Smoothing is carried out continuously (smoothed), but jumps in steps when a new note is played.

```

1 COMMON
SmoothMode  On
  
```

## ■ UNISON MODE

---

determines how many voices the VIRUS will use to render a played note. In a nutshell, it determines how fat or big the sound will be. When you activate UNISON mode for a sound, it can still be played polyphonically. However, depending on the number of voices you've dialed in, its polyphony will of course be considerably reduced in UNISON mode. The most efficient and the standard setting is UNISON mode = Twin, where two voices are played for every note. In the OFF position, one voice per note is played.

```

1 UNISON
Mode        Twin
  
```

## DETUNE

Slightly detunes the voices involved in UNISON mode.

```

1 UNISON
Detune      48
  
```

## PAN SPREAD

Creates a stereo panorama spread of the voices involved in UNISON mode. Use it connection with UNISON DETUNE to create intense stereo effects.

Moreover, PAN SPREAD lets you spread the stereo panorama of the two oscillators or filter, provided that you select SPLIT as the FILTER ROUTING option (more on this in the section, "FILTER ROUTING"). Then this option is enabled regardless of whether or not UNISON mode is active. This feature allows you to create a stereo sound with just a single voice.

```

1 UNISON
PanSpread   127
  
```

## UNISON LFO PHASE

Shifts the phases of the two TWIN MODE voices' LFOs relatively. This effect livens up modulations. The value range of -64 to +63 is equivalent to -180 to +180 degrees. LFO

PHASE pertains to all LFOs and does not impair the phase response of the LFOs within either of the two voices.

```

1 UNISON
LFO Phase 484

```

## ■ PUNCH INTENSITY

---

Here you can influence the attack of the amplifier envelope to enhance the sound with a more percussive, snappy kind of feel. You may have guessed that PUNCH INTENSITY determines the intensity of this effect. PUNCH is only effective when you have dialed in fairly short ATTACK rates for the amplifier envelope.

```

1 PUNCH
Intensity 644

```

## ■ ENVELOPE SUSTAIN TIME

---

Sets the bipolar time parameter for the amplifier envelope. It determines the envelope's response once it reaches the SUSTAIN level (see appropriate section): If the knob is set to the center position (12 o'clock) indicated by the

mathematical infinity symbol, then the SUSTAIN level remains constant through to the end of the note; if you turn it counter-clockwise to the left (towards FALL), then the level drops off at an increasing rate towards the minimum level; If you turn the knob clockwise to the right (towards RISE), the level rises at an increasing rate to maximum.

## ■ ANALOG INPUTS

---

### INPUT MODE

In the VIRUS you have the option of using the external analog inputs instead of the internal oscillators as signal sources that can be processed by the filters, envelopes and the internal effects. In addition to the external analog inputs, you also have two internal stereo aux paths or subgroups available as signal sources in MULTI MODE. The output signals of other PARTs can be routed via their respective OUTPUT SELECTs (see appropriate section) to these aux paths.

You can chose from:

- **OFF** The PART is not assigned an external input but works with its own sound sources (the oscillators and the Noise Generator) in the manner of a conventional analog synthesizer.
- **DYNAMIC** Instead of the internal sound sources, an external signal source is routed to the filter section. The envelopes remain functional so you have to play notes in order to hear the external signal source. For instance in this mode you can manipulate the volume to "chop up" the input signal much the way a

gate does. If you turn FILTER KEY FOLLOW up, the input signal is filtered by a different filter frequency depending on the key you press. The sound program can still be played polyphonically and you can allocate several different filter frequencies and independent envelopes simultaneously (!) to the input signal via the keyboard.

- **STATIC** Instead of the internal sound sources, an external signal source is routed to the filter section. In contrast to DYNAMIC mode, in STATIC mode one or two voices (depending on the INPUT SELECT setting, see appropriate section) of the VIRUS are activated automatically without you actually playing notes on this PART. The filters and the amplifier are switched permanently open, the envelopes are deactivated and incoming notes are ignored. Consequently you can use the filters and the amplifier as an effects section for the input signal.
- **TO EFFECTS** The audio signal is routed directly to the effects section of the SINGLE program or the PART. In this mode, the voices of the VIRUS are not used, which means that polyphony remains fully intact. The filter section is unavailable in this mode.

```
1 INPUT GLOBAL
Mode Dynamic
```

## INPUT SELECT

Selects the external signal source for the INPUT MODEs.

The signal source that you select here is used for both the vocoder and the ring modulator in the effects section.

Input	Meaning
- IN L	The left channel of the external dual audio input.
- IN L+R	Both channels of the external dual audio input (stereo).
- IN R	The right channel of the external dual audio input.
- AUX 1 L	The left channel of internal Aux 1.
- AUX 1 L+R	Both channels of internal Aux 1 (stereo).
- AUX 1 R	The right channel of internal Aux 1.
- AUX 2 L	The left channel of internal Aux 2.
- AUX 2 L+R	Both channels of internal Aux 2 (stereo).
- AUX 2 R	The right channel of internal Aux 2.

```
1 INPUT
Select In L+R
```

If the selected signal source is a stereo source - i.e. IN L+R, AUX 1 L+R or AUX 2 L+R - then the sound program is automatically switched internally to UNISON-MODE = Twin, regardless of the UNISON MODE parameter setting so that the input signal is processed in stereo. In this case, the UNISON parameters PAN SPREAD and LFO PHASE (see appropriate section) are active.

When you select an internal aux path as a signal source, you of course must route the signals of another PART to this aux path via OUTPUT SELECT before you can establish a signal connection between the two PARTS. Several PARTS can simultaneously access the external input or the internal aux paths via INPUT SELECT.

## FOLLOWER (ENVELOPE-FOLLOWER)

The envelope follower generates a modulation signal from an audio signal. This modulation signal can be used to control sound parameters. When the envelope follower is activated, it takes the place of the filter envelope. This means that you can modulate the filters using the ENV AMOUNT knob in the filter section. The envelope follower is also available as a modulation source in the ASSIGN section in the form of the option called "FiltEnv".

### MODE

Activates the envelope follower. Set to the OFF position, the envelope follower is inactive and the filter envelope works in the usual manner.

The remaining settings for FOLLOWER mode let you activate the envelope follower and, at the same time, choose a signal source. Select signal sources the same way you would for INPUT SELECT (see above). Note that this selection option is completely independent of the given input.

When you select a stereo signal and at the same time activate UNISON mode (Twin), the envelope follower operates in real stereo.

Three filter envelope knobs are used to control the envelope follower when it is active:

### ENVELOPE FOLLOWER ATTACK

(Knob: FILTER ATTACK) It controls the attack rate of the envelope follower. With this parameter, you can determine how fast the envelope follower will respond to the rise in signal level. Higher values slow the envelope follower down and delay its response.

### ENVELOPE FOLLOWER RELEASE

(Knob: FILTER DECAY) It controls the decay time of the envelope follower. With this parameter, you can determine how swiftly the envelope follower will respond to a decrease in signal level. Higher values let the Follower linger.

### ENVELOPE FOLLOWER GAIN

(Knob: FILTER SUSTAIN) It controls the input level of the envelope follower directly. The nominal value is the center position (64).



## RINGMODULATOR

This allows you to ring-modulate the residual signal of the SINGLE or PART with an external audio signal. The effect multiplies the ampli-



tudes of both signals, which provides the frequencies' sums and differences. The more harmonics in the incoming signal, the more distinct the modulation. Especially drumloops modulated with a sine wave create interesting sounds. The incoming signal is determined with INPUT SELECT. Depending on the incoming signal, the ring modulator operates in mono or stereo.

## DIR/EFF

- **LEFT** The ring modulator is inactive, only the direct signal is audible.
- **CENTER** Purely the ring modulator signal is audible.
- **RIGHT** The external audio signal is audible.

You'll find a further ring modulator in the Oscillator section of the VIRUS. It operates individually for each voice using the signals of Oscillators 1 and 2.

```
1 INPUT RINGMOD
Dir/Eff      Off
```

## ■ SECOND OUTPUT/SURROUND

The SECOND OUTPUT function lets you select another mono or stereo out irrespective of what the other output assignments may be. The balance of levels between the normal output and this second output is infinitely variable.

## SELECT

This parameter controls the balance of levels between the normal and the second audio output. This means that, depending on the given application, SECOND BALANCE can serve as an effect send knob when an external device is patched in via the second output (or another PART of the VIRUS is patched in via the aux buses). It also serves as a back/front knob when you want to create a quadraphonic signal.

```
1 SECOND OUTPUT
SELECT      Off
```

## BALANCE

With this parameter, you can mix the output signals of the PARTs individually to the second output that you chose by means of the SELECT option. When it is set to the OFF position, you will only hear only the conventional output; when it is set to 127, the signal is routed exclusively to the second output. The values in between these two extremes determine the weighted balance between the conventional and the second output.

In conjunction with the conventional output of the given sound, you end up with a quadraphonic signal that is suitable for Surround applications. Using Panorama (left, right) and the SECOND OUTPUT Balance (front, back), you can create a genuine quadraphonic mix in the VIRUS.

The second output can also serve as an FX loop. To this end, all you have to do is connect it to an external effects device. The Balance parameter then serves as an effect send knob that determines the balance between the direct or dry signal and the wet or effect signal. When

you opt to use one of the aux buses as a second output, the aux bus can also serve as an FX loop. You can route the aux signal to a PART and have the PART process this signal further.

If no output has been selected for SECOND OUTPUT Select (Off), the Balance parameter is disabled.

```

1 SECOND OUTPUT
BALANCE      OFF
  
```

## ■ VELOCITY

■ *In addition to the following fixed destinations, any parameter can be controlled via velocity by way of the Modulation Matrix (ASSIGN).*

### VELOCITY OSC 1 SHAPE

Determines the intensity of the VELOCITY control for the first oscillator's SHAPE parameter (see appropriate section).

```

1 VELOCITY
Osc1Shape    +4
  
```

### VELOCITY OSC 2 SHAPE

Determines the intensity of the VELOCITY control for the second oscillator's SHAPE parameter (see appropriate section).

```

1 VELOCITY
Osc2Shape    -10
  
```

### VELOCITY PULSE WIDTH

Determines the intensity of the VELOCITY control for the pulse width (see appropriate section) of both oscillators.

```

1 VELOCITY
PulseWidth   +20
  
```

### VELOCITY FM AMOUNT

Determines the intensity of the VELOCITY control for the frequency modulation.

```

1 VELOCITY
FmAmount     +32
  
```

### VELOCITY FILT 1 ENV AMT

Determines the intensity of the VELOCITY control for the modulation of Filter-1's cutoff frequency by the filter envelope.

```
1 VELOCITY  
Filt1EnvAmt +4
```

### VELOCITY FILT 2 ENV AMT

Determines the intensity of the VELOCITY control for the modulation of Filter-2's cutoff frequency by the filter envelope.

```
1 VELOCITY  
Osc2Shape -20
```

### VELOCITY RESONANCE 1

Determines the intensity of the VELOCITY control for the resonance of Filter-1.

```
1 VELOCITY  
Resonance1 +30
```

**VELOCITY RESONANCE 2** Determines the intensity of the VELOCITY control for the resonance of Filter-2.

```
1 VELOCITY  
Resonance2 +0
```

### VELOCITY VOLUME

Determines the intensity of the VELOCITY control for the volume.

```
1 VELOCITY  
Volume +20
```

### VELOCITY PANORAMA

Determines the intensity of the VELOCITY control for the Panorama position.

```
1 VELOCITY  
Panorama +30
```

## SOUND CATEGORY

Every *SINGLE* sound can be assigned to up to two categories by means of the parameters *CATEGORY 1* and *CATEGORY 2*. For example, you could assign the attributes "Bass" and "Acid" or "Lead" and "Favorite 1" to a given sound. These categories may be changed at any time and can be stored along with the sound. The factory sounds are assigned default categories.

```

1 CATEGORY 1
                Bass

```

## SOFT KNOB-1/2

The VIRUS has two freely assignable potentiometers which are particularly useful for giving direct access to parameters which are otherwise only available from within the menus. The destination parameters are defined in the Edit menu (SOFT KNOB 1/2 MODE). There are two parameters for each knob, one global and one local i.e. applying only to the current *SINGLE* program (which will override the global definition if defined). SOFT KNOBs always work in JUMP mode.

Please note that SOFT KNOB 2 doubles as a value control, and therefore only works as a SOFT KNOB when the Virus is in Play mode i.e. no Edit menu is selected.

These Soft Knobs operate in three different modes:

## SOFT KNOB MODES

- **GLOBAL** The knob controls the parameter that you have set to Global in the Soft Knob menu regardless of what the other settings and the selected *SINGLE* program may be.
- **SINGLE** The knob controls the parameter that you have set to Single in the Soft Knob menu. The setting for this parameter is stored in the *SINGLE* program and called up whenever you select this program. If, however, you have not selected a parameter for this program (SOFT KNOB Single = OFF), the setting for SOFT KNOB Global is automatically enabled.
- **MIDICONTROL** Here the controller number entered in the SOFT KNOB MIDI menu is sent regardless of what the other settings and the selected *SINGLE* program may be. Comparable to a small MIDI fader box, this mode is used to control connected MIDI devices. Note that this information is not processed internally in the VIRUS.

The setting for the actual SOFT KNOB mode is global. Under normal circumstances, you should set SOFT KNOB mode to "Single" because this is the most versatile mode. When you select a *SINGLE* sound whose SOFT KNOB mode is set to "Single", this setting is of course enabled. If not, Global SOFT KNOB mode is enabled.

```

1 DEFINABLES
Mode        Single

```

## SOFT KNOB 1 SINGLE

This is where you enter the parameter assignment for the SOFT KNOB-1 knob. The entry is an element of the current *SINGLE* PROGRAM

and is stored along with it. The entry is only active when SOFT KNOB-1 MODE is set to SINGLE. When SOFT KNOB-1 SINGLE is set to OFF, the Display page setting SOFT KNOB-1 GLOBAL is activated.

```
1 DEF 1 SINGLE
DelayTime (ms)◀
```

### SOFT KNOB-1 GLOBAL

This is where you enter the parameter assignment for the SOFT KNOB-1 knob. The entry remains valid regardless of the currently selected SINGLE PROGRAM. The entry is only active when SOFT KNOB-1 MODE is set to GLOBAL or SINGLE; although in the latter case SOFT KNOB-1 SINGLE in the current SINGLE PROGRAM must be set to OFF before the entry is activated.

```
1 DEF 1 GLOBAL
ClockTempo◀
```

### SOFT KNOB-1 MIDI

This is where you enter the MIDI Controller assignment for the SOFT KNOB-1 knob. The Controller is routed via MIDI Out for the purpose of controlling a connected MIDI device. The entry is only active when SOFT KNOB-1 MODE is set to MIDI.

### SOFT KNOB-1 NAME

For each SOFT KNOB, you can choose a short description from a list in the menu, and this will be saved as part of the SINGLE program. In Play mode, this will appear in the display – simply to remind you of what each SOFT KNOB does while you are playing your Virus.

Among other things, you can choose one of the following descriptions for each SOFT KNOB:

ATTACK, SUSTAIN, DECAY, RELEASE, FILTER, CUTOFF1, CUTOFF2, CUTOFF, RESO, BALANCE, FX AMT, DLY AMT, CHO AMT, PHA AMT, DIS AMT, DETUNE, SHAPE, OSC VOL, OSC BAL, NOISE, RINGMOD, SUBOSC, FM, TONE, TEMPO, SPEED, SCREAM, DEPTH, FEAR, FLOW, FAST, SLOW, MORPH, RATE

Please note that these are only for descriptive purposes – you are not changing the function of the SOFT KNOB here!

### SOFT KNOB-2

SOFT KNOB- 2 MODE  
SOFT KNOB- 2 SINGLE  
SOFT KNOB- 2 GLOBAL  
SOFT KNOB- 2 MIDI

and

### SOFT KNOB-2 NAME

Similar to SOFT KNOB 1 – see above

■ *The following parameters featured in the SYSTEM menu are described in greater detail below in the section Global Parameters / Midi Parameters / System Parameters. These oper-*

*ate globally and are accessible in the SYSTEM menu at any time irrespective of the given operating mode.*





# Multi Mode & System Setup

# Multi Mode Parameters

■ Please bear in mind the PART- and/or MULTI-related parameters described in the following are available in MULTI mode only.

## SELECT BANK

Activates the bank for a SINGLE PROGRAM for the current PART.

```
1 B36 101BASS RP
SelectBank B4
```

## SELECT NUMBER

Activates a SINGLE PROGRAM for the current PART.

```
1 B36 101BASS RP
SelctNumber 364
```

## PART TRANSPOSE

Transposes the PART in semitone steps.

```
1 B36 101BASS RP
PartTransp +04
```

## PART DETUNE

Fine-tunes the PART.

```
1 B36 101BASS RP
PartDetune +104
```

## PART VOLUME

Controls the volume level of the PART. In addition to PATCH VOLUME (in the EDIT menu, see appropriate section), MIDI Volume (Controller #7) and Expression (Controller #11), PART VOLUME is the fourth option for determining the volume level of a PART within a MULTI program. Please keep in mind that PART VOLUME is a bipolar parameter: In the negative half of the control range (-64 to 0) the signal level is controlled in the normal fashion - i.e. the sound fades out as negative numbers increase; from the center value upwards (0 to +63), extremely low-level signals are amplified. When you set values greater than 0 for sounds that are already fairly loud, you may hear undesirable digital distortion.

```
1 B36 101BASS RP
PartVolume +04
```

## OUTPUT SELECT

When you select an internal aux path as a signal output, you of course must route the signal of another PART to this aux path via INPUT SELECT before you can establish a signal connec-



tion between the two PARTS. Several PARTS can simultaneously access the external input or the internal aux paths via OUTPUT SELECT.

- <b>OUT 1 L</b>	The left jack of dual Output 1 (mono)
- <b>OUT 1 L+R</b>	Both jacks of dual Output 1 (stereo)
- <b>OUT 1 R</b>	The right jack of dual Output 1 (mono)
- <b>OUT 2 L</b>	The left jack of dual Output 2 (mono)
- <b>OUT 2 L+R</b>	Both jacks of dual Output 2 (stereo)
- <b>OUT 2 R</b>	The right jack of dual Output 2 (mono)
- <b>OUT 3 L</b>	The left jack of dual Output 3 (mono)
- <b>OUT 3 L+R</b>	Both jacks of dual Output 3 (stereo)
- <b>OUT 3 R</b>	The right jack of dual Output 3 (mono)
- <b>AUX 1 L</b>	The left channel of internal Aux 1 (mono)
- <b>AUX 1 L+R</b>	Both channels of internal Aux 1 (stereo)
- <b>AUX 1 R</b>	The right channel of internal Aux 1 (mono)
- <b>AUX 2 L</b>	The left channel of internal Aux 2 (mono)
- <b>AUX 2 L+R</b>	Both channels of internal Aux 2 (stereo)
- <b>AUX 2 R</b>	The right channel of internal Aux 2 (mono)

In SINGLE MODE, OUTPUT SELECT does not appear in the menu; in this case Output 1 (stereo) is preset.

If the selected output is monophonic, then the Panorama settings and modulations in the sound program are inactive.

```

1 B36 101BASS RP
OutSel Out1 L+R

```

### PART ENABLE

Switches the MIDI receive mode of a given PART ON and OFF, i.e. enables reception of MIDI data.

```

1 B36 101BASS RP
Part Enable On

```

### MIDI CHANNEL

elects the MIDI channel of the PART. If two or more PARTs are selected for the same MIDI channel, these PARTs will be played simultaneously. This creates what are generally called layer sounds.

```

1 B36 101BASS RP
MidiChannel 14

```

### PRIORITY

This parameter lets you control how the VIRUS"steals notes when its polyphonic performance is maxed out. In the first position, "LOW", the voices of all PARTs have the same priority when one voice is switched off to accommo-

date a new voice. When you set the Priority of a PART to "High", the VIRUS will not "steal" any notes from the voices of this PART. Use this parameter sparingly. In other words, if you set all Parts to High, you're defeating the purpose of this parameter. In this case, it wouldn't have any effect since the priority of all voices is the same.

```
1 B36 101BASS RP  
Priority Low
```

### KEYRANG

In MULTI mode, you can limit the note range of individual PARTs. Use the LowKey and HighKey parameters to define the upper and lower limits of the note range to which the PART will respond. This lets you assign the sounds of several PARTs that are addressed by the same MIDI channel to different keyboard zones to create what are called split sounds.

If, however, you adjust the two parameters so that the value of LowKey lies above that of HighKey, the note range between these two high and low limits is disabled and the PART will respond only to notes the lie above and below this zone.

### LOW KEY

Determines the lowest MIDI note that the PART responds to.

```
1 B36 101BASS RP  
LowKey C-2
```

### HIGH KEY

Determines the highest MIDI note that the PART responds to.

```
1 B36 101BASS RP  
HighKey G8
```

### MIDI VOLUME

ENABLE Switches a given PART's MIDI receive mode for MIDI Controller 7 (volume) ON and OFF.

```
1 B36 101BASS RP  
MidiVolume Off
```

### HOLD PEDAL

ENABLE Switches a given PART's MIDI receive mode for the hold pedal (MIDI Controller #64) ON and OFF.

```
1 B36 101BASS RP  
HoldPedal Ena
```

## PRG CHG ENABLE

Switches a given PART's MIDI receive mode for MIDI Program Change messages ON and OFF.

```
1 B36 101BASS RP  
Pro9Change Ena▶
```

■ *The following parameter groups of the MULTI-EDIT-Menu have already been described in the SINGLE-EDIT-Menu (they are identical): CLOCK TEMPO, SOFT KNOB-1/2, MIDI, SYSTEM*



# SYSTEM

The following parameters are global parameters and are accessible at any time in the SYSTEM menu regardless of the current operating mode. If you own a keyboard version of the VIRUS, the parameters for the keyboard and other manual control devices will appear at this point. These are explained in detail in the chapter “The keyboard versions of the Virus” on page 125

## RANDOM AMOUNT

Determines the degree to which the Random Patch Generator changes sound parameters. Small values here often lead to subtle changes, but repeatedly pressing the RANDOM button can make the effect more and more pronounced. Larger values can make drastic changes to the sound. Pressing UNDO cancels the the last randomization, and REDO (press the Undo button again) restores the the last randomization.

```

1 RANDOM [STORE]
Amount      04
  
```

## PAR DEPTH

This parameter determines the number of sound parameters that are influenced by the RANDOM PATCH GENERATOR. If you enter a low value for PAR DEPTH, just a few parameters will be modified. Beyond that, the manner in which the few parameters are edited assures that the sound is manipulated “organically”.

This simply means that it isn’t bent radically so that, for example, the given sound can still be played “tonally”.

As you increase the values for PAR DEPTH, other parameters that have a greater impact on the timbre of the sound are changed. At higher values, the RANDOM PATCH GENERATOR tends to generate noise-like sounds or special effects.

```

1 RANDOM [STORE]
ParaDepth  04
  
```

## KEYBOARD

### KEYBOARD LOCAL

If this parameter is set to “Off”, all keyboard-related data (i.e. Note On, Aftertouch, the wheels and both pedals) are only sent to the MIDI OUT socket, and not directly to the Virus sound generation.

■ *Tip: LocalOff is especially useful when you are working with MIDI sequencers.*

```

1 KEYBOARD
Local      ON4
  
```

## KEYBOARD MODE

The Keyboard Mode function enables you to select OneChannel or Multichannels and this is how it works:

If Onechannel is selected, the keyboard transmits on the MIDI channel of the selected part (or on the “Global Channel” in Single Mode) to the sound generator and to the MIDI-Out. This is the normal setting for all sequencer and stand-alone applications. If MultiChannels is selected, the keyboard signals are generally sent to all the Multiparts. All the active parts (PartEnable=On) are controlled by the keyboard, regardless of which MIDI channel has been set. Whether data is sent out via MIDI depends on the KeybToMidi parameter (Off, On) which can be found in the Part-Parameters in Multimode: If KeybToMidi is activated (On) for one or more parts, the keyboard transmits to MIDI-Out on each of the part’s MIDI channels. It is hereby taken into consideration which keyboard area the part has (LowKey, HighKey), and each individual part-transposition (PartTranspose).

The current bank and program numbers and the parts’ volume settings are also transmitted via MIDI-Out. The parameter formerly activated on the receiving side can now be used on the transmitter side; the 16 Multi-Parts now at your disposal allow for very extensive control of external sound generators. The PartEnable parameter is also activated on the transmitter side, it determines if the keyboard plays the internal part (On) or not (Off). In other words PartEnable is the counterpart to the KeybToMidi parameter, and can be regarded as an individual Local-Off for each part.

```
1 KEYBOARD MODE
  OneChannel
```

## KEYBOARD TRANSPOSE

The VIRUS keyboard can be transposed in semitones. Note that this transposition applies to the output of the keyboard, it is not generated within the Virus itself. Transposition therefore also applies to notes sent to the MIDI OUT socket.

```
1 KEYBOARD
  Transpose +12
```

## TRANSPOSE BUTTONS

These buttons are used to transpose the output of the Virus keyboard in octaves. Note that this transposition applies to the output of the keyboard, it is not generated within the Virus itself. Transposition therefore also applies to notes sent to the MIDI OUT socket.

```
1 KEYBOARD TRANS
  Buttons Keyb
```

## MODWHEEL

Selects the MIDI controller number sent by the Modulation Wheel. The default value is CC#1 (Mod).

```
1 KEYB MODWHEEL
  ModWheel 1
```

### PEDAL-1

Selects the MIDI controller number of the first pedal. The default value is CC#64 (sustain pedal).

```
1 KEYB PEDAL-1  
HoldPedal 565
```

### PEDAL-2

Selects the MIDI controller number of the second pedal. The default value is CC#7 (main volume).

```
1 KEYB PEDAL-2  
Volume 7
```

### PRESSURE SENSITIVITY

Adjusts the sensitivity of Aftertouch for the Virus kc and indigo. The default value is 64 (normal).

```
1 KEYB PRESSURE  
Sensitivity 64
```

## INPUT

### INPUT DIRECT THRU

The stereo signal patched to the external inputs can be routed to the dual-jack Output 1 without being processed in any manner. For instance you can blend the output signal of another sound generator with the output signal of the VIRUS and send the mixed signal to Output 1 without having to use an external mixing console. INPUT DIRECT THRU controls the level of this direct signal path.

This is a global parameter, i.e. it is not stored along with the SINGLE PROGRAM.

```
1 INPUT GLOBAL  
DirectThru 0
```

### INPUT BOOST

With INPUT BOOST, you can increase the signal level of the two external inputs by up to 36 dB. The signal is boosted in the digital section of the VIRUS, so the noise level of the analog-digital converter increases automatically. Consequently you should dial in the cleanest, loudest possible signal at the external sound generator. The VIRUS features a signal level indicator that allows you to monitor the signal level visually: see LED MODE in the SYSTEM menu. You should only turn up the INPUT BOOST when you are unable to dial in a sufficient signal level prior to the external inputs. At a value of 0, the signal level is not boosted at all.

This is a global parameter, i.e. it affects all involved PARTs and INPUT DIRECT THRU (see paragraph below). It is not stored along with the SINGLE PROGRAM.

```

1 INPUT GLOBAL
Boost          0 1
  
```

## INPUT GAIN

Using this switch you can increase the input signal by 20 decibels before it is sent to the digital analog converter. This means that with the proper cords you can connect a microphone, an electric guitar or a record player directly to the Virus Rack. However, to attain the best possible sound quality, it is advisable to patch the signal into an appropriate signal processor such as a microphone preamplifier, a mixer, or a guitar preamp before you route it into the input of the Virus.

■ *Please turn down the Master Volume knob before you turn input gain up. Be aware that boosting the signal by 20 decibels increases the level tenfold!*

```

1 INPUT GLOBAL
InputGain     ON 1
  
```

## INPUT PHONO

Since record players have a characteristic frequency response, we equipped the Virus Rack with a suitable Phono equalizer. It may be activated via the INPUT Phono parameter.

```

1 INPUT GLOBAL
Phono         Off 1
  
```

## MIDI

### MIDI DUMP TX

This feature transfers the sound data of one VIRUS to another VIRUS, a computer or a hardware sequencer via MIDI. The dump is executed via so-called system exclusive data (SysEx). You can choose from the following dump options:

- **TOTAL** All data in the RAM of the VIRUS, in other words, the SINGLE Banks A and B, the MULTI programs, the EDIT buffers as well as the settings for the global parameters.
- **GLOBAL** Here you can transfer all global data (i.e. all parameters that are not stored with a Single or a Multi e.g. Global Channel).
- **CONTROLLER DUMP** This option lets you send a Single to the MIDI Out in the form of a controller dump. Here all parameters are sent in succession as individual parameter changes. The parameters are sent either as controllers, polypressure or SysEx messages, depending on the setting in SYSTEM: MIDI

CONTROL LoPage / HiPage. This function sends the SINGLE program that you are currently processing (the contents of the Edit buffer).

The Controller Dump is not an alternative to a normal Single Dump since it takes so much longer to transmit data. However, it does allow you to send a complete Single sound to a parameter-based editor (Logic Environment, Cubase Mixer) that is compatible with the VIRUS for the purpose of updating the editor.

- **SINGLE BUFFER** This option dumps the data of the SINGLE program that you are currently processing (the Edit buffer).
- **SINGLE BANK A** All 128 sound programs of Bank A are sent.
- **SINGLE BANK B** All 128 sound programs of Bank B are sent.
- **MULTI BUFFER** This option dumps the data of the MULTI program that you are currently processing (the MULTI's Edit buffer). Please bear in mind that, with this option, merely the MULTI parameters and not the associated SINGLE sounds are transmitted.
- **ARRANGEMENT** The current MULTI and the SINGLE programs involved can be transmitted in one go with this option. To shorten the amount of time that this dump takes, only the sounds of those PARTs whose Part Enable option is set to On are sent.
- **MULTI BANK** All MULTI programs are transmitted with this option. Please bear in mind that, with this option, merely the MULTI parameters and not the associated SINGLE sounds are transmitted. If you want to save all data of the VIRUS to a sequencer, you can select the "Total" dump option.

Once you have selected the desired data type, the dump is initiated via STORE.

```

1 MIDI DUMP TX
SingleBank A
```

### MIDI DUMP RX

If you want to send MIDI data to the VIRUS, you don't have to log in first. The VIRUS automatically accepts incoming data via its MIDI In port. However, you can determine where the data of a complete incoming bank is stored. In contrast, single sound are always first dumped in the Edit buffer; you have to manually store them somewhere else, otherwise they are deleted by the next program change.

- **DISABLE** Incoming data via MIDI IN is ignored.
- **ENABLE** Bank data is re-loaded to the bank from which they were originally dumped, regardless of which bank is currently selected.
- **FORCE TO BANK A** Bank data is loaded to Bank A exclusively.
- **FORCE TO BANK B** Bank data is loaded to Bank B exclusively
- **FORCE TO EDIT BUFFER** Loads the single programs of the bank to the Edit buffer one by one, whereby the each preceding single sound is deleted by the one following it. This function treats a bank dump as a succession of single sounds and comes in handy when you want to search an unfamiliar bank or load single sounds without having to load the entire bank.



- **VERIFY** Compares an incoming MIDI dump to the memory content of the VIRUS. It checks if a dump was recorded properly on the sequencer and if it can be played back correctly. Load data from the sequencer into the VIRUS while "Verify" is enabled. The VIRUS' display will indicate if the device is actually receiving data and it will call your attention to any transmission errors that may occur. Data stored in the VIRUS remains unaffected by this operation.

```

1 MIDI DUMP RX
ForceToBankA

```

## GLOBAL CHANNEL

Selects the MIDI channels for SINGLE MODE and the program switching option for entire MULTI PROGRAMs in MULTI MODE. In MULTI SINGLE MODE, the MULTI MODE switching option is locked (permanently deactivated). The number in the upper left of the display shows the MIDI Global Channel in Single Mode and the current Partnumber if the VIRUS is in MULTI MODE or MULTI SINGLE MODE.

```

1 MIDI
GlobalChan 1

```

## MIDI PANEL DESTINATION

- **INTERNAL** All types of control operations are sent directly to the VIRUS sound generation components and not to the MIDI Out.

- **INT+MIDI** All types of control operations are sent directly to the VIRUS sound generation components and simultaneously to MIDI Out.
- **MIDI** All types of control operations are sent exclusively to MIDI-Out, the internal signal path is severed. This position is equivalent to the classic Local Off function for the user interface.

```

1 MIDI
Panel Int+Midi

```

## MIDI SOFT THRU

Soft Thru forwards all MIDI data the VIRUS receives from the MIDI input to the MIDI output socket. The MIDI data the VIRUS generates itself are being mixed in.

```

1 MIDI
SoftThru OFF

```

- Soft thru is only available with the VIRUS kc/indigo

### ARPEGGSEND

This parameter determines whether or not (ON or OFF, respectively) the arpeggiator sends the notes it generates to the MIDI Out. This function is a feasible option only when you want to address further sound generators via MIDI.

```
1 MIDI  
ArpeggSend Off
```

If you want to record notes generated by the Arpeggiator to a sequencer, please ensure that these are not sent directly back to the VIRUS. If you fail to do this, the Arpeggiator may no longer be able to play correctly under these conditions. To avoid this situation, route data via another MIDI channel or switch off the MIDI Thru function on your sequencer.

### CLOCK RX

This parameter activates or deactivates the receiving of MIDI-Clock globally. The VIRUS automatically detects the presence of MIDI-Clock (Auto). Therefore this parameter is not intended to switch MIDI-Clock on, but to switch it off if you should feel that this is necessary (Off).

```
1 MIDI  
ClockRx Auto
```

### MIDI VOLUME ENABLE

Globally switches the reception of Volume data (Controller #7) on (ENA) or off (DIS).

```
1 MIDI  
MidiVolume Ena
```

### PROGRAM CHANGE ENABLE

Globally switches the reception of Program Change Data for SINGLE programs on and off.

```
1 MIDI  
ProgChange Ena
```

### MULTI PROGRAM CHANGE ENABLE

This function controls if the VIRUS receives program changes of multi-setups. If enabled, the VIRUS switches an entire multi-setup by a program change. The global MIDI channel has to be used to receive the program change. Please note that the multi program change will not work in the single-multi mode, because, in this mode, the display is unable to show the change.

```
1 MIDI  
MultiProgChg Dis
```

## MIDI DEVICE ID

Here you can enter the identification number for system exclusive data transfer. To enable communication between two VIRUS units - i.e. to exchange system exclusive data - you must assign the same MIDI DEVICE ID to both units.

```
1 MIDI
DeviceId  Omni
```

## MIDI CONTROL LOW PAGE

Here you can determine if you want the first 128 parameters (Page A) to be sent to MIDI-Out as system exclusive data (SysEx) or as MIDI Controllers (Contr). When you set it to "SysEx", controller data is disabled on the receive side; if you set it to "Contr", both controller and SysEx data are received.

```
1 MIDI CONTROL
LowPage  Contr
```

## MIDI CONTROL HIGH PAGE

Here you can determine if you want the second 128 (Page B) parameters to be sent as system exclusive data (SysEx) or as MIDI PolyPressure data (PolyPrs). When you set it to "SysEx",

polypressure data is disabled on the receive side; if you set it to "Contr", both polypressure and SysEx data are received.

```
1 MIDI CONTROL
HiPage  PolyPrs
```

## SYSTEM

### MASTER TUNE

Determines the overall pitch of the VIRUS. 0 = A 440 Hz. You can detune the device a half-note up or down at the most.

```
1 SYSTEM
Mastertune  +0
```

### ARPEGGIATOR GLOBAL

Enables or disables the arpeggiator globally. The global parameter overwrites the arpeggiator ON/OFF setting of the individual patches.

To emulate the behavior of earlier operating system version, you need to switch ON the option.

```
1 SYSTEM
Arpeggiator ON
```

### DELAYGLOBAL

Enables or disables the delay globally. This global parameter overwrites the Delay/Reverb setting of the individual patches.

To emulate the behavior of earlier operating system version, you need to switch ON the option.

```
1 SYSTEM
Delay ON
```

### MEMORY PROTECT

Locks (ON) or unlocks (OFF) the memory in which the sounds of the VIRUS are stored. When you switch MEMORY PROTECT on, you can avoid inadvertent overwriting of programs when you accidentally press the STORE button.

- **OFF** Patches and Multis can be stored
- **ON** The VIRUS is completely memory protected. Patches and multis can't be stored.

- **WARN** Patches and Multis can be stored. Furthermore the "SOUND EDITED! Remember storing" alert in the multimode is disabled. The mode is especially made for live musicians who need to switch in between edited multi settings without warnings.

```
1 SYSTEM
MemProtect Off
```

### EXPERT MODE

EXPERT MODE: The Virus features numerous parameters. Many of these you can occasionally do without because they are not absolutely essential to basic sound programming, and they do tend to make the device a little more challenging to handle. EXPERT mode can solve this problem. It lets hide and show rarely used parameters in the display menus.

- **EASY** Only the most important parameters are visible.
- **EXPERT** All parameters are visible
- **SHOW ALL** If this is option is selected, all parameters, including those with dedicated controls on the panel, will be accessible from within the menu (they would normally not appear there). Example: Cutoff1 is not present in the Edit menu of the filter because it can be set by turning the dedicated control. Leaving out such parameters from the menus make them much leaner.

Activating the Show All option can be useful when more than one parameter share the same control, for instance the effect parameters: If you press SELECT to change control in the effects section to CHORUS, then adjust the SEND parameter and finally switch over to PHASER, the position of the knob is unlike-

ly to reflect the current SEND value of the phaser. To avoid unwanted value jumps in these parameters, you can activate the Show All option and make your adjustments from within the menu instead.

## LCD CONTRAST

Lets you adjust the contrast of the LC display to different light conditions and viewing angles.



- **IRELATIV** Alle modalen Regler (das sind die, die beispielsweise zwischen den verschiedenen LFOs oder Oszillatoren umgeschaltet werden) arbeiten in der RELATIVE-Betriebsart (siehe unten), die restlichen in der JUMP-Betriebsart. (Siehe dazu die Erläuterung zur iSNAP-Betriebsart.)


## KNOB MODE

Provides a selection of several knob operating modes which you can activate depending on personal preference or suitability to the tasks you currently dealing with:

- **OFF** All controls except MASTER VOLUME are deactivated.
- **JUMP** Any movement of controls updates the data immediately; the parameter suddenly “jumps” to the value corresponding to the new position.
- **SNAP** Moving a control has no audible effect until after the original value has been passed through – this is useful to prevent sudden changes in the sound while turning a knob.

Im SNAP-Mode tritt rechts neben der Zahl ein @-symbol hinzu, das anzeigt, in welche Richtung der VALUE-Regler gedreht werden muss, um den aktuellen Parameterwert zu überstreichen.

- **ISNAP** The modal controls (for instance those whose functions apply to one oscillator or LFO at a time) will be in SNAP mode, whereas all the others will be in JUMP mode. The iSNAP mode is useful for preventing sudden changes in value after switching over to a different oscillator or LFO etc.
- **IRELATIV** The modal controls (for instance those whose functions apply to one oscillator or LFO at a time) will be in RELATIVE mode, whereas all the others will be in JUMP mode.



## KNOB DISPLAY

In an active menu, SYSTEM KNOB DISPLAY offers different display option for parameters that have knobs assigned to them:

- **OFF** Knob movements are not displayed; the current contents of the display remain intact when you turn a knob.
- **SHORT** When you turn a knob, the current contents of the lower display line are briefly overwritten by data representing the change in parameter value; once the action is completed, the original contents reappear in the lower display line.
- **LONG** Same as SHORT, except that - you guessed it - the display shows the knob data for a longer period of time.

- **ON** The contents of the display are overwritten when you turn a knob; the original menu does not reappear in the display.



### LED MODE

Here you can chose between two operating modes for the RATE LEDs of LFO 1 and 2:

- **LFO** The LEDs indicate the oscillations of the LFOs.
- **INPUT** The LEDs serve as level indicators for the two external audio inputs (RATE 1 = Input L; RATE 2 = Input R). The brightness of the LEDs indicates the current input level; signal saturation is indicated by rapidly flashing LEDs.

To achieve maximum sound quality for the system, you should set the input signal to a level that is as close as possible to the saturation threshold. However you should avoid setting the level beyond the saturation threshold, otherwise you will hear undesirable distortion in the signal. You can also use the level indicators to see if an input signal is actually patched in.

- **AUTO** When you activate AUTO, the LFO Rate LEDs will automatically indicate the input level when you switch to a SINGLE or PART that accesses an external audio outputs.
- **OUTPUT1**
- **OUTPUT2**
- **OUTPUT3**
- **AUX1**

- **AUX2** Much like when the setting «ExtIn» is enabled, you can have the two LFO Rate LED's indicate the signal levels of five further signal buses. This lets you check visually if a signal is being routed via a given bus and spot overloaded circuits. When you activate this option, the LFO1 LED indicates the left channel and the LFO2 LED indicates the right channel of the selected signal bus. The LEDs will flash rapidly to indicated an overloaded bus.
- **STEAL** The "Steal" setting indicates if a voice is cut off in the interest of providing the voices required to render a new note whenever the polyphony that VIRUS has been exhausted. If the device is forced to cut a note off, it will select the voice whose signal level has dropped furthest. Considering that a voice fades out over a range of 0 to -144 decibels, but – depending on the sonic context – the signal fades into the background at -32 to -48 decibels, this process of cutting off fading notes is largely inaudible. The brightness of the LFO Rate LED will fluctuate to indicate the volume envelope's current level for the note that the VIRUS is cutting off.





## The keyboard versions of the Virus

## ■ THE VIRUS KC AND THE INDIGO

---

Although the VIRUS kc or the indigo is merely a VIRUS with a keyboard, there are a few characteristics to be considered, which is what the following section deals with.

### LOCAL OFF AND “THREE IN ONE”

To be able to get the most out of your VIRUS kc / indigo, and to use it sensibly, it is worthwhile to theoretically dissect the machine into its components: Keyboard, panel and sound generator. The keyboard and the panel transmit data, namely the keys being played and the wheels and pots being turned. The VIRUS' invisible heart, the sound generator, receives this data.

The transmitter and receiver communicate via the MIDI standard, so whether the sound generator receives note messages via the keyboard or via MIDI-In makes no real difference. The same applies for data sent from the pots on the panel to the sound generator: Normal MIDI data is sent, just as if it were being sent to the sound generator via the MIDI-In.

Why do we feel inclined to direct your attention to this circumstance so explicitly? Simple: You might have come into contact with the so called Local-Off-Mode on other synthesizers: when activated the keyboard sends data to the MIDI-Out, but not directly to the sound generator. This makes sense when you use a synthesizer along with a sequencer, and want to use the synthesizer as a Masterkeyboard in your setup. In this case the sequencer decides which machine receives the keyboard data, and it could be very undesirable for the keyboard to send data directly to the internal sound generator. After all you do not want to send the data twice,

(directly as well as through the sequencer), nor do you want the internal sound generator to play along when you are trying to play the sounds on a different synthesizer.

So obviously the VIRUS kc / indigo also has a Local-Off-Mode (Parameter: KEYBOARD Local (Off, On)). When activated, all the keyboard data, i.e. aftertouch, the data from the wheels and from the two pedals, is sent only to the MIDI-Out, and not to the sound generator.

Just like on the VIRUS without a keyboard, the VIRUS kc / indigo has a special Local-Off-Mode for the Panel (Parameter: MIDI Panel: Internal, Int+MIDI, MIDI). You can choose whether the data from the control panel should be sent only to the sound generator, to the sound generator and MIDI-Out, or just to MIDI-Out. Separating the Local-Off mode for the panel from that of the keyboard may seem a little confusing and unnecessarily complicated at first, but it does make sense - as shown in the following example:

Let us suppose you want to use the VIRUS kc / indigo as a Masterkeyboard with your sequencer and have switched to Local-Off. If this mode were valid for the keyboard and the panel, the data from both transmitters would not be sent to the VIRUS' sound generator, only to the MIDI-Out. This would be desirable as far as the keyboard data is concerned, but not necessarily for the control panel data: If you suddenly wanted to turn the VIRUS' Cutoff pot to dampen the VIRUS sound, the pot's data would not arrive at the sound generator, only at the sequencer. From there it might be passed on to an entirely different synthesizer, where it could cause sound changes that were not at all intended - after all there is no standard allocation for control data to parameters.

To make it short: It can be very practical and easier on the nerves, to be able to activate the Local-Off-Mode for the keyboard, while the



pots still control only the VIRUS - and nothing else. Only if you want to record the control data in a sequencer, or definitely want to influence another machine with the VIRUS' controls, does it make sense to send the control data simultaneously - or exclusively - to the MIDI-Out.

After having acquainted you with both of the VIRUS kc / indigo's Local-Off Modes, it is time to take a look at a few more of the keyboard version's features.

## KEYBOARD & COMPANY

The keyboard is not the only difference between a VIRUS kc / indigo and a VIRUS without a Keyboard. After all the keyboard comes with two wheels and two pedal interfaces. The keyboard is also equipped with an Aftertouch function, that is activated by pressing the keys being held.

The Pitch-Bend-Wheel is used mainly to bend the pitch, but can also be used to control other parameters via the modulation matrix. Pitch Bend is a bipolar control source, which means that the destination parameter can be shifted, starting from a middle value, either up or down. (A spring automatically returns the wheel to the middle value when you let it go.

This is not the case with the Modulation Wheel: This wheel sends "0" when turned all the way down, and its maximum value when turned to the top. The destination parameter can only be shifted in one direction. The classic application for the Modulation Wheel is to blend in vibrato for a sound. As a standard it is usually assigned to MIDI-Controller Nr. 1 ("Modulation"). Of course the Modulation Wheel can control other things instead of vibrato, e.g. the opening of a filter. As a matter of fact the modulation wheel can be used to control several parameters at the same time, because it can be assigned to different modulation destinations via the modulation matrix - by the way, the same applies to

the other control features. These multiple assignment capabilities enable you to create very complex sound changes, one might call them Sound-"Morphing."

■ *The VIRUS kc / indigo allows you to freely choose the controller that the Modulation Wheel sends - just in case you need it (Parameter KEYB MODWHEEL (Off, 1...127)). The standard, (and the factory preset) for the Modulation Wheel is - as mentioned above - MIDI-Controller 1. You could control any of the VIRUS' parameters by assigning the wheel to the corresponding controller.*

Although this would work, we strongly advise against doing so. If you assign a different controller than "1" to the Modulation Wheel, the VIRUS' software no longer recognizes the Modulation Wheel as such, and connections in the modulation matrix, (ASSIGN-Menu) that use the modulation wheel as the source of modulation no longer have any effect. The right way to do it, which we strongly recommend, is to leave the Modulation Wheel on Controller 1, and to select the corresponding modulation destination for the wheel in the matrix. Then the adjustments are also valid for each sound, and everything works the way it is supposed to.

Let us turn to the two pedal interfaces: They enable you to connect switch pedals (on/off) or control pedals (constant control signal). You can choose a MIDI-Controller for the pedals (Parameter: KEYB PEDAL 1 or 2 (Off, 1...127)). Standard are Controller 64 (hold or sustain pedal, the note played is held) and 7 (Channel- or MIDI-volume, the volume of the sound played.) Just as with the Modulation Wheel, the pedals can be used to control different parameters via the modulation matrix (ASSIGN).

Switch and control pedals are available in your local music store. The only suitable control pedals are the typical synthesizer control pedals with a single three pole plug (similar to a headphone plug). What does not work are volume or Wahwah pedals that guitarists use. In addition, some manufacturers' control pedals have a different polarity, so that the pedals do not function correctly with the VIRUS kc / indigo (no control effect or erratic control). We suggest you try out a control pedal before you buy it. Some manufacturers' switch pedals also have a different polarity. The VIRUS kc / indigo however recognizes this polarity when you switch it on or whenever you hit the Panic-Reset. Double-click both Transpose-buttons

## AFTERTOUCHE

(also commonly referred to as "Channel Pressure"), is a control signal that is generated by hitting a key, and whilst holding it, pressing it a bit harder (not too hard, lest the function be changed to "repair required") The harder the keys are pressed, the stronger the control signal becomes; excellent for modulating any parameters while playing the VIRUS' via its modulation matrix ("ASSIGN"). The sensitivity of the Aftertouch-function is set with the parameter KEYBOARD PRESSURE Sensitivity (Off, 1...127). Normal sensitivity is around 64, this allows you to exploit the entire aftertouch range. If you are using the keyboard to record MIDI data with a sequencer, it might make sense to turn the aftertouch-function off, (Sensitivity=Off), to avoid recording undesired MIDI data.

## TRANPOSE

The VIRUS' keyboard can be transposed in semitones. Mind you the transposing takes place in the transmitter (the keyboard) and not in the "receiver" (the sound generator). The transpose parameter is called KEYBOARD

Transpose (-64...+63). The KEYBOARD Transpose can be switched in octaves by the TRANSPOSE buttons on the user panel as well. By parameter KEYB TRANSPOSE Button you can choose if the TRANSPOSE buttons will switch the transpose of the SINGLE program (receiver position) or the Keyboard (transmitter position).

## THE KEYBOARD-MODES

You will be especially interested in the VIRUS' Keyboard-Mode-Function if you intend to use the VIRUS kc / indigo as a Masterkeyboard in order to manage further connected MIDI sound generators. To explain it, we have to take a closer look: If you use the VIRUS in MULTI MODE, you can play several parts on different MIDI channels. You can also assign several parts to the same MIDI channel, but set so that one part is only played on the lower end of the keyboard, and a different one played on the higher end.

This allows for a variety of split and layer variations. The lower half of the keyboard plays a bass, the higher end plays a pad sound that is mixed with brass - and so on. The parts are assigned to the keyboard areas in the VIRUS' Multi, where they are also saved - which means in the sound generator or in other words the receiver as mentioned in our "Three in One"-definition). The keyboard simply sends out the data, and the various notes are distributed to the correlating parts in the sound generator.

With the help of the Keyboard-Mode-Parameter, we can turn the entire thing around. It can relocate the Multi's note assignment back to the transmitter side, i.e. the keyboard. The notes

are checked and assigned in the keyboard and not in the sound generator. The idea behind this option is that it is an easy and elegant way to include external sound generators in the split and layer configurations.

The bass mentioned in the example above, was only activated by the lower half of the keyboard. Now the sound would no longer have to come from the VIRUS, any other MIDI controlled synthesizer would do. Selected keyboard ranges can be diverted at the MIDI-Out long before they reach the VIRUS' sound generator. During a live performance this enables you to tie in external sound generators by using the VIRUS as a masterkeyboard. This is not possible in normal MULTI MODE because the organizing and assigning functions only apply to the internal sound generators.

The Keyboard Mode function enables you to select OneChannel or Multichannels and this is how it works:

If Onechannel is selected, the keyboard transmits on only one MIDI channel, that is the channel of the selected part (or on the "Global Channel" in Single Mode) to the sound generator and to the MIDI-Out. This is the normal setting for all sequencer and stand-alone applications.

If MultiChannels is selected, the keyboard signals can be sent to all the Multiparts as well as to the Midi Out on several Midi Channels. The Routing is handled by the parameter Keyboard Route, that can be found in the Multi Edit Menu; individually for each Part. In the position "Internal" the Part is controlled by the keyboard, regardless of which MIDI channel has been set. But this Part does not send Midi data to the output.

When Keyboard Route is set to "Midi" for one or more parts, the keyboard transmits to MIDI-Out on each of the part's MIDI channels. It is

hereby taken into consideration which keyboard area the part has (LowKey, HighKey), and each individual part-transposition (PartTranspose).

The current bank and program numbers and the parts' volume settings are also transmitted via MIDI-Out. The parameter formerly activated on the receiving side can now be used on the transmitter side; the 16 Multi-Parts now at your disposal allow for very extensive control of external sound generators.

Independent of the Keyboard Routing the Parts always receive Midi data from the Midi-In in MultiChannels Mode. The parameter Part Enable is not existing in this mode.

Here once again the various applications:

## THE PASSIVE PART

Keyboard Route =Off

The Keyboard does not transmit data to either the MIDI-Out nor to the sound generator, and is consequently not activated on the transmitting side. The part does however receive data from the MIDI-In, and can be controlled on its MIDI channel by an external keyboard or sequencer.

## THE INTERNAL KEYBOARD ZONE

Keyboard Route =Internal

The keyboard sends out its signals to the sound generator of the corresponding part, but not to MIDI-Out.

## THE EXTERNAL KEYBOARD ZONE

Keyboard Mode =Midi

The keyboard sends its signals to MIDI-Out, but not to the sound generator of the corresponding part. This enables you to control an external machine with the appropriate keyboard zone.

## THE INTERNAL + EXTERNAL KEYBOARD ZONE

Keyboard Mode =Int+Midi

The keyboard sends its signals to the sound generator and to MIDI-Out. In a single keyboard zone you can combine a VIRUS part and an external sound generator on the same MIDI channel.

Since PartEnable does not work on the receiving side when in MultiChannels mode, the parts play the notes coming through MIDI-In on the corresponding MIDI channels! If this should create problems in your MIDI-Setup, it might be necessary to set different MIDI channels for transmitting and receiving on each machine. Alternatively a part can be “deactivated” if the LowKey and HighKey parameters are set to C-2. It would only respond to the lowest MIDI note C-2, which is rarely used in everyday situations.

Please remember that the KeybToMidi parameter is only visible if the KEYBOARD Mode is set to MultiChannels.

Please notice the following: When set to OneChannel, playing the keys has the effect that the keyboard and the panel operate the selected part. The Part-Select when MultiChannels is set is valid only for the panel, not for the keyboard.

Here an overview of the keyboard version’s special parameters:

<b>KEYBOARD ROUTING (PER PART)</b>	(Off, Internal, Midi, Int+Midi)
<b>KEYBOARD</b>	Local (Off, On)
<b>KEYBOARD MODE</b>	(OneChannel, MultiChannels)
<b>KEYBOARD TRANSPOSE</b>	(-64...+63)
<b>KEYB TRANPOSE BUTTONS</b>	(Single, Keyb)
<b>KEYB MOD-WHEEL</b>	Destination Controller
<b>KEYB PEDAL 1</b>	Destination Controller
<b>KEYB PEDAL 2</b>	Destination Controller
<b>KEYB PRESSURE-SENSITIVITY</b>	(Off, 1...127, Default #64)

All these parameters except KeybToMidi are global parameters. These parameters are only visible in the keyboard version of the VIRUS.



# The Vocoder of the VIRUS

## ■ VOCODER

---

Although vocoder sounds have seen a comeback in the recent time, many musicians do not specifically know how they work or even more importantly, how they sound! Various Vocoder presets are stored in the last section of SINGLE bank D (grammalogue "VOC"). These SINGLES require an audio signal being fed to the external inputs. The keyboard also needs to be played on most of the presets. The VIRUS Vocoder is not necessarily easy to handle. You should always refer to an existing Vocoder preset for editing.

The Vocoder is one of the most complex sections of the VIRUS. For this reason, we recommend that you use factory sounds that use the Vocoder as your point of departure and edit these to create your own sounds. This means that you don't have to start from scratch and that the Vocoder's parameters are set to viable values, which will facilitate programming considerably.

A Vocoder creates a new sound by combining two signals. The timbre of the so called analysis signal (or modulator signal) forms the carrier signal. A typical example for a modulator signal is the human voice, another suitable carrier signal can be a steady tone with rich harmonics.

The sound characteristic is being rendered into the new sound by two cascades of bandpass filters: The modulator signal is being sent through several parallel bandpass filters, which only pass through a certain part of the whole spectrum. Every bandpass filter is followed by an envelope follower which uses the level of the signal to create a control signal. This part of the vocoder is called a modulator bank.

The carrier signal is treated in a similar way. It is split into several bands by a chain of bandpass filters. Different to the technique used above, the bandpass filters are not followed by envelope followers. The circuit uses amplifiers which are levelled by the control signal output of the envelope followers of the modulator banks. This part of the vocoder is called the carrier bank or synthesis part.

As soon as the modulator detects a signal in a certain frequency range, its envelope follower levels the corresponding band in the synthesis part. In other words: Just the frequency band of the carrier signal (the steady tone), which is a part of the modulator signal (the spoken voice) in this second, is being passed to the output. This is why the steady tone starts to speak. The pitch of the output signal depends on the carrier. If a cord, e.g. a polyphonic pad sound is being used instead on a single tone, you can listen to a typical vocoder choir. Of course, you can use a different Modulator than a spoken voice. Have a try with a drumloop!

All you need is the internal synthesizer of the VIRUS. It is also possible to process external signals. The feature set of the VIRUS includes 32 filter bands, shifting the frequency's relation of modulator and carrier, adjustable quality (Q-factor) of the filter bands and much more. By using a multi patch and the auxiliary sends, sounds can be filtered or combined (see above). The vocoder substitutes the whole filter section of a single sound. Therefore, you can access the vocoder's parameters via the filter section on the front panel (see Filter Envelope Release and additional notes).

The VIRUS's vocoder consists of different sections which perform different tasks:

## THE MODULATOR BANK

This cascade of bandpass filters split the frequency spectrum of the modulator into slices, quite similar to the way a studio frequency analyser would.

## THE ENVELOPE FOLLOWER

The level at the output of each bandpass filter is measured by the modulator bank. The resulting control signal can be modified by an ATTACK and DECAY parameter. These signals are no audio signals, as they contain the envelope of the signal being analysed.

## THE CARRIER BANK

The signal is treated in a similar way to the signal which passes the modulator bank. In this case, the carrier signal is split by the bandpass filters. Each bandpass of the carrier bank corresponds to one of the modulator bank. Usually, both bandpasses use the same frequency slice. Similar to a synthesizer's envelope, the signal level being measured by the envelope followers of the modulator, is used to control the level of the carrier's filter. Last, but not least, the individually controlled signals of the carrier bank are reunified to create the vocoder's output sound.



## ■ THE PARAMETERS OF THE VIRUS VOCODER

---

■ *The Vocoder related parameters are located in the EFFECT Menu*

### VOCODER MODE

here you can enable the vocoder and choose the signal source for the carrier bank at the same time:

- **OSC** This mode uses the whole oscillator section of the VIRUS, including the noise generator as the carrier signal. The oscillators can be played polyphonic which enables the amplifier envelope to work as usual. The difference is in the filter section. The oscillator signal does not pass the filter section, as this section is being used to control the vocoder. It is possible to feed the vocoder with a single sound which uses the whole filter section. Just use the aux-sends in the multimode to feed the vocoder's input with a single sound created within another multipart. Use this certain auxiliary send signal as the carrier signal within the vocoder.
- **OSC-HOLD** This setting is identical to "OSC" although the hold-mode (which also is available at COMMON/KeyMode) is activated.
- **NOISE** White noise is used as the carrier. The oscillator section is disabled.
- **IN** (L / In L+R / In R / Aux L ...) The analog inputs or the aux-sends are the carrier signal. If a stereo source, like L+R, is chosen, the left and right signal is mixed to create a mono signal.

### OSC VOL

DEFAULT: 0 (MIDDLE)

OSC VOL adjusts the output level of the vocoder. This is independent of the signal source (which can be assigned using the vocoder mode parameter)

### INPUT SELECT

In the Edit menu

While INPUT Select regularly assigns the input source for INPUT Mode, the modulator bank input is assigned here, when the vocoder is activated. Again, stereo sources like L+R are mixed to a monophonic signal.

### VOCODER BAND QUANTITY

KNOB: FILTER RELEASE

It is possible to control the number of filter bands here between 1 and 32. This parameter changes the sonic complexity of the sound, by using more or less filter bands. Less filter bands result in a typical vocoder sound. More filter bands increase the quality of the signal's reproduction (e.g. how easily you can "understand" a vocoded voice). The VIRUS' polyphony might vary depending on the number of active filter bands.

### CENTER FREQUENCY

KNOB: CUTOFF

DEFAULT: 64 (MIDDLE)

The central frequency of the bandpass filters in the modulator- and carrier bank. Using a high Q (filter quality parameter, which is controlled using KEYFOLLOW) you can adjust the central frequency of the spectrum you edit.



## FREQUENCY SPREAD

**KNOB: KEYFOLLOW**  
**DEFAULT: +63 (RIGHT)**

The spread of the filter bands used by the modulator and carrier bank. This parameter can adjust both banks together or separately. The mode depends on the setting of the filter select buttons. FILT1 is assigned to the carrier, FILT2 controls the modulator. With maximum KEYFOLLOW (+63) the filters cover the whole frequency spectrum. Reducing the KEYFOLLOW results in narrower spread, whereby just a part of the frequency spectrum is covered. CUTOFF 1+2 define the centre frequency. Linking FILT1 and FILT2 results in identical frequencies for the modulator and the carrier. If only the spread of the carrier bank is being reduced, the analysed spectrum is being rendered on a part of the carrier signal. If you reduce the spread of the modulator bank (FILT2), just a part of the modulator signal is analysed but applied on the whole carrier signal. This leads to an increased spread of the spectrum. If one of the two KEYFOLLOW parameters has a negative amount, the modulator spectrum is applied on the carrier spectrum in a mirror symmetrical way. This causes a very interesting change in the bands. The modulator's treble frequencies control the carrier's bass frequencies and vice versa, for instance a human voice still has the sound of the human voice but it would be virtually impossible to understand anything. We want to encourage you to experiment with mirror symmetrical sounds using this function. It is definitely worth a try!

## MODULATOR FREQUENCY OFFSET

**KNOB: CUTOFF 2**  
**DEFAULT: 0 (MIDDLE)**

A linear shift of the modulator bank's central frequencies against the carrier bank, results in pitch-shifting and "mickey mouse" effects. CUTOFF2 creates an offset of the modulator to the carrier bank.

## Q-FACTOR

**KNOB: RESONANCE**  
**DEFAULT: 0 (LEFT)**

The resonance parameter controls the quality of the filter bands (like an equalizer's q-factor). Depending on the filter select setting, the banks are adjusted together or independently. FILT1 is assigned to the carrier, FILT2 controls the modulator. A low quality factor of the carrier bank leads to a fairly neutral reproduction of the carrier signal. A higher quality creates a higher resonance in the filter bands, which therefore make the overall sounds more artificial. The effect is less effective on the modulator bank. Here, the filter quality controls the "gab" in between the individual filters. Depending on the modulator signal, if you soften or tighten the "gab," it could lead to interesting changes, although in most cases this will result in a rather subliminal change.

## VOCODER ATTACK

**KNOB: FILTER ATTACK**  
**DEFAULT: 0 (LEFT)**

The attack time of the envelope follower. This parameter controls how fast the carrier bands react on a change of the modulator signal's frequency energy. Higher values result in a "flabby", lazy, even delayed response from the vocoder.

## VOCODER RELEASE

**KNOB: FILTER DECAY**

**DEFAULT: 0 (LEFT)**

The release time of the envelope follower. This parameter controls how fast the carrier bands reflect if a certain frequency disappears from the spectrum of the modulator signal. Here, higher values result in a kind of sustain in the carrier bands. High attack and release times lead to less speech recognition, although it is possible to create a really nice sounding synthesizer pads with.

## VOCODER SOURCE BALANCE

**KNOB: FILTER BALANCE**

**DEFAULT: 0 (MIDDLE)**

**FILTER BALANCE** creates a mixture of the vocoder signal and the modulator-respectively carrier signal. Turning **FILTER BALANCE** to the left adds a certain amount of the carrier signal to the vocoder signal. A turn to the right adds the modulator signal.

■ *Turning the **FILTER BALANCE** hard left or right can be used to monitor the vocoder's input signals only.*

## VOCODER SPECTRAL BALANCE

**KNOB: FILTER SUSTAIN TIME**

**DEFAULT: 64 (MIDDLE)**

Spectral balance between the higher and lower frequencies of the vocoder signal. This parameter works similar to a simple equalizer, which is e.g. capable to increase the quality of speech. The Spectral Balance highly influences the overall character of the vocoder.

Several vocoder related parameters can be modulated by LFO-1 and LFO-2

- **LFO 1 RESO 1+2** modulates the bandpass filter quality of the modulator and carrier bank.
- **LFO 2 FILT 1** modulates the bandpass filter frequency of the carrier bank.
- **LFO 2 FILT 2** modulates the bandpass filter frequency of the modulator bank.



## ■ NOTES ABOUT THE VOCODER:

---

The vocoder can also be controlled by any part of the multimode. If more than one part of the multimode contains an activated vocoder, only the vocoder of the part with the lowest part number is active.

The vocoder takes a lot of computing power. This reduces the maximum number of voices dependent on the number of vocoder bands used. A vocoder with 32 bands takes approximately 4 voices away, although the vocoder only starts to reduce the number of voices when there is an audio signal at the vocoder input. 10 seconds after the signal is diminished, the VIRUS "frees" the voices again to get back the maximum polyphony.

As mentioned before, the whole filter section is exchanged to the vocoder, parameters, parameters like saturation or the filter routing are not available anymore.

If you would like to use the vocoder as an external effect device, choose one external input in the VOCODER MODE parameter page (modulator signal) and the carrier signal by the INPUT SELECT page.

A similar task has to be performed to use several multimode parts to feed the vocoder. Use OUTPUT SELECT (OutSel) within the desired multimode patches to route them to the auxiliary sends. Then select these auxiliary sends in the VOCODER MODE and INPUT page. Isn't that easy?

The auxiliary sends of more than one part are mixed automatically (similar to a mixing desk). Therefore, a whole drum track (which consists of several multiparts for several instruments)

can be used at once to drive the vocoder's in. Using FILTER BALANCE you can balance the level of the original signal.

The effect section (chorus, delay) and the output selection can be used in a vocoder patch.

The vocoder is only active when an external signal is detected and switches itself off 10 seconds after the last input signal has ended. This assures that the VIRUS has all of its polyphony available while the vocoder is switched on but no input signal is applied.





# The VIRUS and Sequencers

## BASICS

Sequencers are used for recording and playing back MIDI data i.e. notes and controller information. To receive MIDI, the sequencer's MIDI Out must be connected to the Virus' MIDI In.

If you want to use a Virus KC or indigo as your master keyboard, its MIDI Out must also be connected to the sequencer's MIDI In. This connection also makes sense for Virus C or Virus Rack users: All Virus controls and parameters can send their data as MIDI signals, which can be recorded into the sequencer alongside the note data from the keyboard.

MIDI data can be sent and received via 16 channels per MIDI cable: In Multi mode, the Virus can play back up to 16 different sounds at the same time. Sequencers have separate tracks which can be freely assigned to different channels, so each sound can be individually addressed (the MIDI channel of each track should be set accordingly). If the sequencer has multiple MIDI outputs to allow several devices to have their own dedicated MIDI line, then the output port must also be defined for each track.

The Virus Multi mode consists of 16 Parts, each of which references a Single sound. The MIDI channel for each part can be freely assigned. If you set three Parts to the same MIDI channel, all three sounds will be played at the same time when you hit the keyboard. Although layering can be useful during live concerts, it is more likely to get in the way when working with a sequencer (as sequencers can control each sound individually). Tip: It is a good idea to set the MIDI channel of each Part to match its Part number: Part numbers appear at the top left of the display, so you will be able to see the current MIDI channel at all times.

The Multi program M0 'Sequencer' is already set up this way, so you can start working with a sequencer right away. Press the MULTI button

and select the program M0 using the Value buttons. The PART buttons are used to scroll through the 16 Parts. Changes to Virus parameters will affect the currently selected Part only.

MULTI SINGLE mode is perfect for working with sequencers: Press the MULTI and SINGLE buttons at the same time (so that both LEDs light up). You are still actually in Multi mode, program M0, but this now appears in a form which gives you full access to all 16 individual sounds (switchable using the Part buttons). Just like in Single mode, you can change the sound with the VALUE keys, modify it in any way, then save your work by pressing the STORE button. Sounds in other Parts are not affected by any of these actions.

Please note that in Multi mode only a single instance of the Delay/Reverb effect is shared by all 16 Parts. Changes to Delay/Reverb parameters will therefore affect all sounds involved. The only parameter which is available for individual Parts is the effect send. In Multi mode, Delay/Reverb settings are stored within the Multi program, and any such settings in the Single programs are ignored.

The number of possible tracks in modern sequencers is not limited to 16. Also, several tracks can send data over the same MIDI channel. This has many practical uses, e.g. recording notes and parameters for the same sound on separate tracks considerably simplifies further editing (see also below: Parameter control via MIDI).

The Virus KC and indigo keyboards always send MIDI data over the channel defined in the current Part. If the Virus keyboard is being used as the master keyboard for a modern sequencer, the channel setting makes no difference here: The sequencer ignores MIDI channel information from the keyboard, and sends data

using the channel of the currently selected track instead. This way you will hear the same sound during recording and playback.

If you want to use the Virus as a master keyboard, you should set the parameter "KEYBOARD Local" in the SYSTEM menu to "Off". This cuts the internal connection between the Virus keyboard and its sound generation circuitry so they are only connected via the MIDI cables to and from the sequencer. This prevents the Virus from receiving the same MIDI data twice – directly from the keyboard and via the sequencer. You can address different Parts in the Multi program by simply changing the active track in the sequencer.

Every sequencer is able to send MIDI Clock. If the CLOCK parameters in the Virus arpeggiators, LFOs and Delay are set accordingly, they will automatically synchronize to MIDI clock (and thus to the song tempo) sent by the sequencer.

## PARAMETER CONTROL VIA MIDI

Virtually all parameters of the VIRUS are accessible via MIDI so that, for example, you can manipulate knobs and buttons and record these movements to a sequencer. You may then route these commands back to the VIRUS, which will respond to these automated instructions automatically. MIDI controllers have proven effective for this external control option since these com-

mands – in contrast to system exclusive data – are transported very swiftly. Beyond that, they're easy to edit graphically in all standard sequencer programs.

## ORGANIZATIONAL INFORMATION

In order to be able to record the movements of knobs and status changes of buttons on the VIRUS to a sequencer, you must connect the MIDI Out of the VIRUS to the MIDI In of the computer or sequencer. You also have to enable reception of MIDI controllers and MIDI poly-pressure commands in the sequencer so that this data is not subject to one-sided filtering. Whenever appropriate, you also have to enable reception of this automation data on the VIRUS. To this end, go to the Cntrl menu and take a look at the MIDI parameters. You'll find a parameter called Panel that offers the options Internal, Internal+Midi and MIDI. This is where you determine the destination to which the knobs and buttons send their data. Internal means that the knobs and buttons send data exclusively to the sound generator and not to MIDI. Therefore, select Internal+Midi or MIDI so that data is sent to the sequencer via MIDI. Note that the MIDI option disconnects the knobs and buttons from the VIRUS' internal sound generation system. When this setting is enabled, data generated by knobs and buttons is only acknowledged by the VIRUS when it is routed back in a roundabout way via the computer/sequencer (the VIRUS must be selected as a track instrument in the sequencer and the "Thru" function of the sequencer must be activated).

Now scroll to the two parameters called LoPage and HiPage: LoPage should be set to Contr (MIDI controller), HiPage to PolyPrs (MIDI poly-pressure). There are only 128 controller numbers per MIDI channel, so that not all parameters of a VIRUS PART can be covered by controllers. On the VIRUS, this problem was

solved by splitting up its parameters into three Parameter PAGES for data transport purposes. Each of these three PAGES can contain up to 128 parameters. A SINGLE program consists of the parameters of the two first PAGES. Parameters of the first PAGE are assigned to the MIDI controllers, while the parameters of the second PAGE are sent and received by so-called polypressure data. This structure of this data type is identical to that of controllers; polypressure is also supported by sequencer programs. (This data type was initially created to allow the pressure exerted on keys to be transmitted polyphonically, but this required a special approach to playing that never really caught on. The VIRUS is the first instrument to exploit this data type in the interest of putting further controllers at your disposal.)

■ *Please note that the VIRUS allows you to control several PARTs via the same MIDI channel. This means that an incoming controller would collectively address this parameter in all PARTs. This of course defeats the purpose of routing several of these PARTs via the same channel, which is to double up different sounds. For this reason, the convention in the VIRUS is that, when several of these PARTs are patched through a single MIDI channel, only the PART with the lowest PART number is addressed by incoming controllers; all other PARTs ignore this data. This applies solely to sound parameters and not to so-called performance controllers such as the modulation wheel.*

As an alternative to parameter control via controller and polypressure data, you have the conventional system exclusive control option available (see "MIDI Implementation" in the appendix, "The VIRUS and Sequencers" on page 139). This system exclusive control option may be activated independently for the first two Parameter PAGES (under MIDI in the SYSTEM menu), in which case this control mode is the

only type of remote control option that is active – you get exclusively system exclusive control, as it were. The third parameter PAGE, in turn, lets you control the parameters of the current MULTI PROGRAM as well as global and/or system parameters. This third PAGE is addressed solely via system exclusive MIDI messages. The advantage of system exclusive control is that you can address PARTs individually irrespective of what their current MIDI channel assignments may be.

You'll find a list of all controller and polypressure assignments in the appendix.

## HANDLING MIDI PARAMETER CONTROL

If you have configured your MIDI system in accordance with the instructions in the previous section, you may activate the sequencer's recording mode and record the knob and button movements as you see fit. Check the Event or List editor of your sequencer to see if the recording operation was successful.

Good-to-know info: Do not record knob and button movements to the same track that contains the notes of any given passage. Instead, use a new track that sends its data to the same MIDI output and channel as the track containing the notes. Although the sequencer merges these two data streams internally, separating the two tracks makes it easier for you distinguish between the information that they contain. Besides, you're thus able to edit and copy the recording of the knob and button movements without affecting the actual notes on the other track.

If you wanted to take this an extreme, you could record the movements of every knob and button to a separate track. Although this sounds like a classic case of overkill, it can facilitate the process of editing the recorded sequences:



Bear in mind that the sequencer doesn't indicate the parameters addressed via the control features of the VIRUS by their names; instead, it indicates merely the controller and/or polypressure numbers. If you split up these control features by recording them to different tracks and giving these tracks names that give you an idea of what they contain, you'll find it much easier to work with these tracks.

## NOTES ON ADAPTIVE PARAMETER SMOOTHING

We developed a feature called Adaptive Parameter Smoothing for the VIRUS that assures automated knob movements are carried out so that parameter changes are not audible in steps commonly called zipper noise.

This means that the VIRUS responds just as smoothly to your sound-shaping actions as did the analog synthesizers of yore that were used before the devices that could store sounds were introduced. To this end, the response of the VIRUS is manipulated so that it smoothes changes in parameter value. Conveniently, this feature is dynamic, meaning that it takes into account the way these values change. However, smoothing is many cases undesirable. For example, left to its own devices, this feature would smooth deliberate, more radical knob movements where one value "jumps" to the next, thus creating unintentional "glitches". For example, this type of response would defeat the purpose of effects generated by a step sequencer's controller messages as well as gater effects that you programmed in your sequencer.

You can adjust Adaptive Parameter Smoothing via a function called Control Smooth mode (in the EDIT menu; COMMON: SmoothMode) to accommodate different sonic situations:

- **OFF** Adaptive Control Smoothing (parameter smoothing) is disabled.

**Application:** Parameter jumps are carried out without glitches. This option is ideal when you want to create gating and similar effects (e.g. via a step sequencer) where parameter values change abruptly.

**Side effect:** Continuous parameter changes – be it movements controlled via automated knobs or via MIDI – are incremental, which means you'll have to take zipper noise into account.

- **ON** Adaptive Control Smoothing is enabled.

**Application:** Parameter changes are carried out continuously and smoothly.

**Side effect:** Parameter jumps are also carried out continuously, meaning that glitches may be generated inadvertently.

- **AUTO** Adaptive Control Smoothing analyzes the nature of incoming parameter changes and carries these out continuously or abruptly, as the case may be.

**Application:** Both continuous as well as sudden parameter changes may be implemented in the same sound.

**Side effect:** This analysis of radical parameter changes can't cope with jumps that occur in rapid succession.

- **NOTE** Adaptive Control Smoothing works continuously, but jumps when a new note is played.

**Application:** Both continuous as well as sudden parameter changes may be implemented, whereby the jumps are always inserted at the beginning of a new note. Consequently, this option is well-suited when you want to control sounds via a step sequencer.

Side effect: When you're playing polyphonically, parameter jumps also affect notes that were played previously and are still sounding when a new note is played.

The Control Smooth mode parameter setting is considered a component part of a SINGLE sound and is thus stored with it.

■ *Step sequencers let you assign a new cutoff value for every note. You can create the same effect on a conventional sequencer. To this end, all you have to do is program a cutoff controller in the sequencer for every note in the arrangement. However, be aware that conventional sequencers can throw a spanner in the works: If the timing of this type of controller coincides precisely with the timing of a note, the sequencer will first send the note command so that the overall timing is not skewed by controller commands. For the purposes of our example, this means that the new cutoff value doesn't arrive until just after the note has been played. This can generate incidental artifacts. We recommend that you record the controllers separately to a track other than the one containing the notes of a given sequence (make sure that the track addresses the same MIDI channel) and that to assign a touch of predelay to this track (e.g. set Track Delay to -1). Then the cutoff value is updated just before the new note arrives. Incidentally, this phenomenon is not unique to the VIRUS, it is a design-related "flaw" inherent in all synthesizers.*

## ■ PROBLEMS RELATED TO PARAMETER CONTROL

---

If you enjoy experimenting with recording parameter changes, sooner or later, you will run into the following problem: When controller sequences are recorded to a sequencer, the last recorded value remains valid until another value is sent for this controller. For example, if you gradually open a filter for a sound in the middle of the song and record this parameter change, the filter will stay open until the end of the song if you not close it manually or close it via controllers. Moreover, when you start the song from the top, you'll again hear the sound with the filter open because the VIRUS hasn't received a command at the beginning of the song to close the filter. Not until the song arrives at the position where the recorded event begins does the VIRUS receive the first controller value for the filter. If, on the other hand, the song is started with the stored and unedited version of the filter sound, everything will be fine: The filter is closed and won't be opened until the recorded event tells the VIRUS to do just that.

If you understand this connection between recorded parameter changes and the current parameter status of the VIRUS, you'll find it easy to come up with solutions for these kinds of problems. Sticking with our example, you could send a controller value to the VIRUS that closes the filter again in a suitable position within the song, for instance, at some point after the filter opens or at the beginning of the song. However, this procedure can become tedious rather quickly if you have recorded many parameter changes – after all, what you're actually doing is literally copying the original values of different parameter in order to enter them into the sequencer. You could of course simply activate the sound at the beginning of the song via a program change message, which resets the parameters to their original stored values. What if,

however, you change or replace the sound in the VIRUS at some point? The program change message in the song would call up the wrong sound. The more reliable and certainly more elegant solution would be to store the sound(s) in the song. The VIRUS then receives all settings for sounds at the beginning the song, and you'd prevent hiccups such as the wrong sounds, "stuck" values and jumps from the get-go. In the next section, you'll find out just how you can do this.

## ■ ARRANGEMENT DUMP - THE SOUND IN THE SONG

---

Archiving all of the sounds used in a song is not only a good idea to prevent potential problems that may occur when parameters are controlled in real time. It also makes it easy for you to recall your work at some later point. Assuming that you've connected the MIDI Out of the VIRUS with a MIDI In of the computer, you can, for example, at any time send an individual sound or the content of the entire memory via MIDI in the form of something called a bulk dump to the sequencer and record this data there. This has a distinct advantage: all sound data can be stored together with the song and the status of the VIRUS required for this song can be restored at any time by simply sending the recorded data to the device. You'll find the menu for SysEx dumps by going to the SYSTEM menu and then MIDI DUMP TX.

When you opt to record a bulk dump to a sequencer, you can proceed in the same manner as you would when you record tracks consisting of notes. For example, you can move a bulk dump to any position in the arrangement. To as-

sure that the VIRUS plays the song back using the right sounds, we recommend that you position stored data prior to the song. Move all components of the actual song back so that you're left with enough room to accommodate the dump prior to the song's start position. Then when you start the sequencer on the first bar, sound-related data is sent to the VIRUS before the actual song begins. An individual sound dump is very short; a dump comprising a complete memory bank will extend over several bars.

■ *During a bulk dump, the VIRUS sends MIDI SysEx data to the computer. If you encounter problems while recording a bulk dump, please check if your sequencer refuses to accept SysEx data due to one-sided filtering. You can check whether or not anything was recorded by taking a look at the Event or List editor of your sequencer. In this editor, MIDI data is displayed numerically instead of graphically; in a normal Note editor (Key Edit, Matrix Edit or the like) SysEx data is NOT visible. Once you've successfully recorded a dump, look for entries in the list that are labeled "SysEx".*

The VIRUS lets you to send the entire memory content or just parts thereof to the sequencer. The most reliable solution is to transfer the entire memory (MIDI DUMP RX: Total). There is, however, a catch: Since a great deal of data is being transmitted ("Total", after all, means all SINGLE programs, all MULTIs, and so forth), the dump is very extensive and takes quite some time. Alternatively, you can also send just individual sounds, MULTIs or so-called "arrangements".

The other truly reliable option for archiving sounds is dumping an arrangement (MIDI DUMP RX: Arrangement). In this case, the current MULTI is transmitted. Since a MULTI contains the addresses of SINGLE sounds used in

the arrangement rather than the actual SINGLEs, the sounds of all active PARTs are sent separately (for more info on this, see the section on MULTIMODE). This option is convenient and fast, but has an inherent drawback: this type of arrangement dump does not take into account that your song uses program change messages to change sounds in the MULTI. Only the eight sounds to which the MULTI refers in the arrangement are sent, which is to be expected when you consider that the VIRUS can't anticipate that you intend to change these at some point during playback.

Dumping an arrangement is a great option when you're able to make do with the sixteen sounds to which the MULTI refers. If you want to or are compelled to change sounds, you should record the entire memory content to the sequencer. Sending individual MULTIs for the purpose of archiving sounds is pointless because they don't contain the actual sounds. Sending individual sounds, in turn, is only a viable proposition if you are operating the VIRUS in SINGLE mode and have opted not to use program change messages in the song.

■ *Proceed with extreme caution when you're working with SysEx data! If you send anything other than individual SINGLE sounds or individual MULTIs from the sequencer to the VIRUS, the CORRESPONDING DATA IN THE VIRUS WILL BE IRREVOCABLY OVERWRITTEN! So before you dump, for example, a bank to the VIRUS, you should make a backup of the user banks stored in the VIRUS (the RAM banks) by dumping them to the sequencer, provided of course that you care to preserve the sounds that they contain. Incidentally, it can't hurt to regularly dump all data stored in the VIRUS for backup purposes.*

You'll find a summary of all dump options and an explanation of these in the comprehensive overview of parameters, specifically, under the global parameters.






## Tips and tricks

## MULTI SINGLE MODE

In MULTI mode, the EDIT menus are responsible for administering the 16 PARTs. Consequently, you can't access SINGLE program parameters directly here. Beyond that, you're unable to change the SINGLE programs directly, which would admittedly be a handy option when you're working with a sequencer. This is why the VIRUS features MULTI SINGLE mode, which, strictly speaking, is more an alternative view of MULTI mode rather than a further mode in its own right. Activate MULTI SINGLE mode by pressing the MULTI and SINGLE buttons simultaneously.


Please bear in mind that MULTI SINGLE mode is really just another view of the normal MULTI mode and that it always works with the MULTI program that is currently selected in normal MULTI mode.

When you're working with a sequencer, start with a MULTI program that features neutral settings for its "administrative" parameters, for example, the MULTI program M0 Sequencer. Here the PART numbers are identical to the MIDI channels of the PARTs. Now when you work in MULTI SINGLE mode, the VIRUS responds as if it were in SINGLE mode, except that you have 16 sounds available simultaneously on 16 MIDI channels. Use the PART buttons to select these sounds

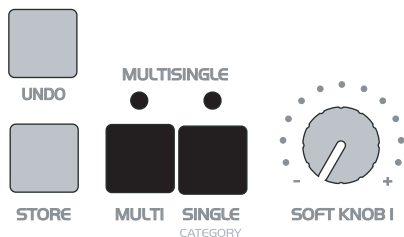

## VALUE BUTTONS

When you press the two VALUE buttons simultaneously, the parameter is reset to its original value. You can increase the rate at which parameter values change by pressing and holding one VALUE button and simultaneously pressing the other VALUE button. If you release the first VALUE button while holding the other down, the parameter is set to its maximum or minimum value.

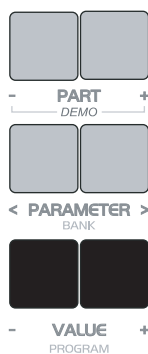

## ■ ALL ABOUTS INPUTS

### AUDIO INPUTS AND AUDIO ROUTING

The VIRUS is equipped with two inputs for external signals. You can route these to its sound generating components and use them as carrier or modulator signals for the Vocoder.

## OSC VOL / INPUT

When one of the two INPUT modes is activated, the OSC VOL knob rather than the oscillators controls the level of the input signal patched into the Filter section and of course also the gain of the SATURATION stage. In INPUT Dynamic mode, the level can increase surprisingly swiftly when you play several voices polyphonically. The reason for this is that, in contrast to when you're dealing with several oscillator signals, the voices are correlated because they are receiving an identical input signal. In the event that the VIRUS generates distortion when you're dealing with this type of signal routing set-up, be sure to back off the input level a tad via the OSC VOL knob.

## INPUT LEVEL INDICATOR

Alternatively, the RATE LEDs of LFO 1 and 2 can also serve as level indicators for the left and right external audio inputs. To this end, go to the SYSTEM menu, select the menu item SYSTEM, and set the Parameter LED mode to Input. When the parameter is set to Auto, the VIRUS automatically activates this level indicator mode when the selected SINGLE program accesses the external audio inputs. The LEDs will flash rapidly to indicate that the inputs are being overloaded.

Der korrekte Pegel sollte an dem Gerät eingestellt werden, welches die analogen Signale liefert, da so die AD-Wandler des VIRUS optimal ausgenutzt werden. Der Parameter INPUT Boost sollte nur in Ausnahmefällen zur Pegelanhebung verwendet werden, da er erst nach den AD-Wandlern das Signal digital verstärkt, und somit die Aussteuerung der Wandler selbst nicht beeinflusst.

You should dial in a suitable input level on the device that is sending the analog signals. The reason for this is that you want to feed the high-

est possible clean signal level to the analog-to-digital converters of the VIRUS so that they will deliver the best possible performance. You should only turn up INPUT BOOST as a last resort because it is located post A/D converters and boost signals digitally, which of course doesn't affect the level of the converters.

Signals within the VIRUS may also be overloaded and may distort when their levels are too high. Inherently, a virtual analog synthesizer's resonating filters and high level of polyphony lend signal levels considerable dynamic potential. We could only rule out this type of distortion entirely by lowering the fundamental output of the device significantly or by limiting specific parameters. However, this type of problem occurs only in a very few, very specific scenarios. Since the problem is so context-related, we chose not to lower the device's output power or limit its parameters. Instead, we recommend that you simply lower signal levels (Patch Volume, etc.) to prevent undesirable distortion.

To help you keep an eye on signal levels, you can activate LED mode to visually monitor the levels and amount of distortion of the three audio outputs and two aux buses.

## ■ ABOUT THE DELAY/REVERB

### DELAY/REVERB EFFECT SEND

The Effect Send parameter works like a classic aux send knob on a mixer (post-fader), i.e. it adjusts the level of the global DELAY/REVERB effect signal without influencing the dry signal. However, the dry signal is faded out in the final third of the control range so that you can also

patch just the pure effect signal of a MULTI Part through as you would if you were using a conventional dry/wet effect knob.



## DELAY/REVERB OUTPUT SELECT

The DELAY/REVERB Output Select function lets you send the DELAY/REVERB section's output signal to any mono or stereo outputs. If you patch the DELAY/REVERB signal to a virtual aux bus, it can be processed further by means of a MULTI Part that taps into this aux bus (INPUT Select), and even routed back into the DELAY or REVERB via the same PART's effect send loop, which generates feedback. With this feedback circuit, you can filter and trigger the DELAY/REVERB signal, modulate its volume and even lay chorus over it. When you're working with feedback, be sure to keep a watchful eye on the signal level. The DELAY/REVERB section's level can easily rise to an intolerable volume (e.g. when the level is cranked up by a filter resonance) when the amount of feedback that you have dialed in is too great.

## ■ THE VIRUS AS AN EFFECT DEVICE

You're free to install the VIRUS into your studio environment and use it as an effect device or signal processor. For example, simply connect

its external inputs to any available aux send bus or effect send on your mixer or to the individual outputs of a sampler or other sound generator. This setup lets you mix sundry signals outside the VIRUS and patch the mixed signals into the VIRUS for further processing.

## .. AND VICE VERSA

SECOND OUTPUT Balance lets you create a separate mix in the VIRUS itself. This signal may then be patched out via the selected output (SECOND OUTPUT Select) to a mixer or directly to a connected effect device, where it can be processed further.

Alternatively, this mix can also be routed to another PART of the VIRUS, where, for example, it can be filtered or distorted. For this purpose, be sure to select the same aux bus for SECOND OUTPUT Select and for the INPUT Select of the given PART.

## ■ ENVELOPE FOLLOWER

This function of the VIRUS is a special delicacy. It really upgrades the process of filtering (or any other processing) of an external audio signal. What we have here is a so called Envelope Follower that can evaluate the volume envelope of an external audio signal with a selectable speed or inertia and then creates an appropriate modulation signal. This signal can be used to control any VIRUS parameter via the Modulation Matrix. In UNISON Mode the Envelope Follower works in true stereo, you can find the parameters in the effects menu under INPUT. One example for its application: A drumloop serves as the external signal; the Envelope Follower con-



trols the filters cutoff frequency and creates a typical "Autowah" effect, whereby the filter is opened according to the drumloop's volume (respectively its beats). In addition to this, or as an alternative, you can control other parameters. Of course you can also use the external signal as the modulation source without processing it in the VIRUS at all.

When the Envelope Follower is activated it replaces the filter envelope, so that when Env Amount is turned up, it directly affects the filter frequencies. Any other parameter can be modulated with the Envelope Follower via the Modulation Matrix (ASSIGN). Select FiltEnv as the modulation source

Three filter envelope knobs are used to control the envelope follower when it is active:

#### ENVELOPE FOLLOWER ATTACK


(Knob: FILTER ATTACK ) controls the attack rate of the envelope follower. With this parameter, you can determine how fast the envelope follower will respond to the rise in signal level. Higher values slow the envelope follower down and delay its response.

#### ENVELOPE FOLLOWER RELEASE

(Knob: FILTER DECAY) controls the decay time of the envelope follower. With this parameter, you can determine how swiftly the envelope follower will respond to a decrease in signal level. Higher values let the Follower linger.

#### ENVELOPE FOLLOWER GAIN

(Knob: FILTER SUSTAIN) controls the input level of the envelope follower directly. The nominal value is the center position (64).

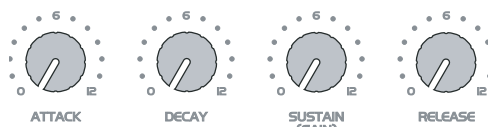


## OSCILLATORS

### PULSE WIDTH MODULATION

Pulse width modulation is a very effective method for producing beat oscillations without having to resort to several detuned oscillators.

Dial OSC BALANCE to the far left so that only OSC1 is audible, then select the waveform Pulse for this oscillator (OSC1 Shape to the right). Slowly turn the Pulse Width (PW) knob back and forth. As you change its pulse width, you'll hear movement in the sound itself. When its pulse width remains fixed, the sound will remain static. This to-and-fro pulse width modulation can be automated by means of an LFO. Select PWM for LFO1 Amount and set a relatively high modulation amount. You can vary the intensity of the modulation via LFO Rate.

Now when you play different sounds, you'll find that the intensity of the modulation is considerably greater with low-frequency sounds than it is with higher-frequency sounds. This is due to the fact that the LFO frequency does not follow the pitch. You can compensate for this effect by activating and adjusting the function LFO1 KEYFOLLOW. When you set LFO1 KEYFOLLOW to a value of 127, the LFO rate will follow whatever pitch you play precisely (in octaves).

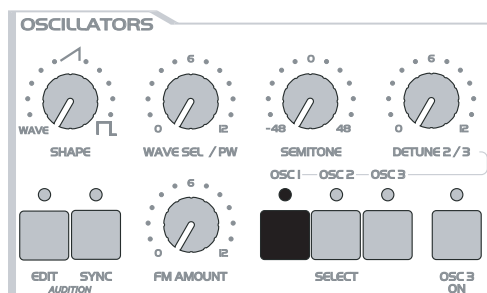

To come up with a fatter sound, you should also dial in the second oscillator (set OSC BALANCE to the center position) and use DETUNE to do just that to its pitch (relative to the first oscillator).

Next to LFO1, LFO3 is also able to generate pulse width modulation. However, unlike LFO1, LFO3's modulation algorithm was tweaked specifically to deliver what we consider hip pulse width modulations. Note that LFO3 PWM often delivers smoother results, particular a softer, tighter sound for pads. Another advantage of LFO3 is that it frees up LFO1 so that you can use it for other sonic chores. By the way, KEY-FOLLOW should also be activated for LFO3.

### OSCILLATOR SYNC/FM

On the VIRUS, Oscillator 1 is always the component that determines the frequency for the two functions oscillator synchronization (SYNC) and frequency modulation (FM). This means that you can use both of these options at the same time. With frequency modulation, you can create extremely complex spectra, whereby in-harmonic frequency components are filtered out (so to speak) in the course of synchronization. An infinite number of new harmonic spectra can be thus generated with the parameters FM AMOUNT and OSC2 SEMITONE. Moreover,

these spectra can be modulated continuously via envelopes and LFOs. FM and SYNC will of course also work with the 64 digital waveforms.

### OSCILLATOR 3

The VIRUS offers a third master oscillator per voice that you can activate whenever you need it. It lets you come up with even more complex sounds by adding more oscillations and spectra to the signal. When Oscillator 3 is switched on, (i.e. OSCILLATOR 3 mode is not set to the OFF position), the polyphony of the VIRUS decreases by up to six voices, depending on how many voices use the third oscillator in MULTI mode.

The second position of OSCILLATOR 3 mode is called SLAVE. Here Oscillator 3 is active, but – just like when it is set to the OFF position – no further parameters are available and visible. In this operating mode, Oscillator 3 is the "twin" of Oscillator 2. It adds further oscillations, thus making the sound fatter and more animated. Oscillator 2 and 3 are handled collectively using Oscillator 2's control features just as if the two were a single oscillator. All settings that you dial in for Oscillator 2 apply to Oscillator 3, with one exception – DETUNE. This parameter runs counter to that of Oscillator 2.

You can select the waveshapes individually for Oscillator 3 via the following OSCILLATOR 3 mode options: sawtooth, square (pulse width modulation), sine, triangle and all further spectral waveshapes. You have three further parameters available once you set Oscillator 3 to an individual waveshape. These are explained further below. All other parameters as well as the settings for the oscillator modulations (LFO pulse width modulation and so forth) are dictated by Oscillator 2. This doesn't limit the functionality of the third oscillator by much (if at all), but it certainly facilitates intuitive handling. The FM, Sync and Ring Modulator functions are not available for the third oscillator.

Like all other oscillators, the level of Oscillator 3 is controlled via OSC VOL..

## FILTERS

---

### 24-DB FILTER VARIATIONS

You have two options for using the 24-dB filters of the VIRUS.

- You can cascade the two 12-dB filters in SER 4 mode.
- You can use Filter-1 as a 24-dB filter in SER 6 mode, whereby Filter-2 is faded out via FILT BALANCE (to the left). If you want to create a sound with resonance, you should try out both options. When you do, you'll find that the sound of the resonance is different despite the fact that filters have the same slope. The cascading option (SER 4) gives you a higher Q factor with a lower resonance peak. For direct A/B comparison, you can store both versions in consecutive SINGLE memory slots and switch back and forth between them at will.

### FILTER BALANCE

The filter section of the VIRUS puts slopes of 12, 24 and 36 dB/oct. at your disposal. In addition, the FILT BALANCE knob lets you morph smoothly from slope to another, which effectively makes it infinitely variable. Set the filter routing option to SER 6 and both filters to low-pass (LP). This gives you a serial setup comprised of a 24-dB and a 12-dB filter. When you set the FILT BALANCE knob to the center position, you end up with a filter that has a slope of

36 dB/oct. As you turn the knob to the left, you're fading Filter-2 out and consequently steadily reducing the slope until you arrive at 24 dB/oct. You can morph from 24 decibels to 12 decibels by using the filter routing option SER 4. In this configuration, both filters have a slope of 12 dB/oct., so it doesn't matter in which direction you dial the FILT BALANCE knob.

### FILTER ROUTING: SPLIT

In Filter SPLIT mode, each of the two oscillators sends its signal into one of the two filters. Each filtered signal, in turn, is sent into a separate VCA. The two VCAs can be spread in the panorama via the UNISON Pan Spread parameter. The difference to UNISON mode is that you only have one oscillator and one filter available for each side, although each with the full complement of voices.

## SATURATION FOR ADDED GRIT AND DIRT

---

### SATURATION AND OSC VOL

In serial filter modes, the SATURATION unit is located between the filters. This configuration gives you the option of first filtering the oscillator signal in the conventional manner, then distorting it, and finally sending the distorted signal to a second filter, where it can be processed again as you see fit.

Next to serving as a volume control for the OSCILLATOR section, in the right half of its control range, the OSC VOL knob lets you control the gain level of the distortion module (SATURA-



In contrast to ENV mode (which is available independently of KEY TRIG PHASE), an LFO with KEY TRIG PHASE will continue to oscillate once it has been triggered. In other words, it behaves like a “real” LFO rather than an envelope.

This triggering option will also work when the LFO is synced up to the master clock. This means that synced LFOs can be triggered via note-on messages. The LFO rate, however, is still determined via the master clock and/or MIDI clock.

```
1 LFO 1
TrigPhase Off
```

## EXTERNAL LFO TRIGGER

You can also trigger an LFO at any time by means of a controller, in other words, restart its waveform cycle via remote control. LFO1 mode (Ctr #70), LFO2 mode (Ctr #82) and LFO3 mode provision controllers that you can use for this purpose (Parameter B 9, see the parameter documentation in the “Appendix” on page 161).

## FILT GAIN

LFO1 lets you modulate the volume of a voice. You’ll find this function under LFO1 Amount FILT GAIN in the LFO 1 menu. We deliberately positioned the point of modulation prior to the filter section, so that the degree of distortion can be modulated at the same time when you have activated the SATURATION unit. Beyond that, you can use fast LFO cycles to elicit brief impulses from the oscillator signal (transients) in order to excite resonance in the filters. In this

case, the filters will fade out freely since their output signals are not affected by the FILT GAIN volume modulation.

```
1 LFO 1
FiltGain +24
```

## VOLUME CONTROL

Next to the Oscillator Volume knob, the VIRUS features four other volume stages for every SINGLE or PART:

Patch VolumeVolume level of the sound program. Use Patch Volume to balance out the fundamental differences in levels between the different sound programs. The Patch Volume is stored along with the sound program. The unit value is 100.

Part VolumeVolume level of the MULTI-PART. Use Part Volume to balance out the different levels within a MULTI program. Part Volume is stored along with the MULTI program. The unit value is zero since Part Volume is a bipolar, relative parameter.

## CHANNEL VOLUME

and ExpressionThese two performance controllers (Ctr. #7 and #11) can be used in order to make temporary changes in signal level via a sequencer or volume pedal. Like all performance controllers, these are not stored with the sound program. The unit value is 127. A dou-

ble-click on the two Transpose buttons (Panic function) resets Channel Volume and Expression to this unit value.

## ■ ASSIGN AND THE SOFT KNOBS

---

The Virus modulation matrix (the ASSIGNS in the LFOS/MOD section) allows you to modulate up to nine selectable destination parameters from six modulation sources. Possible modulation sources are not restricted to MIDI controllers such as the modulation wheel or Aftertouch, but also include internal sources from within the voice, such as the envelope generators and LFOs. The LFOs have their own dedicated ASSIGNS (selectable with the corresponding AMOUNT buttons) for a further modulation destination each..

The obvious thing to do would be to use one of the SOFT KNOBS knob as a modulation source for one or several ASSIGN units. However, we deliberately chose not to create a direct, fixed link between the SOFT KNOBS and the ASSIGN units since, by definition, neither the output of the SOFT KNOBS nor the inputs of the ASSIGN units have a fixed controller number.

Instead, you are free to select one of the possible controllers as an ASSIGN source (e.g. the modulation wheel or Controller #12). All you have to do is enter this controller as the parameter for the SOFT KNOBS. This configuration is identical to that of a conventional parameter that has a dedicated controller number and knob. The knob movements are sent to the selected MIDI Out via the selected controller and on to the sequencer where they can be record-

ed and sent back to the VIRUS. Reasonably enough, you should set the controller number for the SOFT KNOB under SOFT KNOB-1/2 Single because this setting (like the ASSIGN settings) is stored with the SINGLE program and doesn't apply to all SINGLES (as is the case with the SOFT KNOB Global setting).

## ■ ARPEGGIATOR

---

In AsPlayed mode, notes are played in the same sequence in which the Arpeggiator receives them. As a rule, the Arpeggiator is able to store up to 16 notes. At first glance, it wouldn't seem possible to play a pattern in which several notes have the same pitch. To do this, you would have to release a key before you can play it again, and when you release a key, the corresponding note is deleted from the Arpeggiator pattern. You can circumvent this problem by pressing a sustain or hold pedal that is connected to your keyboard while you enter notes to the Arpeggiator. These will be held for as long as you hold the sustain pedal down.

## ■ HOW TO MODULATE THE VOCODER PARAMETERS

---

Every Vocoder parameter can be modulated using the Modulation Matrix.

For example: To modulate the CARRIER CENTER FREQUENCY you need to choose FILTER-1 CUTOFF as the Modulation Matrix DESTINATION.

Carrier Center Frequency	Filter 1 Cutoff
Modulator Frequency Offset	Filter 2 Cutoff
Carrier Q-Factor	Filter 1 Resonance
Modulator Q-Factor	Filter 2 Resonance
Carrier Frequency Spread	Filter 1 Keyfollow
Modulator Frequency Spread	Filter 2 Keyfollow
Vocoder Attack	Filter Env Attack
Filter Env Release	Vocoder Release
Filter Env SustainTime	Vocoder Spectral Balance
Filter Env Release	Vocoder Band Quantity
Filter Balance	Vocoder Source Balance

## MIDI

### MIDI DUMP RX

The VIRUS lets you audition sound banks that are available as MIDI dumps on a sequencer individually rather than loading them directly to the banks of the VIRUS, where they would delete that the sounds that you have stored there.

Set the MIDI DUMP RX parameter to Force To Edit Buffer. With this option, sounds that would otherwise be loaded directly to a sound bank via MIDI are instead loaded to the Edit buffer. The name of the given sound is shown in the display and can be played straightaway. When additional sounds are sent via MIDI, the sounds that were sent previously are overwritten in the Edit buffer. If you set the tempo of the sequencer that is sending sounds to a very slow speed, you can load individual sounds and store them to the desired memory slot by pressing the STORE button.

The two “Force To Bank A” and “Force To Bank B” options send an incoming sound dump to the respective bank irrespective of which bank the sounds were originally stored in.

The “Verify” option compares a MIDI dump to the memory content of the VIRUS. It checks if a dump was recorded properly on the sequencer and if it can be played back correctly. Load data from the sequencer into the VIRUS while “Verify” is enabled. The VIRUS’ display will indicate if the device is actually receiving data and it will call your attention to any transmission errors that may occur. Data stored in the VIRUS remains unaffected by this operation.

```
1 MIDI DUMP TX
  Arrangement
```

### EXPRESSION CONTROLLER

The VIRUS is able to handle Expression Controller (Controller #11) commands. Expression is a volume controller similar to Channel Volume that can be used independently as a volume control or to create gate effects (Controller #7). It is also reset by Controller Reset (double click on PANIC). The default setting is 127.

## BANK/PROGRAM CHANGE VIA SYSEX

A bank or program change can be initiated via a SysEx command. These commands are independent of MIDI channels as well as all other SysEx parameter changes. SysEx program changes are always carried out irrespective of whether or not the normal program change is disabled.

<b>PART BANK SELECT</b> (the change is executed only when a program change command is received)	F0,00,20,33,01,10,72,pp,1F,vv,F7
---	----------------------------------

<b>PART BANK CHANGE</b> (the change is executed immediately)	F0,00,20,33,01,10,72,pp,20,vv,F7
--	----------------------------------

<b>PART PROGRAM CHANGE</b>	F0,00,20,33,01,10,72,pp,21,vv,F7
----------------------------	----------------------------------

<b>MULTI PROGRAM CHANGE</b>	F0,00,20,33,01,10,72,00,69,vv,F7
-----------------------------	----------------------------------

pp: Part Number from 00 to 0F (0 - 15), vv: Program Number from 00 to 7F (0-127)

## PRIORITY

This parameter lets you control how the VIRUS "steals notes when its polyphonic performance is maxed out. In the first position, "LOW", the voices of all PARTs have the same priority when one voice is switched off to accommodate a new voice. When you set the Priority of a PART to "High", the VIRUS will not "steal" any notes from the voices of this PART. Use this parameter sparingly. In other words, if you set all

Parts to High, you're defeating the purpose of this parameter. In this case, it wouldn't have any effect since the priority of all voices is the same.

```

1 A0 OvertureCK
Priority Low
  
```

## HOW TO INSTALL UPDATES

### THE 1024 SOUNDS UPDATE

The Virus operating system consists of two parts. They can be loaded (or "burned") into the Virus separately.

The first part includes the operating system itself, while the second part carries the 256 ROM sounds (Bank C and D) as well as the demosong.

That second part can be replaced by a sound expansion, so that finally 768 ROM sounds are available. The demosong is overwritten by this procedure. But you wouldn't need it anymore, we guess. The file with the additional sounds can be found on the CD included, with the file name "SECONDxxx.MID".

You can load this file similar to a operating system update (see below).

There is no risk to damage the Virus by wrong or corrupted data. The Virus will simply not accept those data.



## INSTALLING A NEW OPERATING SYSTEM

The Virus C, kc and indigo use an identical operating system. The differences in hardware is detected automatically.

- Load the MIDI file into your sequencer and make sure you have chosen the right MIDI channel and port settings. The MIDI file contains the new software for the VIRUS, packed in MIDI Sysex data.
- Ensure that the MIDI clock option is disabled (mixing SysEx data and the MIDI clock can lead to malfunctions of your MIDI interface).
- Start your sequencer to playback the MIDI-file.


At this stage, you should be able to watch the VIRUS counting up the received blocks. If the display shows "RECEPTION FAILED," then a transmission error has occurred. This can be caused by a buffer overrun of the MIDI interface. In this case, you will need to upload the entire file again. Lower the tempo of your sequencer before uploading (e.g. 60 bpm). To proceed, press any key followed by STORE which will again enable the receive mode. In case that the load procedure simply stops at a certain position, the sequencer you use is not able to playback the file correctly. In this case, you need to use another sequencer.

After a successful upload, press STORE to burn the new operating system into the flash-ROM. Never switch off the VIRUS while burning the data! Please ensure stable power conditions during this procedure which should take approximately 30 seconds. Now, when the VIRUS has reseted itself, you can use the new operating system!

There's no danger of a flawed MIDI transmission burning faulty software into the VIRUS' memory. When the device receives MIDI data, this information is first buffered in the delay memory of the VIRUS, where it is checked for errors. If the device finds an error, the loading routine is aborted and it will generate an error message. Then you can try repeating the process. The old operating system will remain unharmed. Only when you actually initiate a burn operation will the old operating system be deleted and overwritten with new data.

## LOADING THE OS FROM ONE VIRUS TO ANOTHER

- Connect the sending VIRUS' (VIRUS 1) MIDI Out port to the receiving VIRUS' (VIRUS 2) MIDI In port.
- Switch on VIRUS 1 while you're holding the [Store] button pressed. The display will read SYSTEM UPDATE.



```

SYSTEM UPDATE
[STORE] Receive

```

- Then press the [Value +], [Store], [Store] buttons in this sequence.
- Ensure that VIRUS 2 is connected and then press VIRUS 1's [Value +] button to launch the operation.
- The operating system will be loaded to VIRUS 2. You'll see that this is the case by the fact the both devices will indicate high numbers in their displays.

- Once the loading process is completed, please press [Store] on VIRUS 2; the software will now be burned to the Flash Rom.

## SOFTWARE UPDATES

Access is known for their policy of free software updates. Simply download the latest VIRUS operating system from our web site and enjoy new VIRUS features. Maybe you are in need of some fresh sounds? In either way here's the place you'll find what you need:

<http://www.access-music.de>





# Appendix

## ■ SYSTEM EXCLUSIVE DATA

---

### VIRUS MIDI SYSTEM EXCLUSIVE IMPLEMENTATION

The Parameters of the VIRUS are organized in three so-called pages A, B and C. Each page contains 128 parameters, addressed by numbers from 0 to 127. Each parameter is represented by one byte with a maximum value of 127. All parameters are individually accessible by SysEx-Parameterchange.

The pages A and B represent a Single-Program, thus a Single-Program contains 256 Bytes.

Page A (LowPage) contains Single parameters that are usefull for MIDI automation. The parameters of this page are additionally controllable by MIDI Control Change. The sending and reception of MIDI Control Change can be enabled or disabled by MIDI CONTROL LowPage (SYSTEM menu). When disabled (**LowPage=SysEx**), the VIRUS only sends and receives SysEx Parameter Change on Page A. When enabled (**LowPage=Contr**), the VIRUS sends MIDI Control Change on parameter movement,

and receives both MIDI Control Change and SysEx-Parameterchange on Page A.

■ *The default setting is LowPage=Contr.*

The remaining Single parameters in Page B (HiPage) are additionally controllable by MIDI Polyphonic Pressure (!). The send and reception of MIDI Poly Pressure can be enabled or disabled by MIDI CONTROL HiPage (SYSTEM menu).

When disabled (HiPage=SysEx), the VIRUS only sends and receives SysEx Parameter Change on Page B. When enabled (HiPage=PolyPrs), the VIRUS sends MIDI Poly Pressure on parameter movements, and receives both MIDI Poly Pressure and SysEx Parameter Change on Page B. This feature should not be used in connection with a keyboard that sends Polyphonic Pressure.

■ *The default setting is HiPage=SysEx.*

Page C contains Multi parameters and Global parameters. These parameters are sent and received only by SysEx Parameter Change.

In the following, all bytes are shown in hexadecimal representation.



## CONTROL CHANGE MESSAGE (ONLY PAGE A)

Bc	Status byte, c=MIDI channel
nn	Parameter Number 0..127 (see parameter list Page A)
vv	Parameter Value 0..127 see parameter list Page A)

■ *The Control Change messages are defined as Performance Controller (e.g. Modulation Wheel or Hold Pedal) or Sound Parameters (e.g. Cutoff or Patch Volume). The Performance Controllers are not stored with a Single-Sound. If more than one Multi Part is set to the same MIDI channel, all Parts on this MIDI channel receive the same Performance Controllers. The Sound Parameters are stored with a Single Sound. If more than one Multi Part is set to the same MIDI channel, the Sound Parameter is received only by the Multi Part with the lowest part number.*

Example: B0,21,40 Set oscillator balance (21 hex = 33 dec) on MIDI channel 1 to the middle position (40 hex =64 dec).

## POLYPHONIC PRESSURE MESSAGE (ONLY PAGE B)

Ac	Status byte, c=MIDI channel
nn	Parameter Number 0..127 (see parameter list Page B)
vv	:Parameter Value 0..127 see parameter list Page B)

Example: A2,07,25 Control LFO3 Rate on MIDI channel 3 (!).

## SYSTEM-EXCLUSIVE-MESSAGE

F0	Start of System Exclusive
00	Manufacturer ID 1 Access Music Electronics
20	Manufacturer ID 2 Access Music Electronics
33	Manufacturer ID 3 Access Music Electronics
01	Product ID (VIRUS)
dd	Device ID
00..0F	individual; 10: omni.
...	[message]
F7	End of System Exclusive

## SYSEX PARAMETERCHANGE

[message]=	
7x	Parameterchange 70:page A; 71:page B; 72:page C:
pp	Part number 00..0F Multi part 1..16; 40: Single
nn	Parameter Number 0..127 (see parameter list)
vv	Parameter Value 0..127 (see parameter list)

{F0,00,20,33,01,dd,7x,pp,nn,vv,F7}

■ *The SysEx Parameterchange affects one of the sixteen single edit buffer in Multi Mode addressed by the part number (00..0F) or the Single buffer in Single Mode (part number 40). If a global parameter or a Multi parameter is accessed, which is not part-sensitive (e.g. Input Boost or Multi Delay Time), the part number is ignored.*

Example: F0,00,20,33,01,10,70,05,28,5F,F7  
Set Cutoff on Part 6 to decimal value 95. (10: device ID omni; 70: page A, 05: part 6; 28: parameter Cutoff, 5F: decimal value 95)

## SINGLE DUMP

```
[message]=
10      Single Dump
bb      Bank Number
00      Single Edit buffer
        01..04: Single Bank A..D
ss      Program Number
        0..127 [256 single bytes]
cs      Checksum
        optional
```

{F0,00,20,33,01,dd,10,bb,ss,[256 single bytes],cs,F7}

■ *When bank number is set to 00, the program number is the part number that addresses one of the sixteen Single Edit buffer in Multi Mode (00..0F) or the Single buffer in Single Mode (40).*

[256 single bytes] contains the Single parameter pages A and B, each 128 bytes long.

Checksum is the sum (DeviceID + 10 + Bank-Number + ProgramNumber + [256 single bytes]) AND 7F. A dump with a wrong checksum will be received, but an error message will appear on the display.

## MULTI DUMP

```
[message]=
11      Multi Dump
bb      Bank Number
        00      Multi Edit buffer;
        01      multi bank
```

```
mm      Program Number
        0..127 [256 multi bytes]
cs      Checksum
        optional
```

{F0,00,20,33,01,dd,11,bb,mm,[256 multi bytes],cs,F7}

■ *When bank number 00, the dump destination is the Multi Edit buffer. In this case the program number is ignored.*

[256 multi bytes] contains the Multi parameters in a special succession. See Multi Dump Table.

Checksum is the sum (DeviceID + 11 + Bank-Number + ProgramNumber + [256 multi bytes]) AND 7F. A dump with a wrong checksum will be received, but an error message will appear on the display.

## SINGLE REQUEST

```
[message]=
30      Single Request
bb      Bank Number
        00: Single Edit buffer
        01..04: Single Bank A..D
ss      Program Number
        0..127
```

{F0,00,20,33,01,dd,30,bb,ss,F7}

■ *When bank number is set to 00, the program number is the part number that addresses one of the sixteen Single Edit buffer in Multi Mode (00..0F) or the Single buffer in Single Mode (40).*

## MULTI REQUEST

[message]=  
 31 Multi Request  
 bb Bank Number  
     00:Multi Edit buffer;  
     01:Multi Bank  
 mm Program Number  
     0..127

{F0,00,20,33,01,dd,31,bb,mm,F7}

■ *When bank number 00, the dump destination is the Multi Edit buffer. In this case the program number is ignored.*

## SINGLE BANK REQUEST

[message]=  
 32 Single Bank Request  
 bb Bank Number  
     01..04: Single Bank A..D

{F0,00,20,33,01,dd,32,bb,F7}

## MULTI BANK REQUEST

[message]=  
 33 Multi Bank Request  
 bb Bank Number  
     01:Multi Bank

{F0,00,20,33,01,dd,33,bb,F7}

## ARRANGEMENT REQUEST

[message]=  
 34 Arrangement Request

{F0,00,20,33,01,dd,34,F7}

## GLOBAL REQUEST

[message]=  
 35 Global Request

{F0,00,20,33,01,dd,35,F7}

## TOTAL REQUEST

[message]=  
 36 Total Request

{F0,00,20,33,01,dd,36,F7}

## CONTROLLER DUMP REQUEST

[message]=  
 37 Controller Dump Request  
 00 Bank Number(always zero)  
 ss Part Number

{F0,00,20,33,01,dd,37,00,ss,F7}

■ *The Part number addresses one of the sixteen Single Edit buffer in Multi Mode (00..0F) or the Single buffer in Single Mode (40).*

## ■ PARAMETER DESCRIPTIONS

No.	Class	Name	Range	Value	Text
<b>PAGE A</b>					
A 0	p	Bank Select	0..3		Bank A..D
A 1	p	Modulation Wheel			
A 2	p	Breath Controller			
A 3	p	Contr 3			
A 4	p	Foot Controller			
A 5	a	Portamento Time	0..127		
A 6	p	Data Slider			
A 7	p	Channel Volume	0..127		
A 8	p	Balance			
A 9	p	Contr 9			
A 10	a	Panorama	0..127	-64..0..+63:	Left..Center..Right
A 11	p	Expression	0..127		
A 12	p	Contr 12			
A 13	p	Contr 13			
A 14	p	Contr 14			
A 15	p	Contr 15			
A 16	p	Contr 16			
A 17	a	Osc1 Shape	0..127	-64..0..+63:	Wave..Saw..Pulse
A 18	a	Osc1 Pulsewidth	0..127		
A 19	a	Osc1 Wave Select	0..64		Sine, Triangle, Wave 3..64
A 20	a	Osc1 Semitone	0..127	-64..+63	
A 21	a	Osc1 Keyfollow	0..127	-64..+63,	Default: 32
A 22	a	Osc2 Shape	0..127	-64..0..+63:	Wave..Saw..Pulse
A 23	a	Osc2 Pulsewidth	0..127		
A 24	a	Osc2 Wave Select	0..64		Sine, Triangle, Wave 3..64
A 25	a	Osc2 Semitone	0..127	-64..+63	
A 26	a	Osc2 Detune	0..127		



No.	Class	Name	Range	Value	Text
A 27	a	Osc2 FM Amount	0..127		
A 28	a	Osc2 Sync	0..1		0:Off 1:On
A 29	a	Osc2 Filt Env Amt	0..127	-64..+63	
A 30	a	FM Filt Env Amt	0..127	-64..+63	
A 31	a	Osc2 Keyfollow	0..127	-64..+63:	Default: 32
A 32	p	Bank Select	0..3		Bank A..D
A 33	a	Osc Balance	0..127		-64..+63:
A 34	a	Suboscillator Volume	0..127		
A 35	a	Suboscillator Shape	0..1		0:Square 1:Triangle
A 36	a	Osc Mainvolume	0..127		
A 37	a	Noise Volume	0..127		
A 38	a	Ringmodulator Volume	0..127		
A 39	a,Vb	Noise Color	0..127	-64..0..+63	
A 40	a	Cutoff	0..127		
A 41	a	Cutoff2	0..127	-64..+63	
A 42	a	Filter1 Resonance	0..127		
A 43	a	Filter2 Resonance	0..127		
A 44	a	Filter1 Env Amt	0..127		
A 45	a	Filter2 Env Amt	0..127		
A 46	a	Filter1 Keyfollow	0..127	-64..+63	
A 47	a	Filter2 Keyfollow	0..127	-64..+63	
A 48	a	Filter Balance	0..127	-64..+63	
A 49	a	Saturation Curve	0..6		0:Off 1:Light 2:Soft 3:Middle 4:Hard 5:Digital ..
A 51	a	Filter1 Mode	0..3		0:LP 1:HP 2:BP 3:BS
A 52	a	Filter2 Mode	0..3		0:LP 1:HP 2:BP 3:BS
A 53	a	Filter Routing	0..3		0:Ser4 1:Ser6 2:Par4 3:Split
A 54	a	Filter Env Attack	0..127		
A 55	a	Filter Env Decay	0..127		
A 56	a	Filter Env Sustain	0..127		
A 57	a	Filter Env Sustain Time	0..127	-64..+63:	Fall..Infinite..Rise
A 58	a	Filter Env Release	0..127		

No.	Class	Name	Range	Value	Text
A 59	a	Amp Env Attack	0..127		
A 60	a	Amp Env Decay	0..127		
A 61	a	Amp Env Sustain	0..127		
A 62	a	Amp Env Sustain Time	0..127	-64..+63:	Fall..Infinite..Rise
A 63	a	Amp Env Release	0..127		
A 64	p	Hold Pedal			
A 65	p	Portamento Pedal			
A 66	p	Sostenuto Pedal			
A 67	a	Lfo1 Rate	0..127		
A 68	a	Lfo1 Shape	0..5		0:Sine 1:Tri 2:Saw 3:Square 4:S&H 5:S&G ..
A 69	a	Lfo1 Env Mode	0..1		0:Off 1:On
A 70	a	Lfo1 Mode	0..1		0:Poly 1:Mono
A 71	a	Lfo1 Symmetry	0..127	-64..+63	
A 72	a	Lfo1 Keyfollow	0..127		
A 73	a	Lfo1 Keytrigger	0..127		0:Off, 1..127:Keytrigger Phase
A 74	a	Osc1 Lfo1 Amount	0..127	-64..+63	
A 75	a	Osc2 Lfo1 Amount	0..127	-64..+63	
A 76	a	PW Lfo1 Amount	0..127	-64..+63	
A 77	a	Reso Lfo1 Amount	0..127	-64..+63	
A 78	a	FiltGain Lfo1 Amount	0..127	-64..+63	
A 79	a	Lfo2 Rate	0..127		
A 80	a	Lfo2 Shape	0..5		0:Sine 1:Tri 2:Saw 3:Square 4:S&H 5:S&G ..
A 81	a	Lfo2 Env Mode	0..1		0:Off 1:On
A 82	a	Lfo2 Mode	0..1		0:Poly 1:Mono
A 83	a	Lfo2 Symmetry	0..127	-64..+63	
A 84	a	Lfo2 Keyfollow	0..127		
A 85	a	Lfo2 Keytrigger	0..127		0:Off, 1..127:Keytrigger Phase
A 86	a	OscShape Amount	Lfo2 0..127	-64..+63	
A 87	a	FmAmount Amount	Lfo2 0..127	-64..+63	

No.	Class	Name	Range	Value	Text
A 88	a	Cutoff1 Lfo2 Amount	0..127	-64..+63	
A 89	a	Cutoff2 Lfo2 Amount	0..127	-64..+63	
A 90	a	Panorama Lfo2 Amount	0..127	-64..+63	
A 91	a	Patch Volume	0..127		
A 93	a	Transpose	0..127	-64..+63	
A 94	a	Key Mode	0..4		0:Poly 1..4: Mono1-4
A 97	a	Unison Mode	0..15		0:Off 1:Twin 2..15
A 98	a	Unison Detune	0..127		
A 99	a	Unison Panorama Spread	0..127		
A100	a	Unison Lfo Phase	0..127	-64..+63	
A101	a	Input Mode	0..2		0:Off 1:Dynamic 2:Static 3:ToEffects
A102	a	Input Select	0..8		0:In1L 1:In1L+R 2:In1R ..
A105	a	Chorus Mix	0..127		
A106	a	Chorus Rate	0..127		
A107	a	Chorus Depth	0..127		
A108	a	Chorus Delay	0..127		
A109	a	Chorus Feedback	0..127	-64..+63	
A110	a	Chorus Lfo Shape	0..5		0:Sine 1:Tri 2:Saw 3:Square 4:S&H 5:S&G ..
A112	a	Delay/Reverb Mode	0..1		0:Off 1:Delay 2:Reverb 3:Rev+Feedb1
A113	a,ms	Effect Send	0..127		
A114	a,ms,n p	Delay Time	0..127		
A115	a,ms,n p	Delay Feedback	0..127		
A116	a,ms,n p	Delay Rate	0..127		
A117	a,ms,n p	Reverb Decay Time	0..127		
		Delay Depth	0..127		
		Reverb Room Size	0..3		0:Ambience 1:SmallRoom 2:LargeRoom 3:Hall

No.	Class	Name	Range	Value	Text
A118	a,ms,n p	Delay Lfo Shape	0..5		0:Sine 1:Tri 2:Saw 3:Square 4:S&H 5:S&G ..
A119	a,ms,n p	Reverb Damping Delay Color	0..127 0..127	-64..+63	
A122	g	Keyb Local	0..1		0:Off 1:On
A123	p	All Notes Off			



No.	Class	Name	Range	Value	Text
<b>PAGE B</b>					
B 1	b	Arp Mode	0..6		0:Off 1:Up 2:Down 3:Up&Down 4:As-Played 5:Random 6:Chord
B 2	b	Arp Pattern Select	0..31		
B 3	b	Arp Octave Range	0..3		
B 4	b	Arp Hold Enable	0..1		0:Off 1:On
B 5	b	Arp Note Length	0..127	-64..+63c	
B 6	b	Arp Swing	0..127	50%..75%	
B 7	b	Lfo3 Rate	0..127		
B 8	b	Lfo3 Shape	0..5		0:Sine 1:Tri 2:Saw 3:Square 4:S&H 5:S&G ..
B 9	b	Lfo3 Mode	0..1		0:Poly 1:Mono
B 10	b	Lfo3 Keyfollow	0..127		
B 11	b	Lfo3 Destination	0..5		0:Osc1 1:Osc1+2 2:Osc2 3:PW1 4:PW1+2 5:PW2
B 12	b	Osc Lfo3 Amount	0..127		
B 13	b	Lfo3 Fade-In Time	0..127		
B 16	b	Clock Tempo	0..127	63..190 BPM	
B 17	b	Arp Clock	1..17	1/64..1/1	
B 18	b	Lfo1 Clock	0..19		Off, 1/64..4/1
B 19	b	Lfo2 Clock	0..19		Off, 1/64..4/1
B 20	b,ms,n p	Delay Clock	0..16		Off, 1/64..3/4
B 21	b	Lfo3 Clock	0..19		Off, 1/64..4/1
B 25	b	Control Smooth Mode	0..3		0:Off, 1:On, 2:Auto, 3:Note
B 26	b	Bender Range Up	0..127	-64..+63	
B 27	b	Bender Range Down	0..127	-64..+63	
B 28	b	Bender Scale	0..1		0:Linear 1:Exponential
B 30	b	Filter1 Env Polarity	0..1		0:Negative 1:Positive
B 31	b	Filter2 Env Polarity	0..1		0:Negative 1:Positive
B 32	b	Filter2 Cutoff Link	0..1		0:Off 1:On
B 33	b	Filter Keytrack Base	0..127		C-1..G9

No.	Class	Name	Range	Value	Text
B 34	b,Vb	Osc FM Mode	0..12		0:Pos-Tri 1:Tri 2:Wave 3:Noise 4:In L 5:In L+R ..
B 35	b	Osc Init Phase	0..127		0:Off 1..127
B 36	b	Punch Intensity	0..127		
B 38	b,Vb	Input Follower Mode	0..9		0:Off 1:In L 2:In L+R ...
B 39	b	Vocoder Mode	0..12		0:Off 1:Osc 2:OscHold 3:Noise 4:In L 5:In L+R ..
B 41	b,Vb	Osc3 Mode	0..67		0:Off 1:Osc2Slave 2:Saw 3:Pulse 4:Sine 5 Triangle ..
B 42	b,Vb	Osc3 Volume	0..127		
B 43	b,Vb	Osc3 Semitone	0..127	-64..+63	
B 44	b,Vb	Osc3 Detune	0..127		
B 45	b,Vc	LowEQ Frequency	0..127		
B 46	b,Vc	HighEQ Frequency	0..127		
B 47	b	Osc1 Shape Velocity	0..127	-64..+63	
B 48	b	Osc2 Shape Velocity	0..127	-64..+63	
B 49	b	PulseWidth Velocity	0..127	-64..+63	
B 50	b	Fm Amount Velocity	0..127	-64..+63	
B 51	b,Vc	Soft Knob1 ShortName			See ShortNames Table
B 52	b,Vc	Soft Knob2 ShortName			See ShortNames Table
B 54	b	Filter1 EnvAmt Velocity	0..127	-64..+63	
B 55	b	Filter1 EnvAmt Velocity	0..127	-64..+63	
B 56	b	Resonance1 Velocity	0..127	-64..+63	
B 57	b	Resonance2 Velocity	0..127	-64..+63	
B 58	b	Second Output Balance	0..127		0:Off 1..127: Front..Center..Rear
B 60	b	Amp Velocity	0..127	-64..+63	
B 61	b	Panorama Velocity	0..127	-64..+63	
B 62	b	Soft Knob-1 Single			see Soft Knob List
B 63	b	Soft Knob-2 Single			see Soft Knob List
B 64	b	Assign1 Source			see Assign Sources List
B 65	b	Assign1 Destination			see Assign Destinations List
B 66	b	Assign1 Amount	0..127	-64..+63	

No.	Class	Name	Range	Value	Text
B 67	b	Assign2 Source			see Assign Sources List
B 68	b	Assign2 Destination1			see Assign Destinations List
B 69	b	Assign2 Amount1	0..127	-64..+63	
B 70	b	Assign2 Destination2			see Assign Destinations List
B 71	b	Assign2 Amount2	0..127	-64..+63	
B 72	b	Assign3 Source			see Assign Sources List
B 73	b	Assign3 Destination1			see Assign Destinations List
B 74	b	Assign3 Amount1	0..127	-64..+63	
B 75	b	Assign3 Destination2			see Assign Destinations List
B 76	b	Assign3 Amount2	0..127	-64..+63	
B 77	b	Assign3 Destination3			see Assign Destinations List
B 78	b	Assign3 Amount3	0..127	-64..+63	
B 79	b	LFO1 Assign Dest			see Assign Destinations List
B 80	b	LFO1 Assign Amount	0..127	-64..+63	
B 81	b	LFO2 Assign Dest			see Assign Destinations List
B 82	b	LFO2 Assign Amount	0..127	-64..+63	
B 84	b,Vb	Phaser Mode	0..6		0:Off, 1..6 Phaser Stages
B 85	b,Vb	Phaser Mix	0..127		
B 86	b,Vb	Phaser Rate	0..127		
B 87	b,Vb	Phaser Depth	0..127		
B 88	b,Vb	Phaser Frequency	0..127		
B 89	b,Vb	Phaser Feedback	0..127	-64..+63	
B 90	b,Vb	Phaser Spread	0..127		
B 92	b,Vc	MidEQ Gain	0..127		64= 0dB
B 93	b,Vc	MidEQ Frequency	0..127		
B 94	b,Vc	MidEQ Q-Factor	0.127		
B 95	b,Vc	LowEQ Gain	0..127		
B 95	b,Vc	HighEQ Gain	0..127		
B 97	b,Vb	Bass Intensity	0..127		
B 98	b,Vb	Bass Tune	0..127		
B 99	b,Vb	Input Ringmodulator	0..127		0:Off 1..127: Direct..Ringmodulator..Input

No.	Class	Name	Range	Value	Text
B100	b,Vb	Distortion Curve	0..6		0:Off 1:Light 2:Soft 3:Middle 4:Hard 5:Digital ..
B101	b,Vb	Distortion Intensity	0..127		
B102	b,Vc	Assign 4 Source	0..27		see Assign Sources List
B103	b,Vc	Assign 4 Destination	0..122		see Assign Destinations List
B104	b,Vc	Assign 4 Amount	0..127		
B105	b,Vc	Assign 5 Source	0..27		see Assign Sources List
B106	b,Vc	Assign 5 Destination	0..122		see Assign Destinations List
B107	b,Vc	Assign 5 Amount	0..127		
B108	b,Vc	Assign 6 Source	0..27		see Assign Sources List
B109	b,Vc	Assign 6 Destination	0..122		see Assign Destinations List
B110	b,Vc	Assign 6 Amount	0..127		
B112	b	Single Name Char1	32..127	ASCII	
B113	b	Single Name Char2	32..127	ASCII	
B114	b	Single Name Char3	32..127	ASCII	
B115	b	Single Name Char4	32..127	ASCII	
B116	b	Single Name Char5	32..127	ASCII	
B117	b	Single Name Char6	32..127	ASCII	
B118	b	Single Name Char7	32..127	ASCII	
B119	b	Single Name Char8	32..127	ASCII	
B120	b	Single Name Char9	32..127	ASCII	
B121	b	Single Name Char10	32..127	ASCII	
B122	b	Filter Select	0..2		0:Filt1 1:Filt2 2:Filt1*2
B123	b,Vb				Category1
B124	b,Vb				Category2



No.	Class	Name	Range	Value	Text
<b>Page C</b>					
C 5	m,np	Multi Name Char1	32..127	ASCII	
C 6	m,np	Multi Name Char2	32..127	ASCII	
C 7	m,np	Multi Name Char3	32..127	ASCII	
C 8	m,np	Multi Name Char4	32..127	ASCII	
C 9	m,np	Multi Name Char5	32..127	ASCII	
C 10	m,np	Multi Name Char6	32..127	ASCII	
C 11	m,np	Multi Name Char7	32..127	ASCII	
C 12	m,np	Multi Name Char8	32..127	ASCII	
C 13	m,np	Multi Name Char9	32..127	ASCII	
C 14	m,np	Multi Name Char10	32..127	ASCII	
C 22	m,np	Delay Output Select	0..14		0:Out1L 1:Out1L+R 2:Out1R ..
C 31	m,bpc	Part Bank Select	0..3	Bank A..D	
C 32	m,bpc	Part Bank Change	0..3	Bank A..D	
C 33	m,bpc	Part Program Change	0..127		
C 34	m	Part Midi Channel	0..15	1..16	
C 35	m	Part Low Key	0..127	C-1..G9	
C 36	m	Part High Key	0..127	C-1..G9	
C 37	m	Part Transpose	0..127	-64..+63	
C 38	m	Part Detune	0..127	-64..+63	
C 39	m	Part Volume	0..127	-64..+63	0=Unity Gain
C 40	m	Part Midi Volume Init	0..127	Off, 1..127	
C 41	m	Part Output Select	0..14		0:Out1L 1:Out1L+R 2:Out1R ..
C 45	g	Second Output Select	0..15		0:Off 1:Out1L 2:Out1L+R 3:Out1R ..
C 63	g	Keyb Transpose Buttons	0..1		0:Patch 1:Keyb
C 64	g	Keyb Local	0..1		0:Off 1:On
C 65	g	Keyb Mode	0..1		0:OneChannel 1:MultiChannels
C 66	g	Keyb Transpose	0..127	-64..+63	
C 67	g	Keyb ModWheel Contr			see Keyboard Destination List
C 68	g	Keyb Pedal 1 Contr			see Keyboard Destination List

No.	Class	Name	Range	Value	Text
C 69	g	Keyb Pedal 2 Contr			see Keyboard Destination List
C 70	g	Keyb Pressure Sens	0..127		0:Off 1..127
C 72	m	Part Enable	0..1		0:Off 1:On
C 73	m	Part Midi Volume Enable	0..1		0:Off 1:On
C 74	m	Part Hold Pedal Enable	0..1		0:Off 1:On
C 75	m	Keyb To Midi	0..1		0:Off 1:On
C 77	m	Note Steal Priority	0..1		0:Low 1:High
C 78	m	Part Prog Change Enable	0..1		0:Off 1:On
C 85	g	Glob Prog Change Enable	0..1		0:Off 1:On
C 86	g	MultiProg Change Enable	0..1		0:Off 1:On
C 87	g	Glob Midi Volume Enable	0..1		0:Off 1:On
C 90	g	Input Thru Level	0..127		
C 91	g	Input Boost	0..127		
C 92	g	Master Tune	0..127	-64..+63	
C 93	g	Device ID	0..16	1..16, Omni	
C 94	g	Midi Control Low Page	0..1		0:SysEx 1:Contr
C 95	g	Midi Control High Page	0..1		0:SysEx 1:PolyPrs
C 96	g	Midi Arpeggiator Send	0..1		0:Off 1:On
C 97	g	Knob Display	0..3		0:Off 1:Short 2:Long 3:On
C 98	g	Midi Dump Tx	0..4		0:Single 1:SingleBank A 2:SingleBank B ..
C 99	g	Midi Dump Rx	0..4		0:Disable 1:Enable 2:ForceToBankA ..
C105	g	Multi Program Change	0..127		
C106	g	Midi Clock Rx			0:Disable 1:Auto 2:Send
C110	g	Soft Knob-1 Mode	0..2		0:Single 1:Global 2:Midi
C111	g	Soft Knob-2 Mode	0..2		0:Single 1:Global 2:Midi
C112	g	Soft Knob-1 Global			see Soft Knob List
C113	g	Soft Knob-2 Global			see Soft Knob List
C114	g	Soft Knob-1 Midi	0..127		

No.	Class	Name	Range	Value	Text
C115	g	Soft Knob-2 Midi	0..127		
C116	g	Expert Mode	0..2		0:0ff 1:On 2:All
C117	g	Knob Mode	0..5		0:Off 1:Jump 2:Snap 3:Relative (...)
C118	g	Memory Protect	0..1		0:0ff 1:On 2:Warn
C120	g	Soft Thru	0..1		0:0ff 1:On
C121	g	Panel Destination	0..2		0:Internal 1:Int+Midi 2:Midi
C122	g	Play Mode	0..2		0:Single 1:MultiSingle 2:Multi
C123	g	Part Number	0..15;40		0..15:Multi Part 1..16; 40:Single Buffer
C124	g	Global Channel	0..15	1..16	
C125	g	Led Mode	0..2		0:Lfo 1:Input 2:Auto ..
C126	g	LCD Contrast	0..127		
C127	g	Master Volume	0..127		

## MULTI DUMP TABLE

NO	REF	NAME	RANGE	VALUE	TEXT
0..3		Internal			
4..13		Multi Name Characters 1..10	32..127	ASCII	
14		Internal			
15		Multi Clock Tempo	0..127	63..190 BPM	
16		Multi Delay Mode	0..1	0:Off 1:On	
17		Multi Delay Time	0..127		
18		Multi Delay Feedback	0..127		
19		Multi Delay Rate	0..127		
20		Multi Delay Depth	0..127		
21		Multi Delay Shape	0..5		0:Sine 1:Tri 2:Saw 3:Square 4:S&H 5:S&G
22		Multi Delay Output Select	0..127		0:Out1L 1:Out1L+R 2:Out1R ..
23		Multi Delay Clock	0..16		Off, 1/64..3/4
24		Multi Delay Color	0..127	-64..+63	
25..31		Internal			
32..47	Part 1..16	Bank Number	0..1		
48..63	Part 1..16	Program Number	0..127		
64..79	Part 1..16	Midi Channel	0..15	1..16	
80..95	Part 1..16	Low Key	0..127	C-1..G9	
96..111	Part 1..16	High Key	0..127	C-1..G9	
112..127	Part 1..16	Transpose	0..127	-64..+63	

NO	REF	NAME	RANGE	VALUE	TEXT
128..1 43	Part 1..16	Detune	0..127	-64..+63	
144..1 59	Part 1..16	Part Volume	0..127	-64..+63;	0=Unity Gain
160..1 75	Part 1..16	Midi Volume Init	0..127	Off, 1..127	
176..1 91	Part 1..16	Output Select	0..14		0:Out1L 1:Out1L+R 2:Out1R ..
192..2 07	Part 1..16	Effect Send	0..127		
208..2 39		Internal			
240..2 55		Part State		Part 1..16	Bitfield (see Part State Bitfield)



NO	REF	NAME	RANGE	VALUE	TEXT
Part State Bitfield:					
Bit 0		Part Enable			0:Off 1:On
Bit 1		Part Midi Volume Enable			0:Off 1:On
Bit 2		Part Hold Pedal Enable			0:Off 1:On
Bit 3		Keyb To Midi			0:Off 1:On
Bit 4		Internal			
Bit 5		Note Steal Priority			0:Low 1:High
Bit 6		Part Prog Change Enable			0:Off 1:On

■ *All bytes are shown in decimal representation.*

## CLASSES

### CLASSES

**P: PERFORMANCE CONTROLLER** Accessible by Control message. Performance Controllers are not stored with a Single-Sound. If more than one Multi Part is set to the same MIDI channel, all Parts on this MIDI channel receive the same Performance Controllers.

**A: SOUND PARAMETER OF BANK A** Accessible by Control message, SysEx-Parameterchange and Single-Dump. The Sound Parameters are stored with a Single Sound. When received as Control Message, the Sound

Parameter is received only by the Multi Part with the lowest part number, if more than one Multi Part is set to the same MIDI channel. When received as SysEx-Parameterchange or Single-Dump, the part is addressed by the part number irrespective of the actual MIDI channel setting.

### KCB: SOUND PARAMETER OF BANK B

Accessible by MIDI Polyphonic Pressure, SysEx-Parameterchange and Single-Dump. The Sound Parameters are stored with a Single Sound. When received as Polyphonic Pressure, the Sound Parameter is received only by the Multi Part with the lowest part number, if more than one Multi Part is set to the same MIDI channel. When received as SysEx-Parameterchange or Single-Dump, the part is addressed by the part number irrespective of the actual MIDI channel setting.

**M: MULTI PARAMETER** Accessible by SysEx-Parameterchange and Multi-Dump. The Multi Parameters are stored with a Multi Patch.

**MS: MULTI/SINGLE PARAMETER** When in Single Mode, the parameter is received and stored with the Single Sound. When in Multi Mode, the parameter is received and stored with the Multi Patch. In Multi Mode the Single Sound settings are ignored while the corresponding Multi Patch settings are active.

**NP: NON-PART-SENSITIVE SOUND PARAMETER** When in Multi Mode, the parameter affects all Multi Parts.

**BPC: BANK/PROGRAM-CHANGE PARAMETER BANK SELECT** selects the Single bank accessed by a subsequent Program Change, similar to the regular Bank Select. Bank Change directly changes the Single program to the requested bank, without changing the program number. Program Change directly changes the Single program to the requested program number, without changing the bank number; similar to the regular Program Change. Part number \$40 will address the Single buffer in Single Mode.

**G: GLOBAL PARAMETER** The Global Parameters are independent of Single Sounds or Multi Patches and non-part sensitive.

**VB: VIRUS C PARAMETER** These parameters are only available on VIRUS C and VIRUS kc/indigo in Version 3.0 and followers. VIRUS C parameter changes are ignored by VIRUS a

■ *On non-part-sensitive parameters the part number is ignored, but must still be sent as any value.*

■ *The VIRUS can be switched between Multi Mode and Single Mode by parameter C123 Part Number.*

■ *Remarks for editor/librarian programs Not all 256 bytes of a Single or Multi Dump are defined as a parameter. Some of them are defined for internal use or reserved for future applications. In a bulk dump these byte should not be changed, they should be sent to the VIRUS on the same value as they were received in the dump.*

■ *One of the internal parameter (Page A #0) is the Sound Version Number. On future VIRUS system updates new parameters will be defined. When the VIRUS receives an older sound, the new parameters will be set to default values in the edit buffer and the version number will be updated automatically. The VIRUS update algorithm can be used from outside just by sending a dump and requesting it back. To prevent incompatibilities and confusion, the Sound Version Number should not be changed by any other device than the VIRUS itself. When sounds are imported into a software library, they should be automatically pathed through the VIRUS first, before allowing a change of parameters. Otherwise the VIRUS might reset new parameters, when the sound is loaded into the VIRUS, after editing parameters.*

## ■ MOD MATRIX SOURCES

---

All sources of the SOFT KNOBS-1/2

Off	PitchBnd	ChanPres	ModWheel	Breath
Contr3	Foot	Data	Balance	Contr 9
Express	Contr 12	Contr 13	Contr 14	Contr 15
Contr 16	HoldPed	PortaSw	SostPed	AmpEnv
FiltEnv	Lfo 1	Lfo 2	Lfo 3	VeloOn
VeloOff	KeyFlw	Random		



## MOD MATRIX DESTINATIONS

All destinations of the Modulation Matrix

Off	PatchVol	ChannelVol	Panorama	Transpose	Portamento
Osc1Shape	Osc1PlsWdh	Osc1WavSel	Osc1Pitch	Osc1Keyflw	Osc2Shape
Osc2PlsWdh	Osc2WavSel	Osc2Pitch	Osc2Detune	Osc2FmAmt	Osc2EnvAmt
FmEnvAmt	Osc2Keyflw	OscBalance	SubOscVol	OscMainVol	NoiseVol
Cutoff	Cutoff2	Filt1Reso	Filt2Reso	Flt1EnvAmt	Flt2EnvAmt
Flt1Keyflw	Flt2Keyflw	FltBalance	FltAttack	FltDecay	FltSustain
FltSusTime	FltRelease	AmpAttack	AmpDecay	AmpSustain	AmpSusTime
AmpRelease	Lfo1Rate	Lfo1Cont	Lfo1>Osc1	Lfo1>Osc2	Lfo1>PlsWd
Lfo1>Reso	Lfo1>FltGn	Lfo2Rate	Lfo2Cont	Lfo2>Shape	Lfo2>Fm
Lfo2>Cut1	Lfo2>Cut2	Lfo2>Pan	Lfo3Rate	Lfo3OscAmt	UniDetune
UniSpread	UniLfoPhs	ChorusMix	ChorusRate	ChorusDpth	ChorusDly
ChorusFeed	EffectSend	DelayTime	DelayFeed	DelayRate	DelayDepth
Osc1ShpVel	Osc2ShpVel	PlsWhdVel	FmAmtVel	Flt1EnvVel	Flt2EnvVel
Reso1Vel	Reso2Vel	AmpVel	PanVel	Ass1Amt1	Ass2Amt1
Ass2Amt2	Ass3Amt1	Ass3Amt2	Ass3Amt3	OscInnitPhs	PunchInt
RingMod	NoiseColor	DelayColor	ABoostInt	ABoostTune	DistInt
RingmodMix	Osc3Volume	Osc3Semi	Osc3Detune	Lfo1AssAmt	Lfo2AssAmt
PhaserMix	PhaserRate	PhaserDept	PhaserFreq	PhaserFdbk	PhaserSprd
RevbDecay	RevDamping	RevbColor	RevPredely	RevFeedbck	SecBalance
ArpNoteLen	ArpSwing	ArpPattern	EqMidGain	EqMidFreq	EqMidQFactor
Assign4Amt	Assign5Amt	Assign6Amt			

## ■ SOFT KNOB DESTINATIONS

All destinations of the SOFT KNOBS-1/2

Off	ModWheel	Breath	Contr3	Foot
Data	Balance	Contr9	Expression	Contr12
Contr13	Contr14	Contr15	Contr16	PatchVolume
ChannelVolume	Panorama	Transpose	Portamento	UnisonDetune
UnisonPanSprd	UnisonLfoPhase	ChorusMix	ChorusRate	ChorusDepth
ChorusDelay	ChorusFeedback	EffectSend	DelayTime(ms)	DelayFeedback
DelayRate	DelayDepth	Osc1WavSelect	Osc1PulseWidth	Osc1Semitone
Osc1Keyfollow	Osc2WavSelect	Osc2PulseWidth	Osc2EnvAmount	FmEnvAmount
Osc2Keyfollow	NoiseVolume	Filt1Resonance	Filt2Resonance	Filt1EnvAmount
Filt2EnvAmount	Filt1Keyfollow	Filt2Keyfollow	Lfo1Symmetry	Lfo1>Osc1
Lfo1>Osc2	Lfo1>PulsWidth	Lfo1>Resonance	Lfo1>FiltGain	Lfo2Symmetry
Lfo2>Shape	Lfo2>FmAmount	Lfo2>Cutoff1	Lfo2>Cutoff2	Lfo2>Panorama
Lfo3Rate	Lfo3OscAmount	Osc1ShapeVel	Osc2ShapeVel	PulsWidthVel
FmAmountVel	Filt1EnvVel	Filt2EnvVel	Resonance1Vel	Resonance2Vel
AmplifierVel	PanoramaVel	Assign1Amt1	Assign2Amt1	Assign2Amt2
Assign3Amt1	Assign3Amt2	Assign3Amt3	ClockTempo	InputThru
Osc1nitPhase	PunchIntensity	Ringmodulator	NoiseColor	DelayColor
AnalogBoostInt	AnalogBstTune	DistortionInt	RingModMix	Osc3Volume
Osc3Semitone	Osc3Detune	Lfo1AssignAmt	Lfo2AssignAmt	PhaserMix
PhaserRate	PhaserDepth	PhaserFrequenc	PhaserFeedback	PhaserSpread
RevDecayTime	ReverbDamping	ReverbColor	ReverbFeedback	SecondBalance
ArpMode	ArpPattern	ArpClock	ArpNoteLength	ArpSwing
ArpOctaves	ArpHold	EqMidGain	EqMidFreq	EqMidQFactor
Assign4Amt	Assign5Amt	Assign6Amt		

# MIDI IMPLEMENTATION CHART

Function		Transmitted	Recognized	Remarks
Basic Channel	Default Changed	1 1-16	1 1-16	
Mode	Default Messages Altered	X X *****	X X X	
Number	Note True Voice	0-127 *****	0-127 0-127	
Velocity	Note ON Note OFF	0 X	0 X	
After-Touch	Key's Ch's	X X	X 0	
Pitch Bender		X	0	14-Bit
Control Change*		1 0 2 0 5 0 7 0 10 0 32 0 64 0	0 0 0 0 0 0 0	Modwheel Breath Control Portamento Time Volume Panorama Bank Select Sustain
Prog Change	True # .	0 *****	0 0-127	
System Exclusive		0	0	
System Common	:Song Pos :Song Sel :Tune .	0 X X	X X X	
System Realtime	:Clock :Commands	X X	X X	Start, Stop Continue
Aux- Mes- Sages	:Local ON/OFF :All NotesOff : ActiveSense Reset	X X X X	X 0 0 X	
<p>* Note: See MIDI Controller Assignments for more Information.            Mode 1: OMNI ON, POLY      Mode 2: OMNI ON, MONO      0 : Yes            Mode 3: OMNI OFF, POLY      Mode 4: OMNI OFF, MONO      X : No</p>				

## ■ FCC INFORMATION (U.S.A)

---

**IMPORTANT NOTICE:** DO NOT MODIFY THIS UNIT! This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by ACCESS MUSIC ELECTRONICS may void your authority, granted by the FCC, to use this product.

**IMPORTANT:** When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product **MUST** be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorisation to use this product in the USA.

**NOTE:** This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class „B“ digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in residential environment will not result in harmful interference with other electronic devices. This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the user manual, may cause interference harmful to the operation of other electronic devices, Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit „OFF“ and „ON“, please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilise power outlets that are on branch (Circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to coaxial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorised to distribute this type of product.

The statements above apply **ONLY** to products distributed in the USA.



## ■ FCC INFORMATION (CANADA)

---

The digital section of this apparatus does not exceed the „Class B“ limits for radio noise emissions from digital apparatus set out in the radio interference regulation of the Canadian Department of Communications.

Le present appareil numerique n'emet pas de bruit radioelectriques depassant les limites applicables aux appareils numerique de la „Class B“ prescrites dans la reglement sur le brouillage radioelectrique edicte par le Ministre Des Communication du Canada.

This only applies to products distributed in Canada.

Ceci ne s'applique qu'aux produits distribues dans Canada.

## ■ OTHER STANDARDS (REST OF WORLD)

---

This product complies with the radio frequency interference requirements of the Council Directive 89/336/EC.

Cet appareil est conforme aux prescriptions de la directive communautaire 89/336/EC.

Dette apparat overholder det gaeldenda EF-direktiv vedrorendareadiostoj.

Diese Geräte entsprechen der EG-Richtlinie 89/336/EC.

## ■ DECLARATION OF CONFORMITY

---

### EG-KONFORMITÄTSERKLÄRUNG

Für das folgend bezeichnete Erzeugnis/ For the following named product

**ACCESS VIRUS SYNTHESIZER**

**MODEL C / KC / INDIGO**

Wird hiermit bestätigt, daß es den Schutzanforderungen entspricht, die in der Richtlinie 89/336/FWG des Rates zur Angleichung der Rechtsvorschriften der Mitgliedstaaten über die elektromagnetische Verträglichkeit festgelegt sind; außerdem entspricht es den Vorschriften des Gesetzes über die elektromagnetische Verträglichkeit von Geräten (EMVG) vom 30. August 1995.

Will hereby declared that it conforms to the requirements of the Council Directive 89/336/FWG for radio frequency interference. It also complies with the regulations about radio interference of electronic devices dated on August 30<sup>th</sup>, 1995.

Zur Beurteilung des Erzeugnisses hinsichtlich der elektromagnetischen Verträglichkeit wurden folgende harmonisierte Normen herangezogen:

The following standards have been used to declare conformity:


EM 50 082-1 : 1992 , EN 50 081-1 : 1992 , EN 60065 : 1993

Diese Erklärung wird verantwortlich für den Hersteller abgegeben:

This declaration has been given responsibly to the manufacturer:

Access Music Electronics GmbH  
Am Stadion 10  
45659 Recklinghausen  
Germany

Recklinghausen, 1.2.2002



Guido Kirsch, Geschäftsführer  
Guido Kirsch, Managing Director



Christoph Kemper, Geschäftsführer  
Christoph Kemper Managing Director

## ■ GARANTIE BESTIMMUNG

---

access Music Electronics leistet Garantie für alle nachweisbaren Material- und Fertigungsfehler für eine Dauer von 24 Monaten ab Verkauf oder Aushändigung an den Endverbraucher.

Von der Garantie ausgenommen sind alle Schäden, die durch falsche oder unsachgemäße Bedienung, durch falsche Verbindungen mit anderen Geräten oder durch nicht bestimmungsgemäße Verwendung des Gerätes entstehen.

Außerdem erlischt jeder Garantieanspruch bei Fremdeingriffen oder eigenmächtigen Änderungen am Gerät.

Voraussetzung für die Garantieleistung ist die Rücksendung der ausgefüllten Garantiekarte mit Serien-Nr., Verkaufsdatum, Firmenstempel, Unterschrift des autorisierten Fachhändlers, Name und Anschrift des Käufers sowie eine Kopie des Kaufbelegs.

Wenn Defekte innerhalb der Garantiezeit auftreten sollten, senden Sie das Gerät nach vorheriger Absprache an:

**TSI GMBH**  
**SCHLOß AHRENTHAL**  
**53489 SINZIG**  
**GERMANY**  
**TEL: ++49-2642-9940-0**  
**FAX: ++49-2642-9940-77**  
**INFO@ACCESS-MUSIC.DE**

Ferner müssen folgende Voraussetzungen erfüllt sein:

- Das Gerät befindet sich in der Originalverpackung oder zumindest gleichwertiger Verpackung.

- Dem Gerät liegt eine genaue Fehlerbeschreibung und eine Kopie des Kaufbelegs bei.

## ■ WARRANTY

---

The access music electronics warranty covers all defects in material and workmanship for a period of six months from the date of original purchase.

This warranty does not cover defects due to abuse, faulty connections or operation under other than specified conditions.

Warranty coverage is also voided when the device is repaired by unauthorized persons or tampered with in any way.

To ensure the warranty is valid, fill out the warranty card completely, including serial no., date of sale, company stamp, signature of the authorized dealer, as well as your name and address and return it to the address given below.

If a defect occurs during the warranty period, contact the following address before sending the device:

**TSI GMBH**  
**SCHLOß AHRENTHAL**  
**53489 SINZIG**  
**GERMANY**  
**TEL: ++49-2642-9940-0**  
**FAX: ++49-2642-9940-77**  
**INFO@ACCESS-MUSIC.DE**

The following stipulations also apply:

- Ensure the unit is sent in its original package or one of equal quality.
- Include a detailed description of the defect and a copy of the purchase receipt.







# Index

# Index

---

## A

ADAPTIVE CONTROL SMOOTHING 98, 143  
AFTERTOUCHE 128  
AMPLIFIER 17  
AMPLIFIER ENVELOPE 17  
ANALOG BOOST 92  
ANALOG BOOST INTENSITY 92  
ANALOG BOOST TUNE 92  
ANALOG INPUTS 100  
ARPEGGIATOR 156  
ARPEGGIATOR CLOCK 81  
ARPEGGIATOR GLOBAL 121  
ARPEGGIATOR HOLD 81  
ARPEGGIATOR MODE 80  
ARPEGGIATOR NOTE LENGTH 80  
ARPEGGIATOR OCTAVE 80  
ARPEGGIATOR PATTERN 80  
ARPEGGIATOR SEND 120  
ARPEGGIATOR SWING 80  
ARRANGEMENT DUMP 118, 145  
ASSIGN 48, 76, 156  
ATTACK 17, 64, 69  
AUDIO INPUTS 53  
AUDIO OUTPUTS 54  
AUDIO ROUTING 54, 148  
AUDITION SOUNDS 55  
AUX BUSES 54

---

## B

BAND PASS 19  
BAND STOP 19  
BANK CHANGE 158  
BITREDUCER 36

---

## C

CATEGORIES 52, 106  
CHANNEL VOLUME 155  
CHORUS 37, 83  
CHORUS DELAY 83  
CHORUS DEPTH 83  
CHORUS DIR/EFF 83  
CHORUS FEEDBACK 84  
CHORUS RATE 83  
CHORUS SHAPE 84  
CLOCK RECEIVE 120  
CLOCK RX 44, 120  
COMPARE 47  
CONNECTIONS 14  
CUTOFF 22

---

## D

DATA ENTRY 44  
DECAY 17, 64, 69  
DELAY 38, 85  
DELAY CLOCK 88  
DELAY COLOR 89  
DELAY DEPTH 89  
DELAY EFFECT SEND 86  
DELAY FEEDBACK 87  
DELAY GLOBAL 122  
DELAY MODE 87  
DELAY OUTPUT SELECT 89  
DELAY RATE 89  
DELAY SEND 149  
DELAY SHAPE 89  
DELAY TIME 86  
DETUNE 28, 110  
DEVICE ID 121  
DISPLAY CONTRAST 123  
DISPLAY OF VALUES 46  
DISTORTION 36, 82  
DISTORTION CURVE 82  
DISTORTION INTENSITY 82

---

**E**

EDIT BUFFER 43  
 EDIT MENU 45  
 EFFECT 150  
 EFFECT SECTION 52  
 EFFECT SEND 150  
 ENVELOPE 17  
 ENVELOPE FOLLOWER 102, 150  
 ENVELOPE MODE 32  
 ENVELOPE POLARITY 67  
 EQUALIZER 92  
 EXPRESSION CONTROLLER 157

---

**F**

FILTER 18, 21, 22, 153  
 FILTER BALANCE 22, 23, 63, 153  
 FILTER CUTOFF 63  
 FILTER CUTOFF LINK 67  
 FILTER ENV AMOUNT 63  
 FILTER ENVELOPE 64  
 FILTER GAIN 155  
 FILTER HÜLLKURVE 19  
 FILTER KEY FOLLOW 66  
 FILTER KEYFOLLOW BASE 67  
 FILTER MODE 64  
 FILTER MODE SERIAL 6 22  
 FILTER RESONANCE 63  
 FILTER ROUTING 22, 24, 30, 66  
 FILTER SELECT 64  
 FILTER SPLIT 24, 30, 153  
 FM 28, 152  
 FM AMOUNT 28  
 FORCE TO EDIT BUFFER 118  
 FREQUENCY MODULATION 28

---

**G**

GARANTIE BESTIMMUNGEN 189  
 GLIDE 97  
 GLOBAL CHANNEL 115, 119, 129

---

**H**

HIGH KEY 112, 115, 129  
 HIGH PAGE 121  
 HIGH PASS 19  
 HOLD PEDAL 112

---

**I**

INPUT 116  
 INPUT BOOST 116  
 INPUT DIRECT THRU 116  
 INPUT GAIN 117  
 INPUT LEVEL INDICATOR 53, 149  
 INPUT MODE 100  
 IRELATIV 46  
 ISNAP 46

---

**K**

KEY FOLLOW 20  
 KEY MODE 97  
 KEYBOARD 127  
 KEYBOARD MODE 115  
 KEYBOARD PARAMETERS 114  
 KEYPAGE 112  
 KNOB MODE 46, 123

---

**L**

LC-DISPLAY 123  
 LFO 30, 33  
 LFO AMOUNT 71, 72  
 LFO CLOCK 73, 74, 76  
 LFO CONTOUR 73, 75  
 LFO ENVELOPE MODE 73, 74, 154  
 LFO FADE IN 76  
 LFO FILTER GAIN 71  
 LFO KEY FOLLOW 76  
 LFO KEYFOLLOW 74, 75  
 LFO MODE 73, 74, 76, 154  
 LFO RATE 30, 71  
 LFO SELECT 71

LFO TRIGGER 155  
LFO TRIGGER PHASE 74, 75, 154  
LOCAL OFF 114, 126  
LOW KEY 112, 115, 129  
LOW PAGE 121  
LOW PASS 19

---

## M

MASTER CLOCK 44  
MASTER TUNE 121  
MASTER VOLUME 15  
MEMORY PROTECT 122  
MIDI 121, 157  
MIDI CHANNEL 111  
MIDI CLOCK 44  
MIDI DUMP RX 118, 157  
MIDI DUMP TX 117, 145  
MIDI IMPLEMENTATION CHART 185  
MIDI PARAMETER 117  
MIDI VOLUME 112  
MIDI VOLUME ENABLE 120  
MIXER 70  
MOD MATRIX DESTINATIONS 183  
MOD MATRIX SOURCES 182  
MODULATION 19  
MODULATION MATRIX 48  
MODWHEEL 115  
MULTI CHANNEL 115, 129  
MULTI MODE 42, 140  
MULTI PROGRAM CHANGE ENABLE 120  
MULTI SINGLE MODE 42, 148

---

## N

NOISE COLOR 62  
NOISE VOLUME 70

---

## O

ONE CHANNEL 115, 129  
OPERATING MODE 42  
OPERATING SYSTEM UPDATES 158  
OSC BALANCE 70

OSC DETUNE 58, 62  
OSC FILT ENV -> FM 61  
OSC FILT ENV -> PITCH 60  
OSC FM AMOUNT 59  
OSC FM MODE 60  
OSC KEY FOLLOW 59, 60  
OSC MODE 61  
OSC PHASE INIT 62  
OSC SEMITONE 58, 62  
OSC SYNC 58  
OSC VOLUME 61, 70, 149, 153  
OSC WAVE SELECT/PW 58  
OSC WAVESELECT 62  
OSC WAVESHAPE 58, 59, 60  
OSCILLATOR 25, 27, 29, 152  
OSCILLATOR BALANCE 27  
OSCILLATOR SYNC 152  
OSCILLATOR VOLUME 21  
OUTPUT SELECT 54, 110, 150

---

## P

PANEL DESTINATION 119  
PANIC FUNCTION 55  
PANORAMA 34, 97  
PARALLEL-4 24  
PARAMETER BUTTON 45  
PARAMETER CONTROL VIA MIDI 140  
PARAMETER SELECTION 44  
PART 42  
PART ENABLE 111  
PART VOLUME 110  
PATCH VOLUME 34, 96  
PEDAL 1/2 116  
PHASER 37, 84  
PHASER DEPTH 85  
PHASER DIR/EFF 84  
PHASER FEEDBACK 84  
PHASER FREQUENCY 85  
PHASER RATE 84  
PHASER SPREAD 85  
PHASER STAGES 85  
PITCH BENDER SCALE 98  
PITCHBENDER 98  
PRESSURE SENSITIVITY 116

PRIORITY 111, 158  
 PROGRAM CHANGE ENABLE 113, 120  
 PULSE WIDTH 27, 151  
 PUNCH INTENSITY 100

---

## R

RANDOM AMOUNT 114  
 RANDOM PATCH GENERATOR 50  
 RATEREDUCER 37  
 RECTIFIER 36  
 RELEASE 18, 64, 69  
 RESET FUNCTION 55  
 REVERB 38, 85, 122  
 REVERB CLOCK 91  
 REVERB COLOR 90  
 REVERB DAMPING 87  
 REVERB DECAY TIME 87  
 REVERB EFFECT SEND 86  
 REVERB FEEDBACK 91  
 REVERB MODE 87  
 REVERB OUTPUT SELECT 91  
 REVERB PREDELAY 90  
 REVERB SEND 149  
 REVERB TYPE 90  
 RINGMODULATOR 29, 70, 102

---

## S

SAMPLE&GLIDE 32  
 SAMPLE&HOLD 32  
 SATURATION 21, 153  
 SATURATION CURVE 65  
 SECOND OUTPUT 103, 150  
 SELECT 22  
 SELECT BANK 110  
 SELECT BUTTON 22  
 SELECT NUMBER 110  
 SEMITONE 28  
 SEQUENCER 140  
 SERIAL-4 24  
 SERIAL-6 24  
 SINGLE MODE 42  
 SMOOTH MODE 98

SOFT KNOBS 33, 48, 106, 156, 182, 184  
 SOFT THRU 119  
 SOFTWARE UPDATES 160  
 SOUNDSDIVER 38  
 STORE 47  
 SUB OSC VOLUME 70  
 SUB OSCILLATOR 29  
 SURROUND 103  
 SURROUND BALANCE 103  
 SURROUND SELECT 103  
 SUSTAIN 17, 64, 69  
 SYNC 28  
 SYSEX IMPLEMENTATION 162  
 SYSEX PARAMETER CHANGE 163  
 SYSEX PARAMETER DESCRIPTION 166  
 SYSTEM MENU 114  
 SYSTEM PARAMETERS 121

---

## T

TIME 65, 67, 68, 69  
 TRANSPOSE 97, 110, 115, 128  
 TRANSPOSE BUTTON 115  
 TRIANGULAR ICON 46

---

## U

UNDO 48  
 UNISON DETUNE 99  
 UNISON LFO PHASE 99  
 UNISON MODE 35, 99  
 UNISON PAN SPREAD 99

---

## V

VALUE BUTTON 45, 148  
 VALUE KNOB 45  
 VELOCITY 34, 104  
 VERIFY 119  
 VOCODER 132, 137, 156  
 VOCODER CARRIER BANK 133  
 VOCODER MODULATOR BANK 133  
 VOLUME 34, 110

---

**W**

WARRANTY 190

